山折

谷折

BOCCO QUICK START GUIDE

What's in the box?

Motion sensor　2x AAA batteries　Adhesive tape

Strap

AC adapter

BOCCO main unit
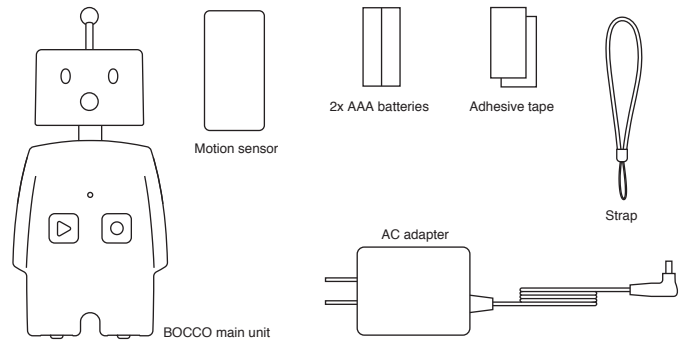
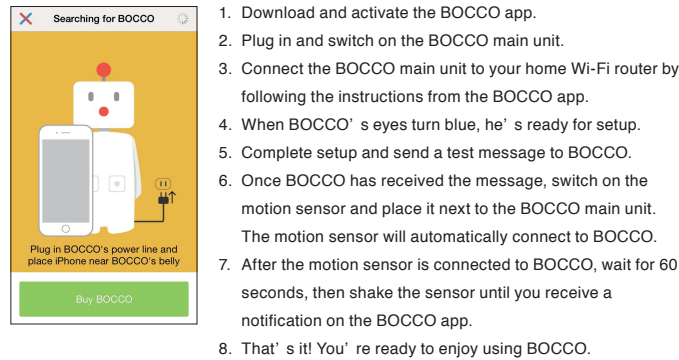An iPhone, iPad or Android phone and Wi-Fi access point are required for using BOCCO.

Download the App

Please search for "BOCCO" in the App Store or Google Play to download the latest version of the BOCCO app.

OS Compatibility	iOS 8 or later
	Android 4.4
Device Compatibility	iPhone 5 / iPad Retina or later
	Nexus 5 / Galaxy S6 / Xperia Z4

First-time setup

Searching for BOCCO

Plug in BOCCO's power line and place iPhone near BOCCO's belly

Run BOCCO

1. Download and activate the BOCCO app.
2. Plug in and switch on the BOCCO main unit.
3. Connect the BOCCO main unit to your home Wi-Fi router by following the instructions from the BOCCO app.
4. When BOCCO's eyes turn blue, he's ready for setup.
5. Complete setup and send a test message to BOCCO.
6. Once BOCCO has received the message, switch on the motion sensor and place it next to the BOCCO main unit. The motion sensor will automatically connect to BOCCO.
7. After the motion sensor is connected to BOCCO, wait for 60 seconds, then shake the sensor until you receive a notification on the BOCCO app.
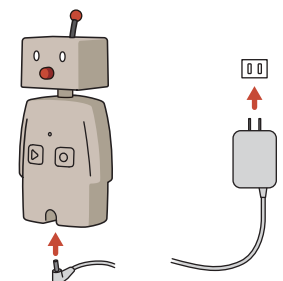8. That's it! You're ready to enjoy using BOCCO.

* You can find the PIN number for setup on the underside of BOCCO's foot.

## How to switch on and off

BOCCO main unit

Plug the AC adaptor into the jack on the back of the BOCCO main unit, then plug the other end into an outlet. Once plugged in to a power supply, BOCCO will boot up automatically. This may take a few minutes. When setup has been completed, BOCCO will make a start-up chime and his eyes will cease blinking.

* Never disconnect the AC adapter while BOCCO is booting up. Doing so may cause the main unit to become defective.
* When restarting BOCCO, disconnect the AC adapter and wait 10 seconds before plugging it back in.
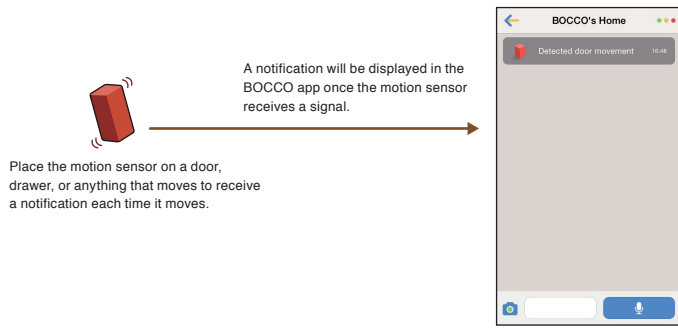
Motion sensor
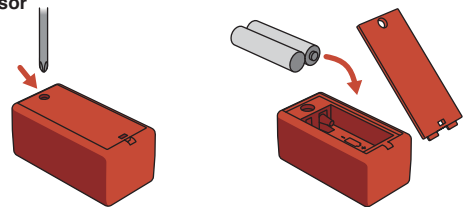
Use a cross slot screwdriver to loosen the screw on the reverse side of the motion sensor and insert the provided AAA batteries. The sensor will boot up automatically. The AAA batteries are provided for first-time setup; replacement batteries may be required for prolonged use.
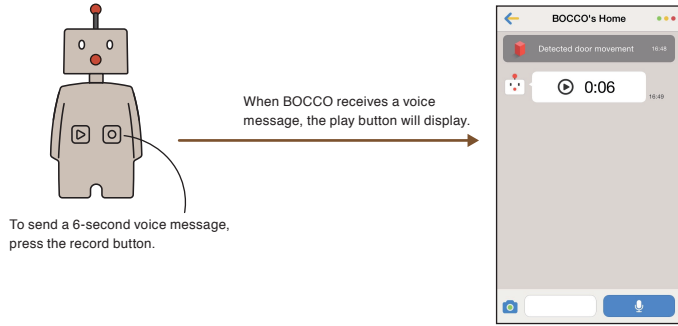
* Boot up the motion sensor after completing the first-time setup of the BOCCO main unit. If the sensor does not connect to the BOCCO main unit, reboot it next to the BOCCO main unit.
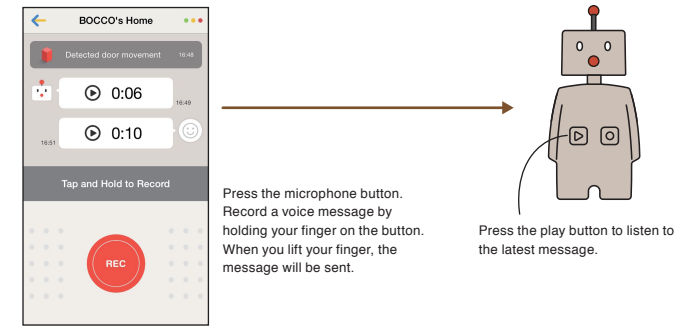
BOCCO Key features
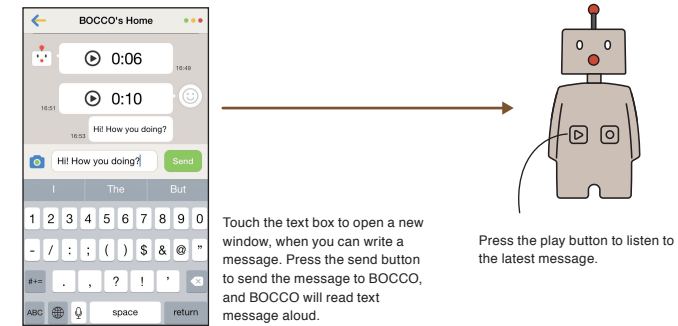
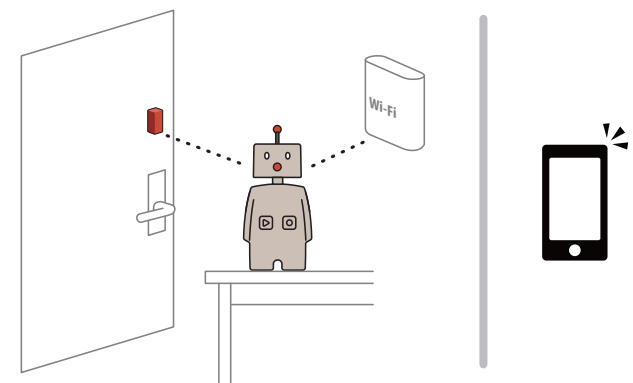### Receive a notification from the motion sensor

A notification will be displayed in the BOCCO app once the motion sensor receives a signal.

Place the motion sensor on a door, drawer, or anything that moves to receive a notification each time it moves.

Send a voice message from BOCCO

When BOCCO receives a voice message, the play button will display.

To send a 6-second voice message, press the record button.

Send a voice message from the BOCCO app

Press the microphone button. Record a voice message by holding your finger on the button. When you lift your finger, the message will be sent.

Press the play button to listen to the latest message.

Send a text message from the BOCCO app

Touch the text box to open a new window, when you can write a message. Press the send button to send the message to BOCCO, and BOCCO will read text message aloud.

Press the play button to listen to the latest message.
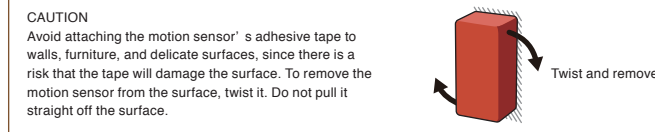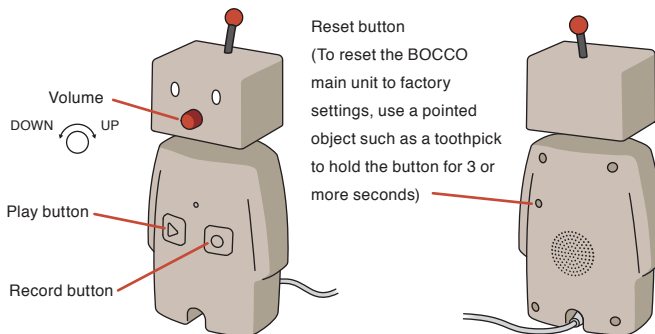
Installation location

BOCCO main unit

Place the BOCCO main unit until in a location where the Wi-Fi signal is strong. Avoid areas with weak signals or interference from other devices or appliances.

Motion sensor

BOCCO will send a message to the BOCCO app when the motion sensor detects motions. Place the motion sensor in the desired location of detection, such as on a door or drawer. To install the motion sensor, use the included adhesive tape or the strap. The motion sensor has an operating range of 33ft (10m), but obstructions such as walls or appliances may reduce this. Please ensure the motion sensor is within the operating range of the BOCCO main unit.

CAUTION
Avoid attaching the motion sensor's adhesive tape to walls, furniture, and delicate surfaces, since there is a risk that the tape will damage the surface. To remove the motion sensor from the surface, twist it. Do not pull it straight off the surface.

Twist and remove

Butttons

Volume

DOWN　UP

Play button

Record button

Reset button
(To reset the BOCCO main unit to factory settings, use a pointed object such as a toothpick to hold the button for 3 or more seconds)

* If there is no sound, please check the volume.

Specifications

BOCCO main unit	
Product dimensions	W90mm x D55mm x H195mm
Item weight	220g
Wi-Fi	IEEE 802.11 b/g
Bluetooth	Bluetooth Low Energy
Power source type	100-240V AC Adaptor Type A (US/Japan)
Voice synthesis	VOICETEXT

Motion sensor	
Product dimensions	W34mm x D30mm x H68mm
Item weight	30g (without batteries)
Bluetooth	Bluetooth Low Energy
Sensor	Acceleration sensor
Power supply	2x AAA batteries
Battery lifetime	Approximately 1 year (light or regular use)

Signals from BOCCO

LED color	Status (functioning normally)
⚪⚫	During boot-up
🔵	During the first-time setup
⚪	When receiving a message
🟢	Now playing
🔴	Now recording
🟡	Now sensing
🟢🟡	Now updating the firmware

LED color	Status (error)
🟡⚫	Disconnecting BOCCO from the Wi-Fi network
	Place BOCCO within range of the Wi-Fi router and reset the BOCCO main unit.
🔴⚫	No Internet connection
	Please use another device to ensure your Wi-Fi router is connected to the Internet, then restart the BOCCO main unit.
🔴🟡	Failed to update firmware
	Restart the BOCCO main unit. The firmware will be updated automatically, which might take several minutes. Please do not switch off or restart the BOCCO main unit until the update has completed.

CAUTION / WARNING

- Replace the batteries in the motion sensor after 1 year of usage. There is risk of leakage if the battery is not replaced.
- Use of the adhesive tape is at your own risk. Do not attach adhesive tape to a sensitive or valuable surface. The manufacturer will bear no responsibility for any damage caused by usage of the included adhesive tape.
- Do not or remodel or embellish this product.
- To clean the BOCCO main unit and motion sensor, use a moist cloth and soap or other neutral detergent. Do not use organic solvents such as alcohol, thinner, or polishing material.
- Use between 30˚F to 100˚F (0˚C to 40˚C)
- Do not use in a sauna or very humid room.
- Do not use near to water. None of the included contents are waterproof.
- Do not leave in direct sunlight for an extended period of time.
- Do not use near to fire.
- Do not drop, throw, or step on.
- Do not pull, twist, or use excessive force on movable parts.
- Damage may occur to the internal motors if the BOCCO main unit is used in a tipped-over position. Please use the BOCCO main unit in an upright position, standing on its feet.
- Do not compress the BOCCO main unit while it is switched on.
- Place the BOCCO main unit in a flat and stable place to reduce the risk of it falling.
- Keep the BOCCO main unit and AC adapter out of reach of pets.
- Do not disconnect the AC adapter while the BOCCO main unit is booting up.
- Use only with the included AC adapter. Never attempt to use a third party adapter.

FCC CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Help

If you have any questions, please email us.

✉ support-en@bocco.me

Main unit
　FCC ID : 2AFXT-RB002-W
　FCC ID : 2AFXT-RB002-B
Sensor
　FCC ID : 2AFXT-RB002

RB002-QR1 Rev.01 2015.10