Instruction Manual YIN-00228 Flat Size 270 x 130 mm Fold Size 90 x 130 mm 20151102

Important Safety Instructions

- Please read all operating instructions and safety warmnings carfeully before installation and use. Always follow basic safety procautions to reduce or avoid any risk of fire, electric shock and possible personal injuries.
- Do not use this product near water, suck as any wet locations, filled containers or anywhere else where moisture is present. Dry location use only.
- Do not use any chemicals for cleaning. Clean with a soft dry cloth.
- Do not dispose or in fire or water, tamper, incinerate or directly short circuit.
- Do not place the product near any heat sources, such as heaters, radicators, stoves or other appliances that produce heat.
- \bullet Unplug this product during a lightning storm or when left unused for a long period or time.
- Do not exceed the specification in use.
- Never attempt to disassemble or reassemble.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, p ble protection agains

- · Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


· Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Capdase International Limited may void the FCC authorization to operate this device.

Note: ence caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment

POSH Ultra Slim Stereo Bluetooth Speaker

User Manual

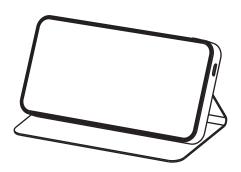

CAPDASE

www.capdase.com


Made in P.R.C.

CONTENTS

POSH Ultra Slim Stereo Bluetooth Speaker One Micro USB Charging Cable

PRODUCT OVERVIEW

- 1) POWER SWITCH
- (2) LED INDICATOR
- (3) MICRO USB PORT

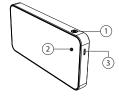

SPECIFICATION

- Audio Power Output : 1 W x 2 @ 5% THD, 40 mm speaker driver
- Battery Type : Li-polymer Battery
- Battery Capacity: 700 mAh
- Charging Voltage : DC 5 V
- \bullet Charging Time : ~ 3 hours (Time may vary depending on charging current of the power adaptor)
- \bullet Play Time : \sim 4 hours (Time may vary depending on surrounding envoirnment, different usage mode and pattern)
- Transmission: 10 M
- Frequency Band: 2.402 GHz 2.480 GHz
- Bluetooth Standard : Bluetooth v3.0+EDR
- Bluetooth Profiles : A2DP v1.2, AVRCP
- Working Temperature : 5°C 50°C • Storage Temperature : 0°C - 60°C
- Working Humidity: 8% 80%
- Storage Humidity: 8% 80%

FIRST TIME SETUP

Please fully charge the battery before using it for the first time.

CHARGE THE SPEAKER

To charge the Speaker, use the micro USB charging cable provided and connect it into a 5 V USB power adaptor (not included) or PC's USB port. The charging time usually takes around 3 hours. The LED indicator will appear RED while charging and will go off when charging is complete.

When the battery low, the LED indicator will flash RED.

After charging is complete, unplug the cable from speaker for maximum battery life.

Note: Full charge the battery and unplug the cable the first 3 times of use to ensure the best performance of battery.

TURN ON THE SPEAKER

To turn on the speaker, press and hold the "POWER SWITCH" for 3 second and there will be a voice prompt from the speaker.

To turn off the speaker, press and hold the "POWER SWITCH" for 5 second and there will be a voice prompt from the speaker.

CONNECT WITH BLUETOOTH

PAIRING FOR THE FIRST TIME

- 1. Turn on Speaker using the "POWER SWITCH" and LED Indicator will flash RED
- 2. Go to the Bluetooth option in the settings of your Bluetooth audio device of smartphone and choose "CAPDASE Speaker".
- 3. The Speaker are now connected to your device through Bluetooth.

AUTOMATIC PAIRING

YIN-00228

1. After restarting the unit, it will pair to the last connected device automatically. When pairing is complete, a tone will be played through the speaker.

1. To change the connected device, press the POWER SWITCH for 1 second to enter pairing mode

PLAY/PAUSE MUSIC

Press the POWER SWITCH once to play or pause music

PREVIOUS/NEXT SONG

When listening to music, press the POWER SWITCH 3 times to return previous song, and double-press the POWER SWITCH to go to next song.

RECEIVE A PHONE CALL

If there is an incoming phone call or you are trying to make a phone call when listening to music, short press the POWER SWITCH to pick up the phone call. The music will be pause temporarily. After you end the call, the music resumes.

Note: When you press the POWER SWITCH to answer or end a call, please press once only. Do not press and hold.

END A CALL

Use either of the following methods to end a call:

- Press the POWER SWITCH once to end a call from the speaker
- $\bullet\,$ End a call from the phone's screen

AUTOMATICALLY POWER OFF

Speaker will be turned off automatically when no device are paried after 6 minutes in pairing mold.