Instruction Manual
SD6 Wireless Earbuds

Safety and Handling

- Handle earbuds and case with care. They can be damaged if exposed to excessive heat or liquid. Don't use damaged earbuds or case.
- 2.Don't attempt to disassemble earbuds or case batteries, which could cause overheating and injury.
- 3.To prevent possible hearing damage, do not listen at high volume for extended long periods.
- 4.Do not use earbuds in water (showering, swimming, etc.)







FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used n portable exposure condition without restriction.



Specification

	Item	Value
Earbuds	Continuous Play Time Charge Time Bluetooth Range Bluetooth Version Sweat Resistant Battery	2-3 hours 1 hr charge time(0 to 100%) 30 ft (10m) V 4.2 Yes 45mAh
Charging Case	Battery Output Voltage Max Output Current Charging Voltage Max charging current	320mAh DC5V 1A DC5V 1A
	13	

What's in the box

2 Earbuds

1 Charging Case

1 Micro USB cable









Earbud Tips














Customize Your Fit

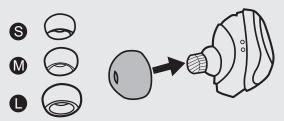

To ensure a secure and comfortable fit choose your appropriate earbud tip size.

Earbud LED Indicator (when in use)

In Use (Blinking Blue)

Pairing Mode (right earbud only) (Blinking Blue + Red)

Earbud LED Indicator (when in case)

Charging (Solid Red)

Fully Charged (Solid Red to Off)

Case LED Indicator

Charging (Blinking Blue)


Fully Charged (4 Solid Blue)





Resync Earbuds


- If you have pairing issues with your earbuds, try resyncing them.
- If you lose one earbud (such as the left earbud) and get a replacement earbud and want to pair the new one with your current earbud, you'll need to resync both of them by following the steps below.
- Step 1: Simultaneously long-press the "-" on the left earbud and the "O" on the right earbud for 4s until both earbuds begin to flash blue and red repeatedly.
- Step 2: Your earbuds are now resynced and ready to be re-paired with your device.
- Step 3: Re-pair earbuds to your device by going to the Bluetooth settings on your device and selecting "SD Wireless Earbuds".

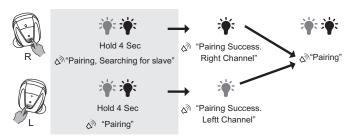

Resync Earbuds



How To Wear Earbuds

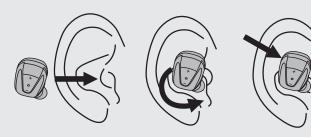


1.Insert
earbuds upright
into your ear

2.Rotate earbud toward you until they are at an 45° - 60° angle

3.Tuck the tip of the earbuds into the ridge of your ears.



Charging Case

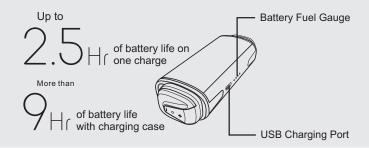

Plug your case into a power source using the included micro USB cable. As the case charge, the Fuel Gauge lights flash.

•Note:

* When charging is complete, all four lights will remain lit.



Single Mode Pairing

- only the right earbud may be used



Step 0: Before beginning, ensure the right earbud is powered off.

Step 1: Enter Pairing Mode for right earbud.

- 1.1 Long-press the "0" for about 2s until you see the earbud begin to flash blue.
 1.2 Then wait 4-5s to allow the right earbud to enter pairing mode. You will also hear a "Pairing" voice prompt.

 1.3 When the right earbud begins to flash red and blue repeatedly, your earbud is
- now discoverable and ready to pair to your device.
- Step 2: Go to Bluetooth settings on your device and select "SD Wireless Earbuds" from the list of discovered Bluetooth devices.

Step 3: (optional) Switching to Dual Mode.

If you currently only have the right earbud paired to your device (single mode) and want to connect the left earbud so they become dual mode, simply just power on the left earbud and the two earbuds will auto sync up.

Step 4: After the initial pairing, earbuds will automatically reconnect to your last device when powered on.



Dual Mode Pairing

- connecting both earbuds to device.




Step 0. Before beginning, ensure both earbuds are powered off.

Step 1: Enter Pairing Mode for both earbuds

- 1.1 Simultaneously long-press the "-" on the left earbud and the "O" on the right earbud for about 2s until the earbuds begin to flash blue repeatedly (you will see the earbuds flash red initially).
- 1.2 Then wait 4-5s to allow the left and right earbuds to sync up to each other.
- 1.3 When the right earbud begins to flash red and blue repeatedly, your earbuds are now discoverable and ready to pair to your device.
- Step 2: Go to Bluetooth settings on your device and select "SD Wireless Earbuds" from the list of discovered Bluetooth devices.
- Step 3: After the initial pairing, earbuds will automatically reconnect to your last device when powered on.



Charging Earbuds

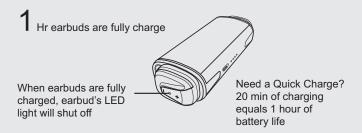


To charge your earbuds, place earbuds into the provided charger.

Note:

- * The earbuds' LED will be solid red while charging.
- * It takes ~1hr to charge earbuds from 0 to 100%.
- * Earbud's battery life can be checked on your phone (when paired).



Controls

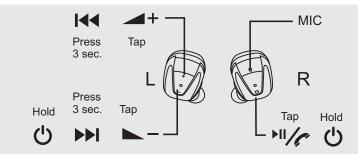

Music Functions

Play / Pause Music: Click "O" on right earbud. Next Track: Long-press "-" for 3s on left earbud. Previous Track: Long-press "+" for 3s on left earbud.

Call Functions*

Answer / End Call: Click "O" on right earbud. Reject Call: Long-press "O" for 3s on right earbud.

* For safety reasons, audio only plays in the right earbud during phone calls. This is meant to keep you aware of your surrounding (such as when driving).


Volume Adjustment

Increase Volume: Click "+" on left earbud.

Decrease Volume: Click "-" on left earbud.

7

Power ON / OFF Earbuds

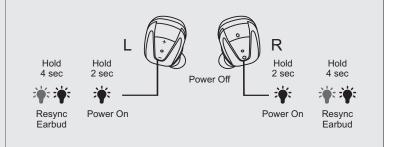

To power on / off your earbuds, long-press the "-" on the left earbud and "O" on the right earbud for around 2s.

Notes:

- * If you place earbuds into the charging case, they will automatically turn off.
- * If you are in dual mode and turn one earbud off, the other earbud will also turn off.

