

# Product Manual



www.mrdjusa.com



### **Product Manual**

# Congratulations on your new PLBAT-15 PP SERIES Portable Speaker by Mr Dj

Here is what you'll find and get with your new Mr Dj Product:

1x15" Full Range Powered Speaker

150 Watts Max P.M.P.O

Bluetooth®Technology/SD/USB Inputs and Built-In Battery

30 oz Woofer Magnet, 1 Voice Coil

Treble and Bass, Adjust frequencies to +/-12dB

Built-In Amplifier, FM built-in antenna

#### **FCC Statements**

1. Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Built-in battery 12V 7 Ah** 

- 2. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - · Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - · Consult the dealer or an experienced radio/TV technician for help.

O



### **Product Manual**

### SAFETY AND WARNING !!! PLEASE READ !!!

#### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS



FIRE, REPLACE FUSE WITH THE SAME TYPE AND RATING. DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE HOUSEHOLD USE ONLY

AVIS: Ne pas ouvrir l'appareil! Danger de décharge électrique!



THE LIGHTING FLASH WITH ARROW SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UN-ISULATED DANGEROUS VOLTAGES WITHIN THE PRODUCTS ENCLOSURE, THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOM-PANYING THE APPLIANCE

#### IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

WARNING - When using electric products, basic precautions should always be followed, including the following:

- · Read all instructions before using the product.
- Do not use this product near water, i.e. a bathtub, sink, wet basement, or swimming pool.
   This product, in combination with other headphones and speaker, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for long periods of time at a high-volume level or any level that is uncomfortable. If you experience any hearing loss or ringing in the ears, consult a doctor.
- · The product should be located away from heat sources such as radiators, heat resistors, or any other product that produces
- The product should be connected to a designated power supply described in these instructions.
- The power supply cord should be unplugged when left unused for a long period of time.
  Care should be taken so that objects do not fall or liquids are not spilled into the enclosure through its openings.
  The product should be serviced by quality personnel when:

  The power supply cord or plug has been damaged
  Objects have fallen, or liquid has been spilled in the produce
  The product has been exposed to rain
- - The product has been exposed to rain
     The product does not appear to operate normally or exhibits a marked change in performance
     The product has been dropped, or the enclosure damaged
- · Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be performed by quality service personnel.

#### CAUTION

- · Instructions are intended to alert the user to the risk of injury or material damage, should the unit be used improperly.
- Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well as to domestic animals or pets.





# SPECIFICATIONS Product Manual


System Specifications		
Frequency Response(-3dB)	45Hz - 18kHz	
Frequency Range(-6dB)	40Hz - 20kHz	
Max SPL Long-term @1m	98dB	
Max SPL Peak @1m	121dB	
Crossover	18dB/oct@ 3.5kHz(passive)	
AUDIO		
MIC Input		
Input Type	bal.1/4"	
Input Impedance	3k Ohms	
Input Sensitivity	-46dBu	
LINE Input		
Input Type	bal.RCA	
Input Impedance	10k Ohms	
Input Sensitivity	-26dBu	
INE Output		
Output Type	bal. RCA	
Output Impedance	10k Ohms	
Output Sensitivity	26dBu	
requency Equalizer		
Гуре	BT 2.1	
Frequency	2400-2483.5MHz	
Equalize Range	0 dBi	
Power Amplifier		
Rated Output Power	50 Watts	
Max Output Power	150 Watts	
Power Supply	110V/220V ~ 50/60Hz	
Max Power Consumption	250VA	
Rated THD	<0.5% (20Hz - 20kHz)	
requency Response	+1/-2dB (20Hz - 20kHz)	
Cooling	Convection Extrusion	
)esign	Class D	
Dimensions	48X39. 5X75CM	
Veight	27.lbs. Net Wt.	

www.mrdjusa.com



# **Product Manual**

BACK PANEL

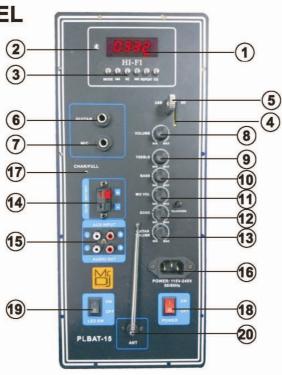

- 1. MP3 Player L.E.D. Display Panel
- 2. I.R.(Infrared) Remote Cotrol
- 3. Audio Control (Play, next, previous, EQ) MODE SELETION
- 4. SD Card Slot
- 5. USB Slot
- 6. GUITAR IN (JACK Mic input)
- 7. 1/4 Mic input
- 8. Adjust the volume of MP3/LINE signal
- 9. Adjust the high tone of the output
- 10. Adjust the bass tone of the output

- 11. Adjust the volume of MIC/wirelesss microphone
- 12. This is the regulator of reverberation
- 13. Adjust the volume of GUITAR signal
- 14. DC POWER SUPPLY
- 15. RCA Line Input / Out
- 16. Power Cord Terminal
- 17. CHARGING LED (Red = Charging / Green = Full)
- 18. Power Switch
- 19. LED Switch
- 20. FM Antenna

www.mrdjusa.com



### **Basic Operating Instructions**

Before connecting the speaker, make sure the system is in "OFF" position and the controls on the minimum level, to prevent speaker damage / abuse.

- 1. Plug the Microphone (Included in Package) into the Quarter Mic Input (Refer to Page 4- Illustration No. 6)
- 2. Connect Your Selected Audio Source (CD, DECK, Mp3, DVD, etc) on "LINE IN/LINE OUT" input/output (Refer to Page 4- Illustration No. 15)
- 3. Turn on the systems. Mp3 LED will light up to indicate the speaker is on (Refer to Page 4- Illustration No. 16 and 18)
- 4. Insert USB or SD Card for MP3 Player (May Not Support Large Storage Cards 16GB Tested) (Refer to Page 4- Illustration No. 4 and 5)
- Set TREBLE and BASS controls to equalize the sound. (Refer to Page 4- Illustration No. 9 and 10)
- 6. Monitor LED Red Light (CHARGING)- When light comes on your speaker is detecting an overload (Refer to Page 4- Illustration No. 17)
- 7. Connect power cord to wall outlet then to the back of the unit (Refer to Page 4- Illustration No. 16)
- 8. Default Power Selected is 110-240V (For Asia / European Market) Please choose correct voltage. (Refer to Page 4- Illustration No. 16)
- 9. Select the Audio Player Mode to either USB / SD / FM\*or Bluetooth® \* through the selector.
  (U USB / S SD Card / B Bluetooth®)
  (Refer to Page 4- Illustration No. 3)

Note: \* May Not Be Available On Select Models

6



### **Product Manual**

## Warranty - Please Register Online www.mrdjusa.com

MR DJ USA warrants this product to be free of all manufacturing defects under normal use to the original purchaser for the following period:

PARTS - 90 DAYS / LABOR - 1 YEAR

To activate guarantee / warranty, the registration sheet must be filled in and mailed within TEN DAYS (10) of purchase. Proof of purchase will be needed.

This guarantee / warranty may not cover replacement of some parts, knobs, remotes or gift box (if supplied with unit / product). Any alterations, abuse, misuse, or accidental damage voids this guarantee / warranty. This will be determined by our Technical Department.

All handling and transportation charges must be prepaid and product must be dispatched in original packing together with this guarantee / warranty sheet. All products needing Warranty / Guarantee must have Return Merchandise Authorization (RMA) Number, without the RMA Number - Request for Warranty / Guarantee will be denied and returned to sender. Please refer to our website (www.MR DJusa.com) for further warranty / guarantee information and instructions. RMA's can also be requested via ONLINE

Please fill in the following	g data before using this unit.	•••••
MODEL NO	SERIAL NO	
WHERE PURCHASED_	Control Control and Control Control Control	
PURCHASE DATE		
NAME		
ADDRESS		
CITY/STATE		
ZIP CODE		
PURCHASED FROM_		
DATED		
MR DJ USA INC		
Tel: 213-744-1144		
Fax: 213-749-2999		
Toll Free: 1-877-418-877	1	
http://www.MR DJusa.co	m	

YOU CAN ALSO REGISTER YOUR PRODUCT ONLINE - PLEASE VISIT - http://www.mrdjusa.com/

Note: Warranties and Guaranties are subject to MR DJ USA's Terms and Conditions which can be found online at www.MR DJusa.com

We have the right to refuse warranty and guaranty requests.

6