
哑粉纸 120g 宽60X高95(mm) 黑色边框不要印刷

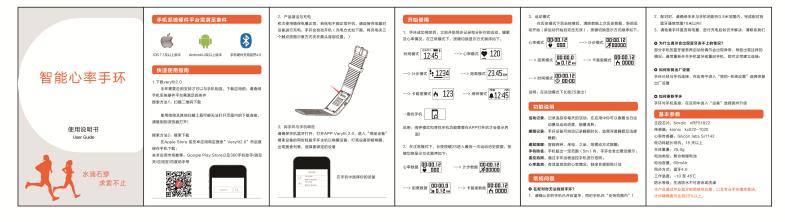






under low battery, connect the device to the charger. Device will automatically boot up (please clamp the charging clip to the back 3



go to bind. When searching and pairing device, please press on the key of device and activate the device (screen on). App will search the device automatically, choose the device name and connect the device to the a



analyze your activities and sleep status automatically, please press the key on the device to switch into different display modes as following:



screen after switch turn QN in the APP!

2. Under normal mode, long press the key 2S to enter into the histo sports mode, (the latest sports data),then switch into different display modes as following when normal press on the key:

Heart Rate Data

■ 00:00.12
→ Pedometer Data

■ 00:00.12
→ Pedometer Data

3 Snorts Mode Double click the key under history sports mode, the new activity will start(Clear the latest history data, once new activity started, double click on the key will be invalid), device switch into different display modes as

ode 00:00.12 ≸00000 Sport Calories Mode 6 0000 0.00:00 M 51.0 K

Activities Record: Record daily activities, you could check daily activitie

monitoring the whole sleep progress with analyzing the deep sleep and ligh Demind Alerts: Alarm alert call alert sedentary alert etc by silent vibration

Anti-Lost: When the smart phone is beyond the Bluetooth range (no more than 5m), the device vibrates to remind. Remote Camera Control: Device key could control remote photograph

planning the movement.

OCan't find device when pairing device?

0.5m, device is among the normal Bhretooth communication distance rang

blem after full charge, please contact us. OCan't connect the device with ano?

Some smart phone Bluetooth service will be abnormal when reboot. Pleas OHow to Restore Factory Defaults

Make sure the device is connected with app, go in the app, enter "Mine-System Setting" and choose "Reboot Device

Of How to update the device is connected with app, go in the app "Device update", please wait some minutes before update done.

CPU: Nordic nRF51822 Sensor: kionix kx022-1020 HR Sensor: Silicon labs Si1142 Host Weight: 25g Battery Type: Rechargeable Li Battery Battery Capacity: 60mAh Data Sync: Bluetooth 4.0

Working Temperature: -10C--45℃ Waterproof: not for swimming or diving Standby time: 15 days & above

This product is applied by professional Bluetooth RF signal and own-developed algorithm, the accuracy can reach 95% and above This device complies with Part 15 of the ECC Rules. Operation is subject

to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, includ that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could would the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may come humful interference to radio communications.

the instructions, may cause humiful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause humiful interference to radio or elelvision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures: -- Reorient or relocate the receiving antenna

- Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to

-- Consult the dealer or an experienced radio/TV technician for help. RISK OF EXPLOSION IF BATTERY IS REPLACED

BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances s responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw