Manual de Usuario

1 Apariencia e introducción

Cámara Delantera

Cámara Trasera

Bocina

Encendido

Ent. Audífonos

USB

Volumen +

Volumen -

Micro SD

Reset

Power

Mic

Volumen +

MICRO SD

Reset

ARTAB LT+
MODEL AL-2260
S/N 0141012760001

www.artexcomputer.com
Designed in USA Made in China

aartex

1.1Configuración de Hardware

Modelo NO.	AL2206Q
Tamaño （La*An*Al）	192.5*109.5*9.9mm
CPU	**A33 1.3GHZ Quad core**
Memoria interna	8GB
Memoria Ram	1GB DDR3
Puerto MicroSD	MicroSD 128M-32GB
Cámara	Frontal 0.3MP. Trasera2.0MP
Pantalla	7″TFT capacitiva multi táctil
Resolución	1024*600 IPS
Sistema operativo.	**Android 6.0**
Duración de la batería	3 a 6 horas, dependiendo del uso.
USB	USB 2.0
Bocina	Una bocinaestéreo
Acelerómetro	Si
Puertos E/S	1*USB 2.0; OTG soporta 3G externo, disco usb, ratón, teclado.
	1 MicroSD hasta 32GB
	1 3.5mm jack
	1 Entrada USB 5V
Inalámbrico	WiFi 802.11b/g/n integrado

1.2Configuración de Software

Sistema Operativo	**Android 6.0**
Navegador	Google
Video	MEPG 1/2/4,H.263/H.264,RMVB, WMV/VC-1,MVC,AVS,MJ PEG. (UP TO 1080P)
Formatos de Sonido	MP3,WMA,WAV,OGG,FL AC,ALAC,APE,AAC,AC-3, DTS (necesitalicencia)
Formatos de Imágen	MJPEG, JPEG,JPG,BMP,GIF,PNG
Email	Email
	MicrófonoIntegrado

2 Encendido y Apagado.

1. Encender: Presionar el botón de encendido de 3 a 5 segundos para encender.
2. Apagar: Presionar el botón de encendido de 3 a 5 segundos, elegir —Apagar—OK

3 Bloqueo y desbloqueo de panel táctil

1. Bloquear: presionar y soltar el botón de encendido, entrará en modo de reposo con pantalla apagada.
2. Desbloquear: presionar y soltar el botón de encendido, luego deslizar el círculo con candado

hacia la derecha para desbloquear.

4 Teclas de navegación

1. En la pantalla principal presione la tecla " " para ingresar a la lista completa de aplicaciones.

2. Presionar y soltar la tecla "BACK" o toque en la pantalla para regresar al menú anterior.

3. Presionar y soltar la tecla "HOME" o toque en la pantalla para regresar a pantalla principal.

4. Toque en la pantalla" " para mostrar listado de aplicaciones usadas recientemente.

5Métodos de entrada y teclado virtual

1. Ingrese a cualquier cuadro de entrada de texto.
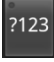

2. El teclado virtual aparecerá automáticamente en la parte inferior de la pantalla.

3. Presione el cuadro de entrada de texto por 3 segundos para cambiar la opción de método de entrada.

Nota：Debido al método de entrada chino, otros métodos de entrada pueden variar su aspecto y contenido ligeramente, el siguiente paso corresponde al método de entrada Google Pinyin.

4. Presione la tecla [?123] para alternar entre teclado numérico y abecedario.

5. Presione la tecla [⇧] para seleccionar mayúscula o minúscula.

6. Presione "English", "Chinese" o "Español" para los diferentes idiomas del teclado.

7. Presione en la opción "Ir" para confirmar su entrada de texto.

6 WIFI

Los pasos para el acceso a redes inalámbricas WI-FI son los siguientes:

1. Ingresar a la opción "Redes Inalámbricas y WI-FI" y luego seleccione "WI-FI".
2. Seleccione "Configuración de WI-FI".
3. Seleccione su red WI-FI para conectarse a Internet.
4. De ser necesario, ingrese la contraseña en la entrada de texto y seleccione "Conectar".

7Instalación de aplicaciones y juegos con archivos APK.

1. El dispositivo debe poseer una red WIFI/3G en funcionamiento.
2. Para la instalación de aplicaciones y/o juegos a través de archivos "APK" por favor utilice cualquier navegador de Internet, descargue el archivo, seleccione el archivo y elija la opción instalar, al finalizar seleccione la opción "OK". Su aplicación está lista para ser usada.

8 Instrucciones para la carga

Especificaciones del cargador

A. Voltaje de salida: 5V
B. Corriente de salida: 2500mA~3000mA

Nota: ¡no usar cargadores con especificaciones distintas a las descritas anteriormente, de lo contrario su garantía y equipo pueden verse comprometidos!

9 Cuidesuequipo

Esta tableta es un equipo electrónico sofisticado, incluso puede ser usada como una mini computadora. Los siguientes tips pueden alargar la vida útil del mismo.

• Resguarde su equipo en un área segura, lejos del agua la cual puede afectar severamente los componentes internos;

• Solo use los accesorios originales de fábrica, cualquier otro accesorio externo puede afectar la vida útil del equipo o en ocasiones provocar fallas inesperadas.

• Evite golpes y uso en lugares con altas temperaturas.

Si su nuevo dispositivo no enciende por favor conecte el cargador.

User Manual

1 Appearance and key introduction

Front Camera

Back Camera   Speaker

Power

Earphone

USB

Volume +

Volume -

Micro SD

Reset

1.1Hardware configuration

Model NO.	AL2206Q
Size（L*W*H）	192.5*109.5*9.9mm
CPU	**A33 1.3GHz Quad core**
Flash	8GB
Storage	1GB DDR3
TF Card slot	T-flash 128M-32G
Camera	Front 0.3MP,Rear 0.3MP.
Display	7″TFT capacitive multi touch
Resolution	1024*600
OS.	**Android 6.0**
Working time	Depending on the use of 3-6 hours
USB	USB 2.0
Speaker	One Stereo speakers
G-sensor	Yes
I/OPort	1*USB 2.0;OTG support external 3G、U disk、Mouse、keyboard、USB
Wireless	1*T card max to 32GB
	1*3.5mm stereo speakers
	1* USB 5V power input
	Built in WiFi 802.11b/g/n

1.2 Software configuration

Operation system	**Android 6.0**
Browser	Google
Video	MEPG 1/2/4,H.263/H.264,RMVB, WMV/VC-1,MVC,AVS,MJ PEG. (UP TO 1080P)
Music	MP3,WMA,WAV,OGG,FL AC,ALAC,APE,AAC,AC-3, DTS (need license)
Picture	MJPEG, JPEG,JPG,BMP,GIF,PNG
Email	Email
	Built in MIC

2 Turn on/off

3. Turn on：Long press the power key 3 seconds-5 seconds turn on the tablet；
4. Turn off：Long press the power key 3 seconds-5 seconds，choose—power off—ok

3Lock/unlock the touch screen

3. Lock：short press the power key,enter into the black screen-locked；
4. Unlock：short press the power key to light the screen ，and then unlock the circle in the

direction of "locks" slide to unlock

4 Menu options

5. In the main screen press" "key to enter the application program interface list；

6. Short press"back"key or click the screen will return to the previous menu；

7. Short press"HOME"key or touch the screen click the left corner will return to the main menu；

8. Touch screen click left corner" "will soon enter the recently taskbar。

5The virtual keyboard and input method

8. Click on any input box；
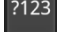

9. At the bottom of the pop up the virtual keyboard；

10. Long press the input box for 3 seconds to switch input method options；

Note：bai du to Chinese handwriting input method, different input method to use the virtual keyboard is a bit different, the following documents only Google pinyin input method.

11. Click key can switch Numbers and characters；

12. Click ⇧ key can choose lowercase letters；

13. Click"English"or "Chinese"can switch input in both Chinese and English；

14. Click on the "go" confirm the input is completed。

6 WIFI

WI-FI network access operation steps are as follows ：

5. Enter the"wireless and network "and then click the"WI-FI"；
6. Click the"WI-FI setting "；
7. Click to connect a WI-FI internet；
8. If you need, in the pop-up dialog box enter the password and click "connect"。

7 Internet download APK applications and games installed

3. WIFI/3G network must be connected to normal ；
4. Open any web search or download the suffix ". APK "application/game, choose to install the APK application/game, there will be" installed "option, click" install ", prompt "is downloading, the download is complete, you are setting up - the installation is complete, can open this application at this time, also can click" uninstall ", uninstall the program。

8 Charging instruction

Charger specification

C. Output voltage:5V
D. Output current:2500mA~3000mA

Note: the selected charger specifications must comply with the above specifications, or any failure or an accident, the company will see as artificial damage!

9 Take care of the Machine

This tablet is a complicated electronic equipment,or even can be used as a micro computer.The following tips can help lengthen the service life of the machine.

*Best put the equipment in a safe place, away from the water to protect the machine and accessories;

*Only use the original factory production of accessories, without permission of the accessories is likely to damage the unit, shorten the life of the machine.

*Avoid taxes, fell from high, don't force to run the machine.

If new device can not power on,please insert the charger,confirm whether caused by low battery.

Tablet specification and software will be subject to physical.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information:

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device Types kaleidoscope (FCC ID: 2AIBY-AL2206Q) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.782W/kg.

This device was tested for typical body‐worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.