

Owlet Baby Camera

Let's Get Started

Download the Owlet App.






Plug in and follow app instructions to pair the Cam with your Owlet Account.

If you've already downloaded the Owlet App, click the Account tab to add a new device.

Remember: the Cam allows for video and audio via secure, encrypted WiFi.
Only connect the Cam to a private network that requires a secure password.

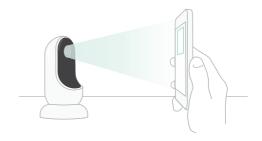

Guide to Owlet Cam Status Lights

- (blinking red/blue) Cam is ready to pair with App
- (red) User is actively streaming via App
- (blinking blue) Cam is trying to connect to WiFi
- (blue) Cam is streaming but App is not in use
- (purple) No SD card, Cam cannot record video history

Choose Your View

Place the Cam and all cables 3 feet away from the edge of the crib. Cables within 3 feet of the edge of the crib should be covered.

You can set up the Cam in two ways:

 Place it on a flat surface using the magnetic base and adjust for desired tilt angle.




2. Mount it on a wall above the crib using the base as a wall mount for a bird's-eye view of the crib or for an expanded view of your nursery.

The next steps will guide you through mounting the Cam on the wall (above the crib).

You can also view our Installation Video at support owletcare com



What's in the Box

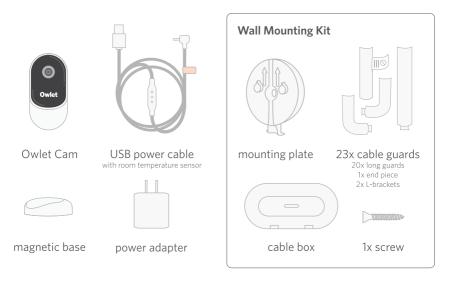

Tools Needed to Mount the Cam



measuring tape (not included)




small Phillips screwdriver

1. Measure and mark


Measure 36 inches from the top of your baby's mattress and make a mark on the wall — this is where the Cam will be mounted. Center this mark above baby's crib for the optimal viewing angle.

Consider which outlet to use.
The outlet should be at least 36 inches away from the crib to ensure no exposed cables will be within baby's reach. The next steps will instruct you on how to cover all cables.

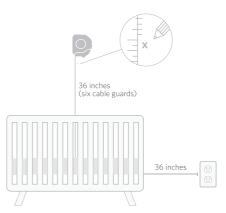


2. Align and fasten

Align the center hole of the mounting plate with the mark you've made on the wall. Using the provided screw, fasten the mounting plate to the wall with the arrows pointing upward.

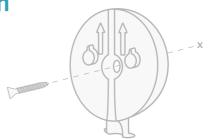


3. Unwind the cable

Unclip the two clasps on the cable box and unwind the cable from the cable box, leaving the temperature sensor clipped in.

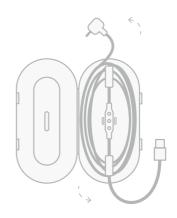


4. Thread the cable

Thread the cable down the channel of the mounting plate, aligning the orange sticker on the cable to the top of the mounting plate.

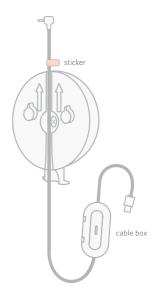


5. Mount the base

Position the large holes of the magnetic base over the protruding tabs on the mounting plate, then slide downward until it clicks.

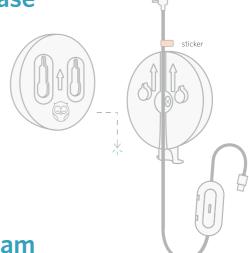

6. Attach the Cam

Attach the Cam to the magnetic base. Plug the cable into the Cam.

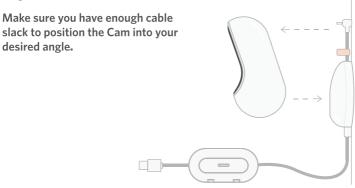


cable box

7. Mount cable guards

The cable guards use high-strength adhesive. Take your time during installation to ensure proper placement.

- 1) Peel off adhesive cover from the back of a long guard
- 2) Thread cable down the center of a long guard
- 3) Snap long guard onto the bottom of the mounting plate
- 4) Press firmly onto wall
- 5) Repeat steps 1-4 with remaining long guards until you reach the height of the wall outlet

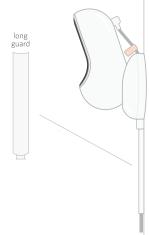


8. Mount L-bracket

Use the right or left L-bracket to guide the cable in the direction of the wall outlet.

Install long guards until any cable within 36 inches of the edge of the crib is covered. Continue adding long guards as needed to reach the outlet. Finally, install the end piece when you are within 6–10 inches of the outlet (this allows enough room for the cable box to be mounted).

cable box

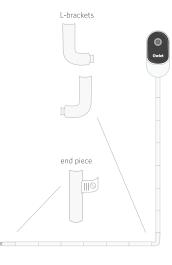

9. Mount the cable box

Wrap any excess cable not needed to reach the outlet inside the cable box. Then, close the cable box using the two clasps. Peel off adhesive cover and press the cable box firmly onto the wall next to the end piece.

Connect the power cable to the power adapter and plug it into the wall outlet.

You're all set! You can now use the App to reference how to adjust the Cam angle until you achieve the desired view.



Need Help?

If you have questions about the Owlet Cam, visit our Help Center at

support.owletcare.com



WARNING:

Strangulation Hazard!

Children have STRANGLED in cords. Always use protective covering when used within 3 feet of crib. Check before each use to ensure the cord is not exposed to your child. Immediately discontinue use if the protective covering is damaged or broken. Do not remove tag from cord or protective covering.

IMPORTANT SAFETY INSTRUCTIONS

- For indoor use only. To reduce the risk of fire or electrical shock, DO NOT expose this product to water or moisture. DO NOT use monitor near water (such as bathtub, sink, etc.) or submerge in water.
- The use of this monitor should not replace proper adult/parental supervision. You should check your child's activity at regular intervals, as this monitor will not alert parents to the silent activities of a child.
- NEVER attempt to disassemble the product. This is dangerous and will void the warranty.
- The user should not attempt to service/repair monitor.
- Use only the adapter supplied with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- To prevent entanglement and overheating, DO NOT use extension cords.
- The adapter may become slightly warm to the touch during operation. This is normal.
- ALWAYS unplug the AC adapter from the wall during extended periods of non-use.
- Check to make sure wall outlet plates are not unusually hot to the touch. If they are, immediately unplug cords from these outlets. Check that all outlet connections are in good condition so that adapter is not loose or that no wiring is exposed. Have a qualified, licensed electrician check that no wiring is exposed.
- DO NOT place adapter/wall plug under a window where a child might use it to step on and/or reach something that might be dangerous.
- Adult assembly is required. Keep small parts away from children when assembling. Exercise care when unpacking the product.
- This product is not a toy. DO NOT allow children to play with it.
- Monitor uses encrypted transmission over FCC-managed frequencies. Always remember to password-protect your WiFi router.

ADDITIONAL SAFETY INSTRUCTIONS

• VENTILATION: DO NOT block ventilation openings. DO NOT place on a bed, sofa, rug or similar surface.

- DO NOT place in a bookcase or cabinet that may restrict air flow.
- HEAT: The monitor should be situated away from heat sources, such as radiators, heat registers, stoves or other appliances that produce heat. Also, keep these components out of direct sunlight.
- POWER CORD PROTECTION: The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug and at the point it exits from the monitor.

LIMITED WARRANTY

Owlet proudly stands behind its products. Our warranties are found at: https://owletcare.com/pages/warranty.

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



Pour Commencer

Téléchargez l'application.





Branchez la Cam dans la prise murale et suivez les instructions de l'application pour coupler la Cam à votre compte Owlet.



Si vous avez déjà téléchargé l'application Owlet, cliquez sur l'onglet Compte pour ajouter un nouveau périphérique.

Rappelez-vous: le Cam permet la vidéo et l'audio via le WiFi sécurisé et crypté. Ne connectez Cam qu'à un réseau privé nécessitant un mot de passe sécurisé.

Guide des témoins lumineux de la Cam

- 🔵 🌑 (rouge et bleu clignotant) La Cam est prête pour le jumelage avec l'application
- (rouge) L'utilisateur reçoit une lecture en continu via l'application
- (bleu clignotant) La Cam tente une connexion WiFi
- (bleu) La Cam envoi une lecture en continu, mais l'application n'est pas active
- (violet) Aucune carte SD, la Cam ne peut pas conserver l'historique de la vidéo enregistrée

Choisissez votre vue

Placez la Cam et tous les câbles à 3 pieds du bord du berceau. Les câbles situés à moins de 3 pieds du bord du berceau doivent être couverts.

Vous pouvez installer la Cam de deux différentes façons:

 Placez-le sur une surface plane en utilisant le support magnétique et ajustez à l'angle d'inclinaison désiré.



2. Pour obtenir une vue plongeante sur le berceau ou pour une vue étendue de la chambre d'enfant, fixez sur le mur au-dessus du berceau en utilisant la base comme pièce de montage.

Les prochaines étapes vous guideront à travers le montage de la Cam sur le mur (au-dessus du berceau).

Vous pouvez aussi visionner notre vidéo d'installation sur le site support.owletcare.com.



Contenu de la boîte





Outils pour monter la Cam



ruban à mesurer




petit tournevis cruciforme

1. Mesurez et marquez


Mesurez 36 pouces du dessus du matelas de votre bébé et faites une marque sur le mur où la Cam sera installée. Centrez cette marque au-dessus du lit de bébé pour un angle de vision optimal.

Bien choisir la prise électrique à utiliser. La prise électrique doit être située à un minimum de 36 pouces du berceau pour s'assurer qu'aucun câble exposé soit à la porté du bébé. Nous vous dirons comment couvrir tous les câbles.

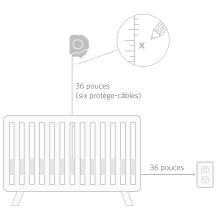


2. Alignez et fixez

Alignez le trou central de la plaque de montage avec la marque que vous avez faite sur le mur. En utilisant la vis fournie, fixez la plaque de montage au mur avec les flèches pointant vers le haut.

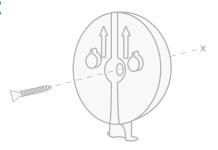


3. Déroulez le câble

Détachez les deux fermoirs sur la boîte de câble et déroulez le câble d'alimentation USB situé dans la boîte de connexion et laisser le détecteur de température fixé.

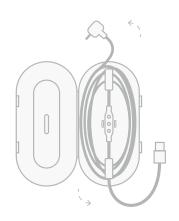


4. Sécuriser le câble

Sécuriser le câble dans la coulisse de la plaque de montage en alignant l'autocollant orange situé sur le câble avec le dessus de la plaque de montage.

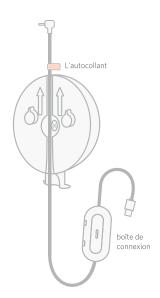

5. Montez la base

Positionnez les grands trous de la base magnétique sur les languettes saillantes de la plaque de montage, puis glissez vers le bas jusqu'à ce que vous entendiez un déclic.

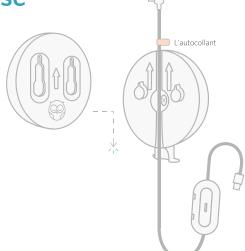

6. Fixez la Cam

Fixez la Cam à la base magnétique. Branchez le câble dans la Cam.


Assurez-vous d'avoir la longueur de câble nécessaire pour positionner la Cam à l'angle désiré.

boîte de câble


7. Montez les protège-câbles

Les garde-câbles sont munis d'un adhésif de haute qualité. Prenez votre temps lors de l'installation pour vous assurer d'un bon positionnement.

- 1) Retirez la pellicule protectrice de l'adhésif située à l'arrière d'un long garde-câble
- 2) Faufilez le câble dans le centre d'un garde-câble
- 3) Enclenchez le long garde-câble sur le bas de la plaque de montage
- 4) Pressez fermement sur le mur
- Répétez les étapes 1 à 4 avec tous les longs garde-câbles jusqu'à atteindre la hauteur de la prise murale

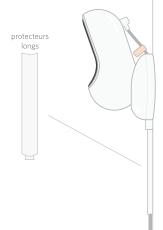

8. Montez le support en «L»

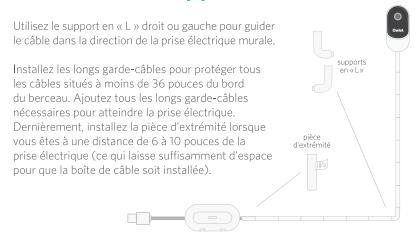

9. Fixez la boîte de câble

Enveloppez tout câble excédentaire qui n'est pas nécessaire pour atteindre la prise à l'intérieur de la boîte de câble. Fermez ensuite la boîte de câble à l'aide des deux pinces. Décollez la pellicule protectrice de l'adhésif et presser fermement la boîte de câble sur le mur à côté de la pièce d'extrémité.

Branchez le câble d'alimentation USB à l'adaptateur d'alimentation et branchez-le dans la prise murale.

Tout est prêt! Vous pouvez maintenant utiliser l'application pour modifier l'angle de caméra jusqu'à obtenir la vue souhaitée.



Besoin d'aide?

Si vous avez des questions sur la Cam, visitez notre Centre d'aide à

support.owletcare.com

MISE EN GARDE:



Danger d'Etranglement!

Des enfants se sont ÉTRANGLÉS avec des cordons. Toujours utiliser un revêtement protecteur lorsqu'utilisé à moins de 3 pieds du lit de bébé. Vérifiez le cordon avant chaque utilisation pour vous assurer qu'il n'est pas exposé à votre enfant. Cessez immédiatement l'utilisation si le revêtement de protection est endommagé ou brisé. Ne retirez pas cette étiquette du cordon ou du revêtement protecteur.

CONSIGNES DE SÉCURITÉ IMPORTANTES

- Pour une utilisation en intérieur uniquement. Pour réduire le risque d'incendie ou d'électrocution, NE PAS exposer ce produit à l'eau ou à l'humidité. NE PAS utiliser le moniteur près d'une source d'eau (baignoire, évier, etc.) ou le submerger.
- L'utilisation de ce moniteur ne devrait pas remplacer la supervision adulte/parentale appropriée. Vous devriez vérifier l'activité de votre enfant à intervalles réguliers car ce moniteur n'indiquera pas aux parents les activités silencieuses d'un enfant.
- N'essayez JAMAIS de démonter le produit. Ceci est dangereux et annulera la garantie.
- L'UTILISATEUR NE DOIT PAS TENTER DE RÉPARER LE MONITEUR.
- Utilisez uniquement l'adaptateur fourni avec ce produit. Une polarité ou une tension incorrecte de l'adaptateur peut sérieusement endommager le produit.
- Pour éviter l'enchevêtrement et la surchauffe, N'utilisez PAS de rallonges.

L'adaptateur peut devenir légèrement chaud au toucher pendant son fonctionnement. Ceci est normal.

- TOUJOURS débrancher l'adaptateur secteur du mur lors de périodes prolongées de non-utilisation.
- Assurez-vous que les plaques de sortie murale ne sont pas inhabituellement chaudes au toucher. Si c'est le cas, débranchez immédiatement les cordons de ces prises. Vérifiez que toutes les connexions de sortie sont en bon état afin que l'adaptateur ne soit pas desserré et qu'aucun câblage ne soit exposé, Faites vérifier par un électricien qualifié et agréé qu'aucun câblage n'est exposé.
- NE placez PAS d'adaptateur/de prise murale sous une fenêtre où un enfant pourrait l'utiliser pour grimper dessus et/ou pour atteindre un objet en hauteur qui pourrait être dangereux.
- L'assemblage par un adulte est requis. Gardez les petites pièces à l'écart des enfants lors de l'assemblage. Faites attention lors du déballage du produit.
- \bullet Ce produit n'est pas un jouet. NE permettez PAS aux enfants de jouer avec l'article.
- Le moniteur utilise une transmission cryptée sur des fréquences gérées par la Commission fédérale des communications. N'oubliez pas de protéger votre routeur Wi-Fi par mot de passe.

INSTRUCTIONS DE SÉCURITÉ SUPPLÉMENTAIRES

- VENTILATION: NE BLOQUEZ PAS les ouvertures de ventilation.
 NE PAS placer sur un lit, un canapé, un tapis ou une surface similaire. NE PAS placer dans une bibliothèque ou un meuble pouvant limiter le flux d'air.
- CHALEUR: Le moniteur doit être placé à l'écart des sources de chaleur telles que les radiateurs, les bouches de chaleur, les poêles ou autres appareils produisant de la chaleur. Gardez également ces composants à l'abri de la lumière directe du soleil.
- PROTECTION DU CORDON D'ALIMENTATION: Le cordon d'alimentation doit être acheminé de sorte qu'il ne risque pas d'être piétiné ou pincé par des objets placés sur ou contre lui. Portez une attention particulière au cordon de la prise et au point où elle sort du moniteur.

GARANTIE LIMITÉE

Owlet est fière de ses produits. Nos garanties se trouvent à l'adresse suivante: https://owletcare.com/pages/warranty.

DÉCLARATION DE CONFORMITÉ DE LA FCC

 English: This device complies with Industry Canada licenseexempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

- French: Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareilsradio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement. l'appareil numérique du ciem conforme canadien peut - 3 (b) / nmb - 3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

