

Hello

Congratulations on your new Mokacam camera. This Quick Start Guide will show you the basics of capturing life's most incredible moments with your Mokacam.


For more information and resources in other languages, please visit www.mokacam.com

Getting Started

Remove the camera side door and insert a microSD card (included in the pack).

the included USB cable.



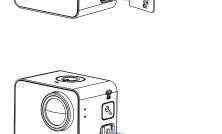

The Basics

Camera Status Light

microSD card 🖘

/USB interface

Mokacam

O G

Hold the Power/Shutter button (\bigcirc) for 3 seconds.

Select Photo /Video Mode

Press Setting Button((?)) to switch between Photo/Video

Enable Camera Wi-Fi

Hold the Setting Button (🔪)for 3 seconds. To WiFi Off:



Mokacam App

The Mokacam App lets you control your camera remotely using a smartphone or tablet. See what your camera sees with live preview. View photos and play back videos, then share your favourites via Email, text, Facebook, Twitter and more.

Download the app"mokacam"from Apple App Store or Google Play.

Open the camera Wi-Fi. Press side button (🔍)to enable camera Wi-Fi.

Connect to Mokacam camera Wi-Fi(need to know the SSID).


Default name is: mokacam***** Default password:1234567890

Sharing Videos and Photos

Please follow the instructions on the App.

Rotatable Screen

Use a coin and open the side door, plug in the rotatable screen.

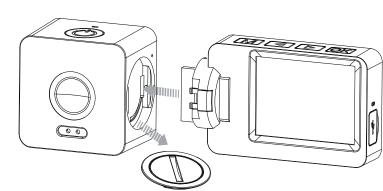

When there is a rotatable screen attached, press "M" button to change settings.

1)Time-Lapse Video

Set the camera into Video 🎦 or Photo 💿 mode, press "M", select "Time-Lapse" using Right/Left button. Press OK to select the time interval. If the camera is in Video mode, the icon($(\mathcal{L}_{\mathcal{L}})$) shows on the top left. If the camera is in Photo mode, the icon(🕞) shows on the top left.

2) Slow Motion Video

Set the camera in Video 🖰 mode, press "M", select "Slow Motion" using Right/Left button. Press OK to enable/disable slow motion mode. If the camera is in Slow Motion mode, the icon() shows on the top left.

3) A-B Loop Video

Set the camera in Video mode, press "M", select "A - B Loop" using Right/Left button. Press OK to enable/disable A - B Loop mode.

4) Photo Burst

Set the camera in Photo 🔘 mode, press "M", select "Photo Burst" using Right/Left button. Press OK to select from 3(3 photos/sec),

5) Selfie Timer

Set the camera in Photo 💿 mode, press "M", select "Selfie Timer" using Right/Left button. Press OK to select from 2 seconds, 10 seconds. If the camera is in Selfie Timer mode, a timer will show on the screen when Power/Shutter button is pressed.

Caution

- It is normal to feel heat when using camera for a long time. • Click RESET button to reset the camera when it's dead.
- Please only use USB charger labelled "5V/1A".
- There is a 1 year warranty for Mokacam.

Warning

• Please remove the screen module from Mokacam and put the camera into the protect case if there is any serious shock or impact. The connect port between Mokacam and screen module may be damaged under shock or impact.

• Please always secure the camera in it's waterproof case when using it in or around water. Do not get the camera or the battery wet.

Q&A

Can not turn on Mokacam Please make sure the camera is charged fully.

Mokacam not responding

Please click the RESET button, or you can wait the battery runs out.

Playback on PC is not smooth If a certain video clip is ignored, might be the following reason:

2.Please make sure your PC has the required specifications for using the

1.Please change a compatible player software. Not all players support

"Playback mode". 3. Copy the video clips to your PC firstly and then open them.



歡迎使用

祝賀你獲得全新的Mokacam相機。這本快速入門指南 將告訴你基本的操作,與你的Mokacam捕捉生命中最 令人難以置信的時刻吧。

如需使用更多語言版本或了解更多功能,請到主頁下載 電子版快速操作指導書及用户手册。 www.mokacam.com

WiFi指示燈

功能設置鍵

microSD卡槽

/USB 充電口

Mokacam



Mokacam

快速入門指南

基本介绍

第一步 打開側面護蓋,把卡按圖 示插入内存卡槽。

使用前準備



www.mokacam.com

將micro USB充電綫接入

電源/拍攝鍵 工作指示燈

開關機

按下電源鍵(〇)),頂部指示燈閃下藍色,然後藍燈常亮, 表示開機成功。

按住 電源鍵(〇)),持續3秒鐘後,指示燈滅,表示已關機。

選擇照相/錄像模式 按功能設置鍵(🗨)選擇照相/録像模式。

使用相機WiFi

第二步

相機充電口。

打開WIFI 長按相機左側功能設置鍵(🌂) 2秒,WiFi指示燈閃爍,如相機 連接有屏幕模塊,顯示屏上將會顯示"WiFi ON"的字樣。

關閉WIFI 長按相機左側功能設置鍵(N)2秒,關閉WiFi。



連接相機APP

Mokacam應用程序允許您使用智能手機或平板電腦遠程控制你 的相機。實時觀看相機拍照畫面。查看照片和播放視頻、然後通過 電子郵件分享到你的Facebook、Twitter或者更多。

第一步

從 Apple AppStore 或 Google Play 搜索并下載安裝《Mokacam》。

第二步 長按相機功能設置鍵(🗨)2秒,

打開相機WiFi。 第三步

在手機或者平板電腦上開啓WiFi搜索,搜索到相機的WiFi




熱點名稱 "mokacam*****",然後點擊名稱開始連接。 輸入初始密碼 "1234567890"。

分享照片和視頻

請按APP上的提示操作。

相機外接屏幕

用一枚硬幣旋轉打開側蓋、插入可旋轉屏幕。

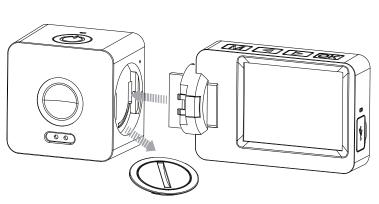

在連接外接屏幕時,可通過M鍵設置更多模式

1)縮時攝影模式

在正常録像 **2**或者照相模式 **6**下 ,按一下M,使用上下按鍵選 擇到縮時攝影。按一下OK鍵選擇關閉/1秒/3秒/5秒/10秒/30秒/ 1分鐘,來設定多長時間拍一段視頻或者一張照片。在錄像模式下 選擇縮時録影模式,顯示屏左上角出現 (😂) 。在拍照模式下選 擇縮時攝影模式,顯示屏左上角出現(🖙)。

2) 慢動作視頻模式

選擇在録影模式**2**下,按一下M鍵,使用上下按鍵選擇到慢動作, 按OK 鍵進入選擇打開/關閉慢動作視頻拍攝模式。開啓慢動作視 頻模式後,顯示屏左上角出現(

3) 循環錄像模式

選擇在録影模式₩下,按一下M鍵,使用上下按鍵選擇到循環録 像,按OK 鍵進入選擇關閉/ 1分鐘/3分鐘/5分鐘。視頻文件將按選 定的時間段進行保存。存儲卡滿後,相機自動按選定的時間段循環

覆蓋最早保存的視頻文件。

4) 連拍模式

選擇在照相模式 ⑥下 ,按一下M鍵,使用上下按鍵選擇到照片 連拍。在連拍模式下,相機在短時間內連續拍攝多張照片,選擇 包括3(3 張/秒),5(5 張/秒),10(10張/秒)。

5) 自拍模式

選擇在照相模式 🌀 下 ,按一下M鍵,使用上下按鍵選擇到自拍模 式。在自拍模式下,相機將在選定自拍時間後,自動拍攝一張照片。 選擇包括2秒後拍攝,10秒後拍攝。選擇自拍模式後,按下拍照鍵, 屏幕會出現秒數倒計時提醒。

注意

過熱,請關閉相機。 • 使用過程中,如有發現死機現象,請使用尖鋭的物體插入RESET

孔進行復位。 •建議使用充電器時,要使用5V/1A以上的充電器進行充電。 •本産品保修服務一年。

相機固定在頭盔、胸前、自行車前方等處,在可能遇到劇烈震動或 衝擊的場合使用時,請去除屏幕模塊,并盡量將相機裝入保護盒。 否則可能會造成屏幕與相機接口的損壞。

•在水下使用相機之前,請務必檢查確認防水盒的卡扣已扣好,因 個人原因導致進水造成的相機損壞,不在保修範圍。

常見問題解答

Mokacam無法開機 確保相機電池已充電。使用附帶的 USB 數據綫和電腦爲您的相

Mokacam按任意按鈕都無響應

請使用尖鋭的物體插入RESET孔進行復位,也可將相機斷電或 等候相機電量消耗完後重新充電、開機。 電腦回放不順暢

回放不順暢通常不是文件的原因。如果視頻片段被跳過,可能有 以 下原因: • 正在使用不兼容的視頻播放器。并非所有的視頻播放器都支持 H、264編解碼器,請嘗試更换視頻播放器。

部分"的最低系統要求。 • 正在以低帶寬的 USB 連接播放高碼率的高清視頻文件。請先 將文件傳輸至電腦,然後在電腦上回放。

• 電腦不符合高清回放的最低要求。視頻的分辨率和幀速率越 高

,對回放該視頻的電腦要求就越高。請確保電腦符合" 回放模 式

Mokacam



欢迎使用

基本介绍

电源/拍摄键

祝贺你获得全新的Mokacam相机。这本快速入门指南 将告诉你基本的操作,与你的Mokacam捕捉生命中最 令人难以置信的时刻吧。

如需使用更多语言版本或了解更多功能,请到主页下载 电子版快速操作指导书及用户手册。 www.mokacam.com

使用前准备

第一步 打开侧面护盖,把卡按图 示插入内存卡槽。



将micro USB充电线接入

下载用户手册请到:

www.mokacam.com

工作指示灯 功能设置键 🕄

WiFi指示灯

microSD 卡槽 😜

/USB 充电口

按下电源键(〇),顶部指示灯闪下蓝色,然后蓝灯常亮, 表示开机成功。

按住 电源键(🔘),持续3秒钟后,指示灯灭,表示已关机。

选择照相/录像模式 按功能设置键(图)选择照相/录像模式。

使用相机WiFi

第二步

相机充电口。

长按相机左侧功能设置键(🕙)2秒,WiFi指示灯闪烁,如相机 连接有屏幕模块,显示屏上将会显示"WiFi ON"的字样。



连接相机APP

Mokacam应用程序允许您使用智能手机或平板电脑远程控制你 的相机。实时观看相机拍照画面。查看照片和播放视频,然后通过 电子邮件分享到你的Facebook、Twitter或者更多

从 Apple App Store 或 Google Play 搜索并下载安装"Mokacam"。

第一步

第二步 长按相机功能设置键(🗨)2秒,

打开相机WiFi。


第三步 在手机或者平板电脑上开启WiFi搜索,搜索到相机的WiFi 热点名称 "mokacam*****", 然后点击名称开始连接。

分享照片和视频

请按APP上的提示操作。

相机外接屏幕

用一枚硬币旋转打开侧盖,插入可旋转屏幕。

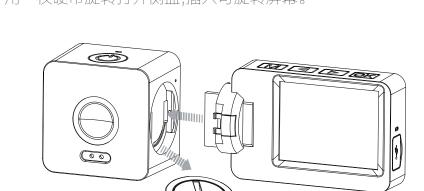

在正常录像 🅰或者照相模式 🎯 下 ,按一下M,使用上下按键选

输入初始密码 "1234567890"。

择到缩时摄影。按一下OK键选择关闭/1秒/3秒/5秒/10秒/30秒/ 1分钟,来设定多长时间拍一段视频或者一张照片。在录像模式下 选择缩时录影模式,显示屏左上角出现(全)。在照相模式下选 择缩时摄影模式,显示屏左上角出现(🔄)

在连接外接屏幕时,可通过M键设置更多模式

2) 慢动作视频模式

1)缩时摄影模式

选择在录像模式**烂**下,按一下M键,使用上下按键选择到慢动作, 按OK 键进入选择打开/关闭慢动作视频拍摄模式。开启慢动作视 频模式后,显示屏左上角出现(😂)。

3) 循环录像模式

选择在录像模式光下,按一下M键,使用上下按键选择到循环录像, 按OK键进入选择关闭/1分钟/3分钟/5分钟。视频文件将按选定的 时间段进行保存。存储卡满后,相机自动按选定的时间段循环覆盖 最早保存的视频文件。

4) 连拍模式 选择在照相模式 ⑥下 ,按一下M键,使用上下按键选择到照片 连拍。在连拍模式下,相机在短时间内连续拍摄多张照片,选择 包括3(3张/秒),5(5张/秒),10(10张/秒)。

5) 自拍模式

选择在照相模式 🌀 下 ,按一下M键,使用上下按键选择到自拍模 式。在自拍模式下,相机将在选定自拍时间后,自动拍摄一张照片。 选择包括2秒后拍摄,10秒后拍摄。选择自拍模式后,按下拍照键,

注意

•长时间使用相机时,发热属于正常现象,使用过程中如发现相机 过热,请关闭相机。 ●使用过程中,如有发现死机现象,请使用尖锐的物体插入RESET

•建议使用充电器时,要使用5V/1A以上的充电器进行充电。

个人原因导致进水造成的相机损坏,不在保修范围。

•本产品保修服务一年。

孔进行复位。

•相机与屏幕模块的连接处不可承受剧烈震动或外力冲击,如需将 相机固定在头盔、胸前、自行车前方等处,在可能遇到剧烈震动或 冲击的场合使用时,请去除屏幕模块,并尽量将相机装入保护盒。 否则可能会造成屏幕与相机接口的损坏。 •在水下使用相机之前,请务必检查确认防水盒的卡扣已扣好,因

常见问题解答

屏幕会出现秒数倒计时提醒。

Mokacam无法开机 确保相机电池已充电。使用附带的 USB 数据线和电脑为您的相

机充电。 Mokacam按任意按钮都无响应 请使用尖锐的物体插入RESET孔进行复位,也可将相机断电或 等候相机电量消耗完后重新充电、开机。

电脑回放不顺畅 回放不顺畅通常不是文件的原因。如果视频片段被跳过,可能有 以 下原因: • 正在使用不兼容的视频播放器。并非所有的视频播放器都支持

• 电脑不符合高清回放的最低要求。视频的分辨率和帧速率越高

,对回放该视频的电脑要求就越高。请确保电脑符合" 回放模 式 部分"的最低系统要求。 正在以低带宽的 USB 连接播放高码率的高清视频文件。请先

H.264 编解码器,请尝试更换视频播放器。

将 文件传输至电脑,然后在电脑上回放。

Mokacam



•長時間使用相機時,發熱屬于正常現象,使用過程中如發現相機

•相機與屏幕模塊的連接處不可承受劇烈震動或外力衝擊,如需將














Power/Shutter Button (*)

Wireless Status Light Setting Button 🌂

Powering Camera ON and OFF

To Power On: Press the Power/Shutter button (() .



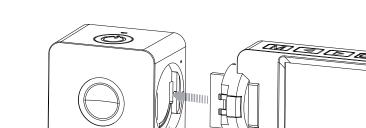

5(5 photos/sec), 10(10 photos/sec).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.