


# SKYROVER

BC

## Renegade

Instructions · Mode d'emploi · Instrucciones

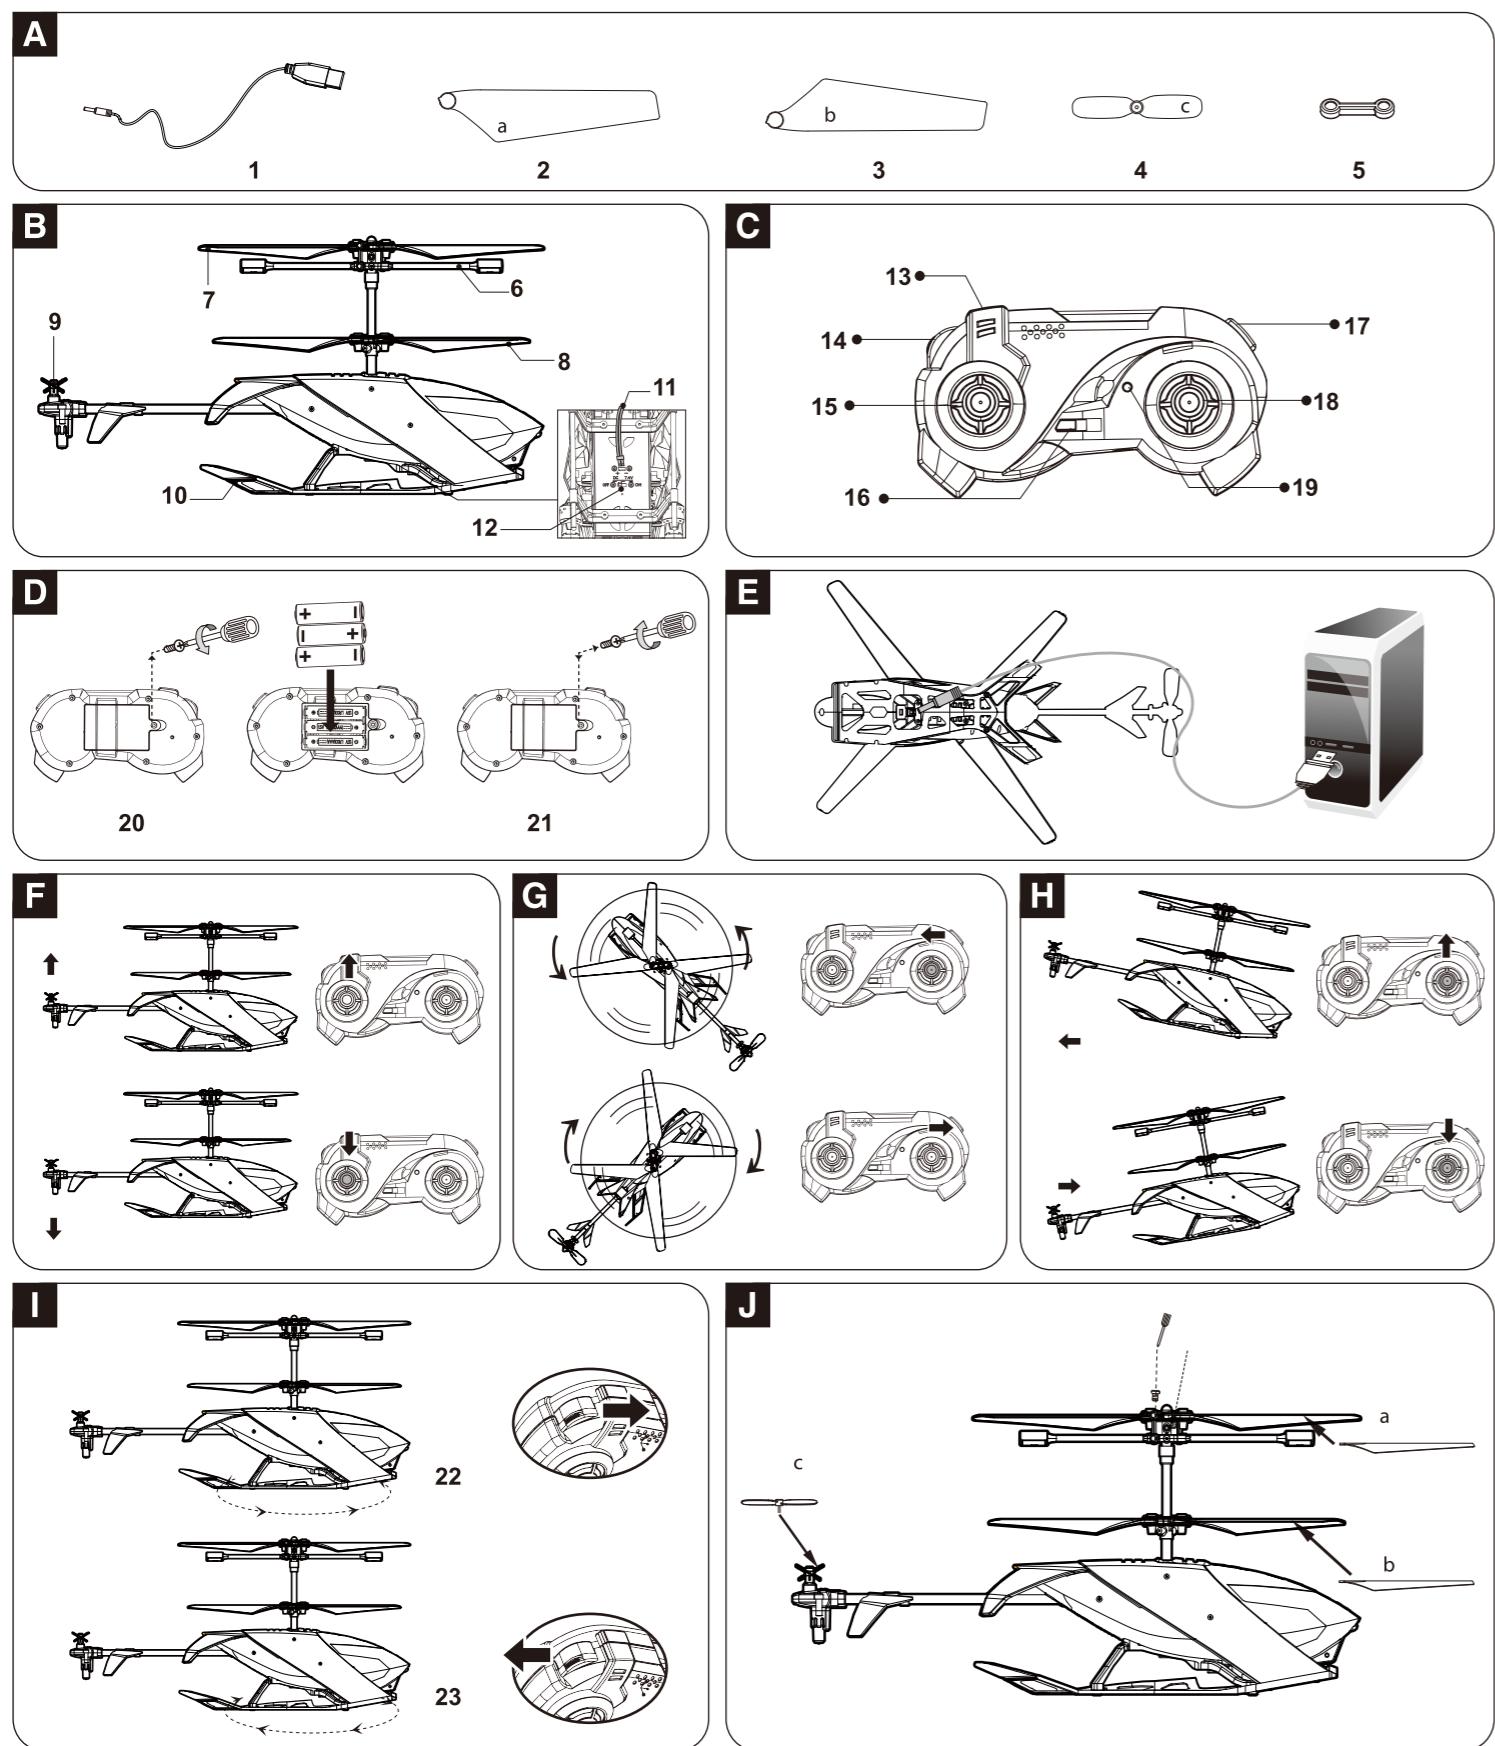

FR

## Table des matières et aperçu

### Fonctions et caractéristiques :

- Fonctions complètes : monter, descendre, tourner à gauche, tourner à droite, avancer, reculer, arrêter.
- Alimentation électrique : 3 piles alcalines AAA (LR03) pour la télécommande (piles vendues séparément), pile haute performance LiPo intégrée dans l'hélicoptère.
- Hauteur de vol : 30 mètres
- Portée de la télécommande : ≥ 30 mètres
- Durée de vol : ≥ 6 minutes

### Contenu de l'emballage : (fig. A)

- |                    |     |                 |     |
|--------------------|-----|-----------------|-----|
| 1.Adaptateur       | x 1 | 4.Pale de queue | x 1 |
| 2.Pale principal a | x 1 | 5.Attache       | x 4 |
| 3.Pale principal b | x 1 |                 |     |

### Composants : (fig. B & C)

- |   |  |                                |  |
|---|--|--------------------------------|--|
| 6.Bâche stabilisatrice                        |  | 13.Interrupteur du turbo       |  |
| 7.Pale principale a                           |  | 7.Compensateur                 |  |
| 8.Pale principale b                           |  | 10.Réducteur d'accélération    |  |
| 9.Pale de queue                               |  | 13.Interrupteur d'alimentation |  |
| 10.Tran d'atterrissege                        |  | 14.Interrupteur de lumière     |  |
| 11.Prise de charge                            |  | 15.Levier de direction         |  |
| 12.Interrupteur d'alimentation (MARCHE/ARRÊT) |  | 16.Levier de direction         |  |
| 13.Traîneau d'atterrissege                    |  | 17.Levier de direction         |  |
| 14.Compensateur                               |  | 18.Levier de direction         |  |
| 15.Réducteur d'accélération                   |  | 19.Témoin d'alimentation       |  |
| 16.Interrupteur d'accélération                |  |                                |  |
| 17.Interrupteur de lumière                    |  |                                |  |
| 18.Levier de direction                        |  |                                |  |
| 19.Témoin d'alimentation                      |  |                                |  |

### Directives de montage

#### Installation des piles de la télécommande : (fig. D)

Localiser la vis de verrouillage située derrière la commande et la retirer du couvercle du compartiment à piles; insérer 3 piles AAA (LR03) (fig. 20) en respectant la polarité, puis refermer le compartiment à piles (fig. 21).

#### Recharge de l'hélicoptère : (fig. E)

Charge à l'aide d'une prise USB : Mettre l'interrupteur d'alimentation de l'hélicoptère en position d'arrêt. Insérer la prise du câble de charge USB dans une prise USB d'ordinateur et raccorder l'autre extrémité dans la prise de charge de l'hélicoptère. Le témoin du câble de charge s'allume. La charge complète prend environ 40 minutes. Le témoin de charge s'éteint une fois l'appareil rechargeé.

#### Vol de l'hélicoptère :

- Mettre l'interrupteur d'alimentation en position de marche et déposer l'hélicoptère sur une surface plane.
- Mettre l'interrupteur d'alimentation de la commande en position de marche.
- La commande et l'hélicoptère se jumellent automatiquement en 3 à 5 secondes.

#### Monter et descendre : (fig. F)

Maintenir l'hélicoptère sur une hauteur fixe. Pousser le levier de direction vers la gauche pour tourner dans le sens contraire des aiguilles d'une montre et pousser le levier de direction vers la droite pour tourner dans le sens des aiguilles d'une montre.

#### Rotation : (fig. G)

Mouvoir le levier de direction fait avancer l'hélicoptère. Abaisser le levier de direction fait reculer l'hélicoptère.

#### Avancer et reculer : (fig. H)

Soulever le levier de direction fait avancer l'hélicoptère. Abaisser le levier de direction fait reculer l'hélicoptère.

#### Si l'hélicoptère tourne sur lui-même pendant le vol, suivre la procédure décrite ci-dessous pour stopper la rotation (fig. I)

21. Si l'hélicoptère tourne dans le sens contraire des aiguilles d'une montre, régler le levier de direction en le tournant dans le sens des aiguilles d'une montre.

Remarque : Réglé le bouton au bas pour faire cesser la rotation.

22. Si l'hélicoptère tourne dans le sens des aiguilles d'une montre, régler le levier de direction en le tournant dans le sens contraire des aiguilles d'une montre.

Remarque : Réglé le bouton au bas pour faire cesser la rotation.

#### Attention :

Si l'hélicoptère tourne sur lui-même en avançant ou en reculant, ou s'il oscille en volant, vérifier si les pales ne sont pas endommagées ou déformées.

#### Remplacement des pales : (fig. J)

- Retirer les vis qui retiennent les pales endommagées afin de les remplacer.
- Retirer les pales endommagées et s'assurer qu'elles correspondent à l'indication. (Vérifier sur la pale pour l'identification AA ou BB).
- Réinstaller les vis de verrouillage pour fixer solidement les pales.
- Pour retirer une hélice arrêtée endommagée, tirer solidement sur l'hélice jusqu'à ce qu'elle se détache.
- Pour installer une nouvelle hélice, aligner l'arbre du moteur avec la base de l'hélice et l'attacher du moteur et appuyer sur le dessus de l'hélice jusqu'à ce qu'elle soit entièrement assemblée. On devrait voir aucune portion des attaches du moteur.

Toujours faire voler dans un endroit dégagé, sans obstacle.

Nie faire voler dans des conditions météorologiques défavorables.

Nie faire voler à des températures inférieures à 45°F / 7°C.

## MISE EN GARDE :

DANGER DE SUFFOCATION: petites pièces.  
Ne convient pas aux enfants de moins de 3 ans.

ALPHA GROUP CO., LTD.  
Auldey Industrial Area,Wenguan Rd.,Chenghai,  
Shantou,Guangdong,China(515800)  
E-mail : auldeytoys@auldey.cn  
Tel : (86)20-38983278 Fax : (86)20-87358278

ALPHA GROUP US, LLC  
2100 E.Grand Ave Bldg A, 5th Floor El Segundo, CA 90245  
E-mail : customerservice@alphagroup-us.com  
Website : www.auldeytoys.us

©2017 ALPHA Tous droits réservés.

FABRIQUÉ EN CHINE



EN

## Contents and overview

### Functions and Specifications :

- Full function : Rise, Fall, Turn Left, Turn Right, Forward, Backward, Stop.
- Power supply : 3 AAA (LR03) alkaline batteries for remote controller.
- Batteries sold separately, built-in high-performance lipo battery for helicopter.
- Flight height : 30 meters
- Remote control distance : ≥30 meters
- Flight time : 2-6 minutes

### Pack List : (Fig.A)

- |                |     |              |     |
|----------------|-----|--------------|-----|
| 1.Adapter      | x 1 | 4.Tail Blade | x 1 |
| 2.Main Blade a | x 1 | 5.Fastener   | x 4 |
| 3.Main Blade b | x 1 |              |     |

### Components : (Fig.B & C)

- |                           |  |                    |  |
|---------------------------|--|--------------------|--|
| 6.Bâche stabilisatrice    |  | 13.Turbo Switch    |  |
| 7.Main Blade a            |  | 14.Timmer          |  |
| 8.Main Blade b            |  | 15.Throttle Lever  |  |
| 9.Tail Blade              |  | 16.Power Switch    |  |
| 10.Landing Gear           |  | 17.Light Switch    |  |
| 11.Charging Socket        |  | 18.Steering Lever  |  |
| 12.Power Switch(OFF / ON) |  | 19.Power Indicator |  |

## Assembly instructions

### Remote Control Battery Installation: (Fig.D)

Locate the locking screw on the back of the controller and remove it from the battery cover, insert 3 AAA (LR03)(Fig.20) batteries in correct polarity, and then close the battery cover(Fig.21).

### Charging helicopter : (Fig.E)

USB charging:  
Move the power switch on the helicopter to the "OFF" position. Insert the USB charging cable into the USB socket on a PC and connect it to the charging socket of the helicopter. The indicator on the charging cable will light up. The charging time will be about 40 minutes. When the charging is complete, the indicator light will turn off.

### Flying the helicopter :

- Move the power switch on the helicopter to the "ON" position and place the helicopter on a flat surface.
- Move the power switch on the controller to the "ON" position.
- Helicopter will automatically turn on after 3-5 seconds.

### Up and Down : (Fig.F)

When the helicopter flies steadily, you can slowly push the throttle lever up to make helicopter fly higher, or release the lever a bit to make helicopter fly lower. Only small amounts of lever position change are required for smooth flying.

### Rotation : (Fig.G)

Hold the helicopter at a steady height. Push the steering lever to the left to turn counter clockwise, and push the steering lever to the right to turn clockwise.

### Forward & Backward : (Fig.H)

When you push the steering lever up, the helicopter moves forward. When you push the steering lever down, the helicopter moves backward.

### If the helicopter spins during flight, follow the procedure below to stop the rotation. (Fig.I)

- If helicopter rotates counterclockwise, adjust the steering lever by turning clockwise. Note: Adjust the joystick until the rotation has stopped.
- If helicopter rotates clockwise, adjust the steering lever by turning counterclockwise. Note: Adjust the joystick until the rotation has stopped.

### Attention:

If the helicopter spins during forward or backward operation or constantly wobbles while in flight mode, check the blades for damage or warping.

### Blades replacement:(Fig.J)

- Remove the screws that lock down the damaged blade or blades to replace them.
- Remove the damaged blade or blades, check that they are proper marked blades. (check underneath the blade will be marked AA or BB).
- Reinstall locking screw to lock down the blades.
- To remove a damaged tail propeller gently up on the propeller until it is removed.
- To install a new tail propeller, fist align the bottom of the propeller opening with the motor pin and press on the top of the propeller until it is completely down. There should not be any of the motor pin exposed.

- Always fly in open space with no obstacles.
- Do not fly under adverse weather conditions.
- Do not fly in temperatures below 45°F / 7°C.

### Important safety information:

- Adult supervision advised. Keep away from obstacles and electrical hazards. Actual product styling and/or color may vary.
- Carefully open packages with safety scissors to avoid damaging product.
- Please retain all packaging and instructions for important information. Please remove all packaging materials before giving to children.
- If rotors become damaged or broken, do not fly. Flying with broken rotors may damage helicopter and/or lead to injury.

FOR LED PRODUCTS: It is rare but possible for seizures to be triggered by light flashes. To reduce exposure to such potential, do not flash lights directly into eyes.

Charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that in the event of such damage, the toy must not be used with this charger until the damage has been repaired.

### FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

### Battery safety information :

- Batteries are small objects.
- Replacement of batteries must be done by adults.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries for prolonged storage.
- Only batteries of the same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries of types of batteries (excluding standard).
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged (excluding LiPo batteries).
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- To be installed by adults only.

Charging unit to be used with the toy should be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure or other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.

## WARNING:

CHOKING HAZARD - Small parts.  
Not for children under 3 years.

**ALPHA GROUP CO., LTD.**  
Auldey Industrial Area,Wenguan Rd.,Chenghai,  
Shantou,Guangdong,China(515800)  
E-mail: auldeytoys@auldey.cn  
Tel : (86)20-38983278 Fax : (86)20-87358278

**ALPHA GROUP US, LLC**  
2100 E.Grand Ave Bldg A, 5th Floor El Segundo, CA 90245  
Tel : (844) 303-8936  
E-mail : customerservice@alphagroup-us.com  
Website : www.auldeytoys.us  
©2017 ALPHA All Rights Reserved.



ITEM NO. US858250说明书正面 2017-9-28

ES

## Contenido y descripción general

### Funciones y especificaciones:

- Funcionalidad completa: Elevarse, descender, girar a la izquierda, girar a la derecha, hacia adelante, hacia atrás, detenerse.
- Funcionamiento de 3 baterías alcalinas tamaño AAA (LR03) para el controlador remoto (las baterías se venden por separado), batería de litio-polímero de alto desempeño incorporada para el helicóptero.
- Altura de vuelo: 30 metros
- Distancia del control remoto: ≥30 metros
- Tiempo de vuelo: ≥6 minutos

### Lista del empaque: (Fig. A)

-