EUT Internal Photos

Figure 11 Controller P2UL, General Appearance (Top & Side View)

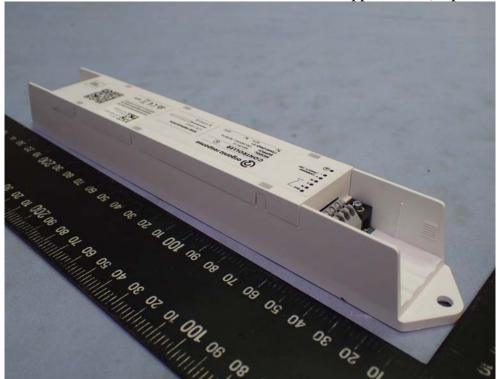
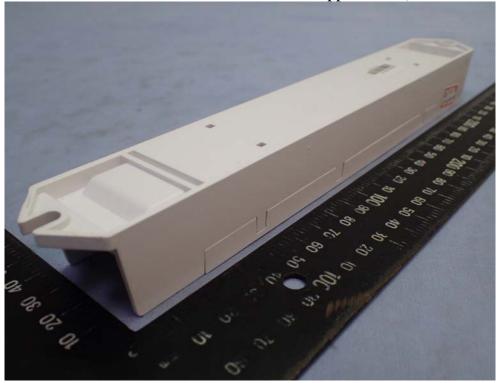



Figure 12 Controller P2UL, General Appearance (Bottom & Side View)





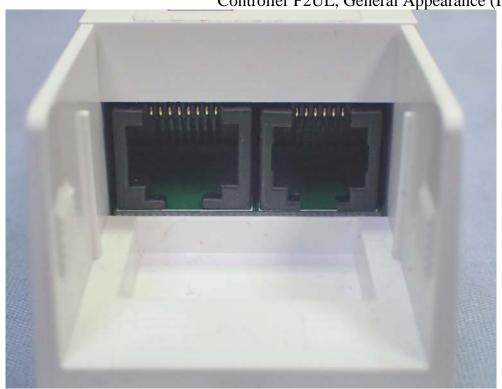


Figure 14 Controller P2UL, General Appearance (IO View)




Figure 15 Controller P2UL, General Appearance (Label View)



Figure 16 Controller P2UL, Internal View (Remove Cover)





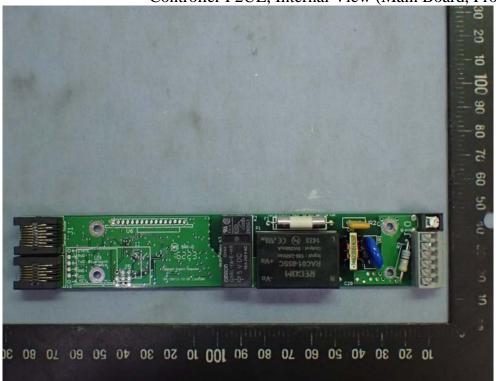


Figure 18 Controller P2UL, Internal View (Main Board, Back View)

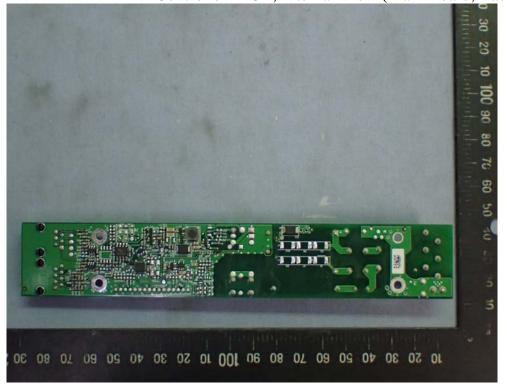


Figure 19 Sensor Node, General Appearance (With JST-RJ45 Cable)

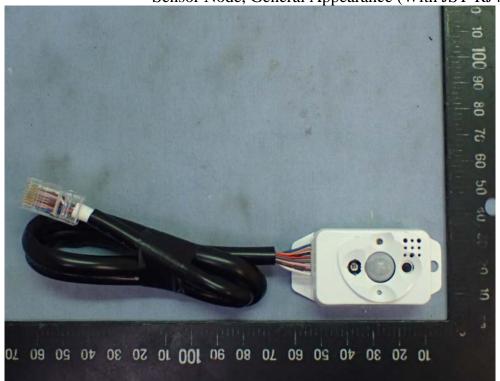


Figure 20 Sensor Node, General Appearance (Remove JST-RJ45 Cable)

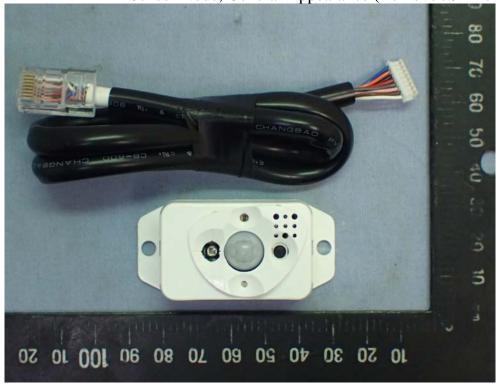






Figure 22 Sensor Node, General Appearance (Bottom & Side View)



Figure 23 Sensor Node, General Appearance (IO View)



Figure 24 Sensor Node, General Appearance (Label View)

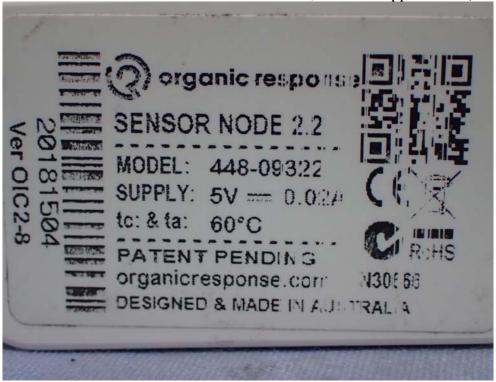


Figure 25 Sensor Node, Internal View (Remove Cover)

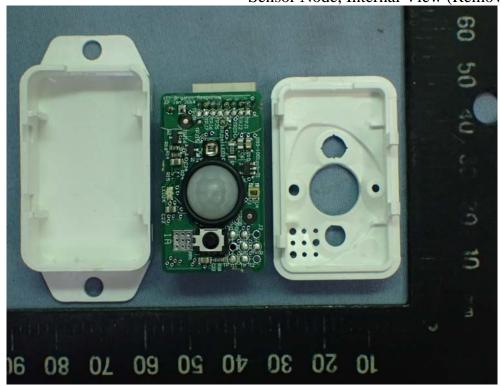
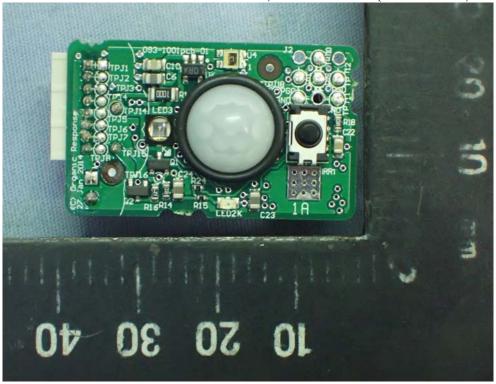


Figure 26 Sensor Node, Internal View (Main Board, Front View)





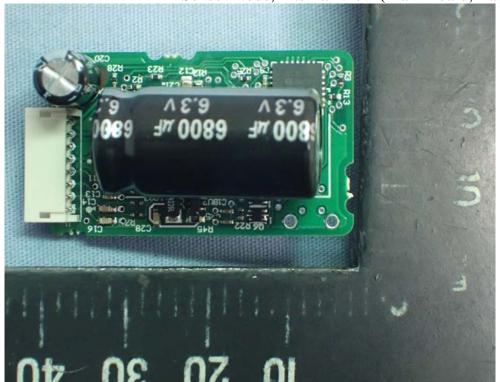


Figure 28 Sensor Node, Internal View (Main Board, Back View)

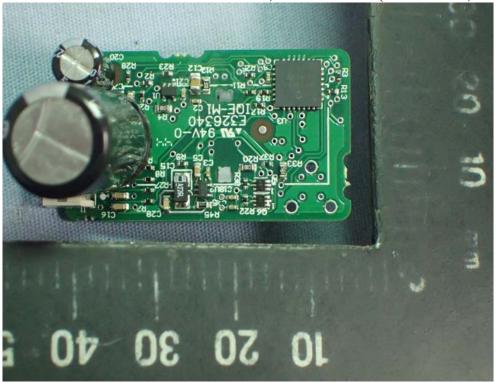


Figure 29 Backpack, General Appearance (With RJ12-RJ12 Cable)

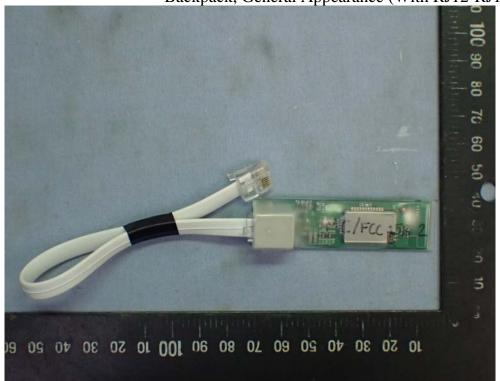


Figure 30 Backpack, General Appearance (Remove RJ12-RJ12 Cable)

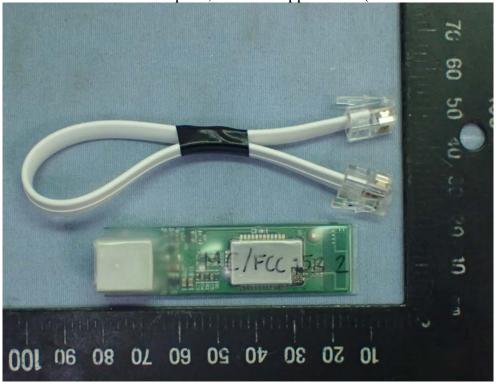


Figure 31 Backpack, General Appearance (Front View)

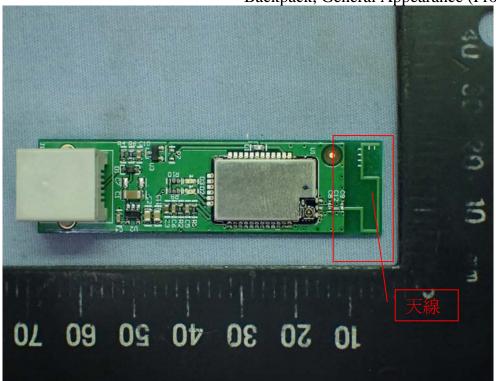


Figure 32 Backpack, General Appearance (Back View)

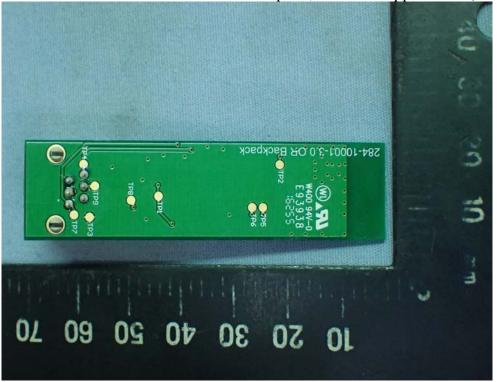


Figure 33 Backpack, General Appearance (IO View)

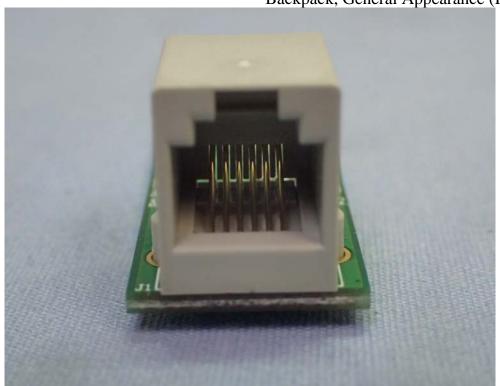


Figure 34 Backpack, Internal View (Remove Cover)

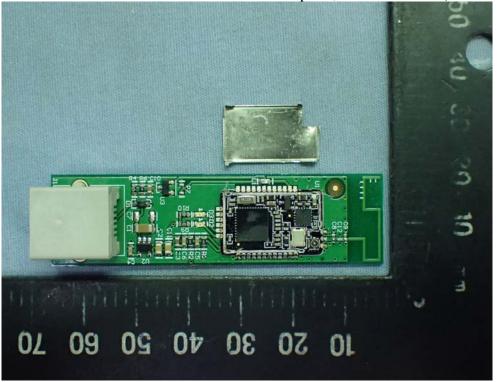


Figure 35 BT Module, (Front/ Back View)



Figure 36 BT Module, (Remove Cover)

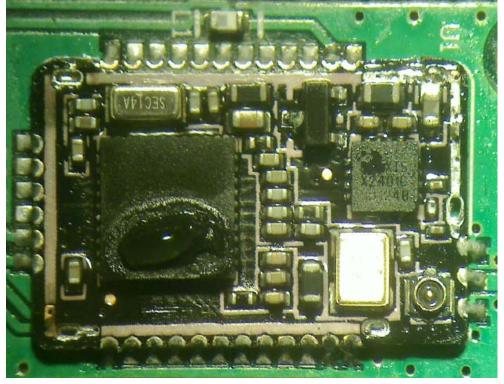


Figure 37 Wall Switch, General Appearance (Top & Side View)

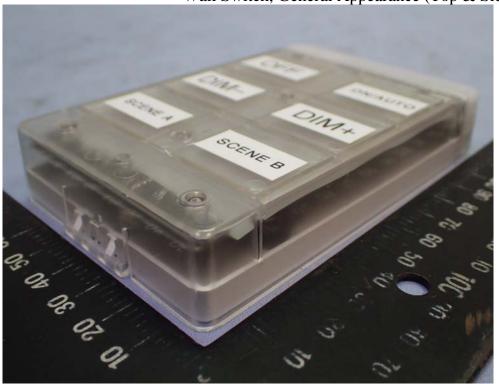


Figure 38 Wall Switch, General Appearance (Bottom & Side View)

