| WARRANTY CARE            | MICGEEK |
|--------------------------|---------|
| Model:Q9  Purchase Date: |         |
|                          | MicGeek |

FCC Warning:

following measures:

technician for help.

undesired operation.

data with PC function.

o Reorient or relocate the receiving antenna.

o Increase the separation between the equipment and

o Connect the equipment into an outlet on a circuit different from that to which the receiver is

o Consult the dealer or an experienced radio/TV

your authority to operate this equipment.

Caution: Any changes or modi?cations to this device not explicitly approved by manufacturer could void

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

Note: the Mini USB port is used for charge only, the USB Port is used for discharge only, without exchanging

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

| MICGEEK |  |
|---------|--|
|         | 25 (d. 22 1)<br>26 27 10 28              |
|         | # (f # # # # # # # # # # # # # # # # # # |
|         |  |
|         |  |
|         |  |

| 1.Introduction                   |
|----------------------------------|
| 2.Components                     |
| 3.How To Use                     |
| 4.Malfunction & Trouble Shooting |
| 5.Charging Instruction           |
| 6.Parameters                     |
| 7.Warranty Service               |
|                                  |
| Preface                          |

| reface |  |
|--------|--|
|        |  |

Thank you very much for choosing Micgeek, we believe that this product will bring you so much convenience and colorful life. Please read this user manual carefully before using the product. Please keep this manual for later reference after reading it. If you have any question or suggestion, please visit official website WWW.MICGEEK.COM for more information and support.


# 01.Introduction

| Structure Diagram                                |  |
|--|--|
| Microphone head  Bass Treb  Menu  Vol  Last Song | Mixer Accompaniment On/Off Button Next Song Pause/Play |
|  |  |

**USB** Port



# 02. Components

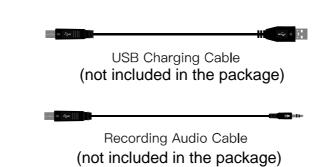

# 03. How To Use

# 3.1 Instruction

3.1.1 Turn on the microphone: Press the power button for 3 seconds to turn on or turn off the microphone; The blue light will show up when the device is on. 3.1.2 Bluetooth Connection: Open the bluetooth on your phone and scan the bluetooth devices, select

"Q9" to connect There will be a notice voice

- after their successful connection. 3.1.3 Adjust the settings on their operating platform to fit most for your singing demand. 3.1.4 Start Singing: During your singing, all the operations like Play/Pause, Last Song/Next Song can be done on your
- Once the device was connected with your phone, they will connect automatically next time without setting again. If any phone call come during the use, you can press "Play/ Pause" button to switch into the phone call and talk by the If you only want to listen to the music by the microphone, you can set at the minimum of the voice volume

mobile phone or on the microphone.



#### the song and start singing and recording it.

# 3.3 Apple Mobile Phone Bluetooth Recording 3.3.1 Link the

- 3.3.2 Slide up "Q9", a " Q9" ar (mobile p device, v
- 3.3.3 Save and

volume; The accompany volume button is to adjust the

## 3.4 Play Songs By U Disk

music volume.

3.4.1 Plug the U disk to USB port, the microphone will detect all the. mp3 files and play automatically. You can press not available to record when using the U disk) 3.4.2 When playing songs by U disk, you can control the

3.5.1 Q9 microphone has auto detection for Android and iOS phone systems. Once the mobile phone connected with the microphone, its system would be detected

# 3.2 Android Phone Recording

can choose manually. When the manual selection is not matched with the actual phone system, the microphone. will still detect the right system and connect automatically. 3.5.2 Q9 microphone can also detect Symbian system; Please use the recording cable when recording the songs under iOS system; Authentic iOS system does

recording cable, the bluetooth connection will stop 3.2.2 Open one Karaoke APP or Music Player APP; Select automatically.

# 04. Malfunction & Trouble Shooting

| he bluetooth, open any Karaoke APP or Music APP, click and start singing;   |  | Issues                      | Reason  | Trouble Shoot   |
|---|--|-----------------------------|---|---|
| pward on your phone main menu, click the appear selection menu "iPhone speaker", and "iPhone", select "iPhone speaker", phones play music at this time, Q9 as voice input without the accompaniment music), start recording and play the tape, can enjoy high quality recording |  | Power light doesn't<br>work | Low battery or bad connection with charging cable           | Charge correctly, chec<br>connection part or cha<br>cable |
|   |  | No voice from microphone    | Didn't turn on or adjust the voice volume                   | Turn on the device and adjust the voice volume            |
|   |  | No reverb effect            | Mixer button didn't open                                    | Adjust the mixer to the approprite location               |
|   |  |                             | Not compatible or bad<br>e performance of the audio<br>chip | Change another mobile phone                               |

not support bluetooth data transmission.

Remark: To save the song you recorded, please operate

according to your phone settings. When connecting the

Noise when singing or recording Environmental noise or bad mobile phone signal Move to quite place and keep the distance with mobile phone Accompaniment Bluetooth distance is too far or interruption under the bluetooth connection bluetooth connection Bluetooth distance is too far or move close to the mobilephone and avoid the obstacle

#### operating buttons to pause or switch the songs. ( It is Accompaniment The voice volume of mobile volume is too small or even no sound The voice volume of mobile phone or music player tool; download mus files with clear sound; voice volume by adjusting the accompany button. 3.4.3 The voice volume button is to adjust the recording Failed to connect the bluetooth The bluetooth distance is too far or another phone has connected or stop the connection on another phone

# 3.5 System Mode Adjustment

Surreal sound effect under the bluetooth or battery power is too low Lower down the media voice, or charge the battery Failed connection to Iphones; Can't record songs on some APPs IOS system doesn't support bluetooth connection; bluetooth setting doesn't support recording function IOS system doesn't support coording to record by audio recording cable

#### automatically. If it is failed to detect the system, you 05. Charging Instruction

- 5.1 When the voltage is too low, the device will shut down
- automatically 5.2 Use the standard USB and adaptor cable to charge; The red light will come up during charging
- 5.3 The charging time is 3~4 hours; The red light will go out when fully charged 5.4 This microphone lasts 11~14 hours under normal use

## 06. Parameters

| Microphone Model                | Q9                                 |
|---------------------------------|------------------------------------|
| Pickup                          | Electrical Condenser               |
| Output Wattage                  | 5W*2( Dual Speaker)                |
| Frequency Response<br>Range     | 30Hz~20KHz                         |
| Maximum Sound<br>Pressure Range | >115dB 1Khz THD <1%                |
| Resistance                      | 2*4Ω                               |
| Mix Model                       | Echo Sound Reverberation           |
| Connection                      | Wireless Bluetooth                 |
| Battery                         | 3.7V Polymer Lithium Battery       |
| Battery Capacity                | 2600mah                            |
| Battery Life                    | 11~14H                             |
| Charging                        | DC5V/ 1A                           |
| Charging Time                   | 3~4H                               |
| Material                        | Alumium                            |
| Туре                            | Handset                            |
| Usage                           | Mobile Karaoke; Family KTV; Speake |
|                                 |                                    |

### 07. Warranty Service

return. Please read carefully below:

warranty service from us

Dear customers, thank you very much for using our products, in order to guarantee your benefit and right, we make the statement on the warranty service that manufacturer and distributors should provide, including repair, replacement,

- 1.<Warranty Card> is the necessary credential to get free
- 2. In accordance with the principle of sales persons responsible for their warranty, for quality problems, customer please contact the distributors with the "Warranty Card", the distributors provide warranty services to customers, we

manufacturer will provide support services to distributors

- 3. Company commit: Quality issues within 1 year after sales, company provide the free repair service; If the product exceeds the warranty date, for any quality issue, company provide life time repair service under a charge of the tools fee; Please fill in the warranty card when purchasing from
- 4. The following circumstances are not covered by warranty
- 4.1 Exceeds the available warranty date 4.2 Artificial damage by operating or repairing unproperly 4.3 Unproperly opening or repairing damage caused by
- unauthorized repairman 4.4 No <Warranty Card> 4.5 Content of the <Warranty Card> is unmatched with
- the product information or artificially changed 4.6 Damage caused by force majeure
- 5. The final interpretation belongs to the company;