
EXHIBIT C - EUT INTERNAL PHOTOGRAPHS


EUT – Uncover View




EUT – Uncover View

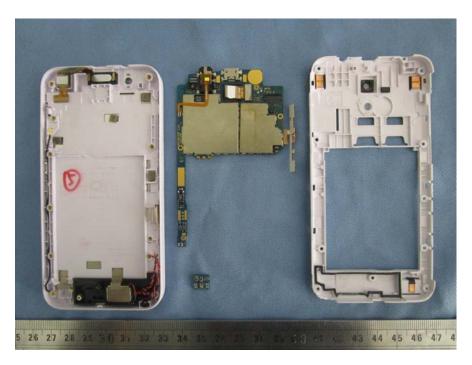


EUT – Mainboard Top View

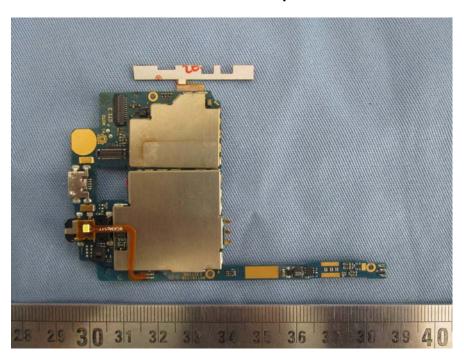


EUT – Mainboard Bottom View

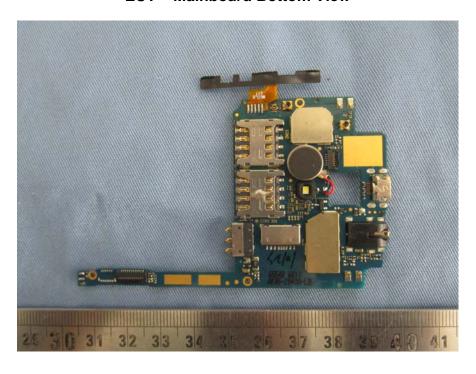


EUT – Mainboard Top Uncover View

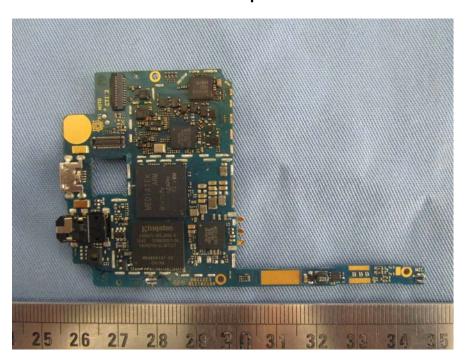


EUT – Mainboard Bottom Uncover View

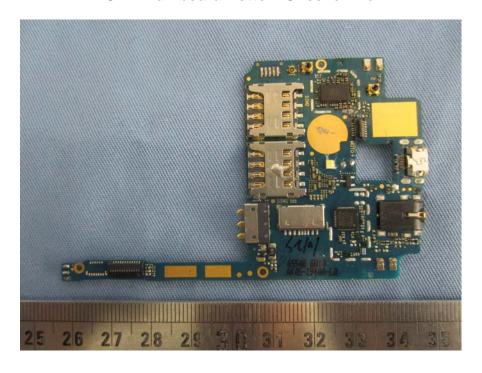

EUT – Antenna Board Top View

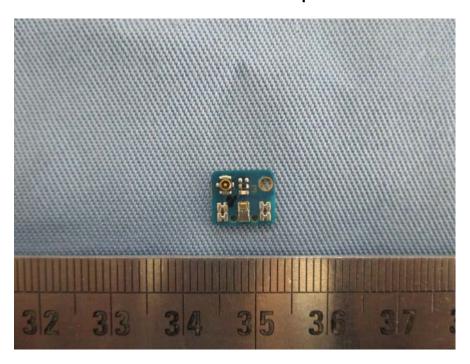

EUT – Antenna Board Bottom View

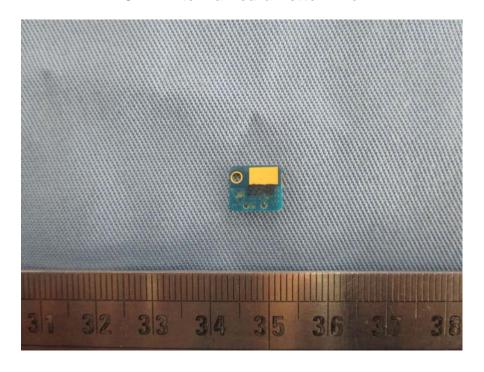

EUT -GSM&WCDMA<E Antenna View




EUT –BT&WIFI&GPS Antenna View




EUT – LTE RX Antenna View




EUT - GSM&WCDMA<E Chip View

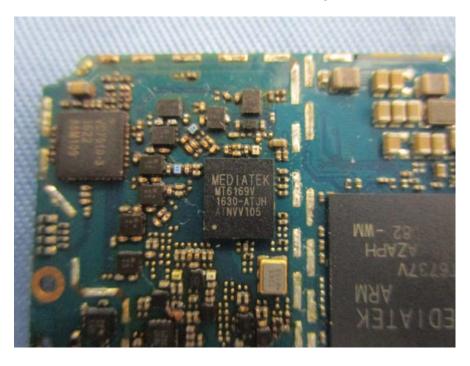

EUT – Main Chip View

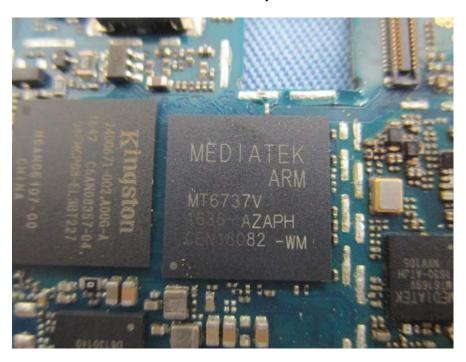

EUT – BT&Wifi&GPS Chip View

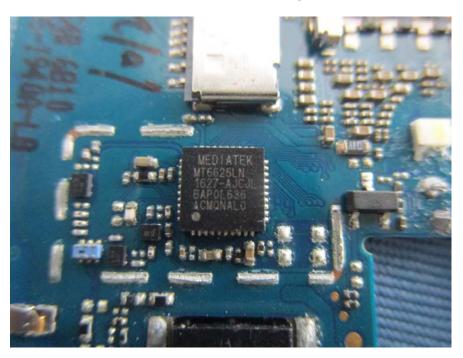

EUT – Battery Top View



EUT – Battery Bottom View



EUT – Battery Label View

Li-ion Rechargeable Battery 1600 mAh Model: FD118i Restrictive Voltage: 3.7V Charging Voltage: 4.2 V

- -Use the authorized charger only.
- -Never disassemble by yourself.
- -Never short-circuit the battery.
- -Dispose the battery properly.
- -Do not expose battery to open flames, could cause explosion.

GB/T 18287-2013