



USER MANUAL 产品说明书 製品説明書

PICKOV TS816B

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Power on/Power off 开机/关机 電源がオン/オフ

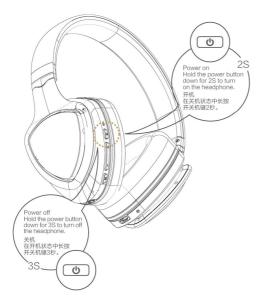

Directions 操作方法

Hold the power button down for 2S to turn on. Hold the power button down for 3S to turn off.

在关机状态中长按开关机键2秒。 在开机状态中长按开关机键3秒。

電源がオフの状態で電源ボタンを2s押してください。電源がオンの状態で電源ボタンを3s押してください。

Voice 声音提示 音声

Power on Power off

LED Indicator 指示灯 ランプ

Slow flash of blue LED light, once every 2 seconds. 蓝光慢闪,2秒1次。 青色でゆるやかに点滅、2秒ごとに1回。



配对模式 ペアリングモード



Directions 操作方法

- Steps for pairing:
 1. While the headphone is off, hold the power button down for 5 seconds.
- seconds.

 2. The LED will begin flashing quickly, 2X each second to confirm that you are in BT pairing mode and ready to discover the headphones on your source device like a smartphone.

 3. The headphones will show up on your smart device as PICKov
- TS816B.

Special Notes:

- 1. The headphone will enter into pairing mode 5S after it is turned on and not connected with the previously paired device.

 2. The headphone will enter into pairing mode, when it is disconnected from the currently connected device(eg. cell
- phone,computer).

 3. If the headphone is not connected with any device for 10 minutes, it will be turned off automatically.
- 在关机状态中长按开机键5秒进入配对模式, 蓝牙设备编号。PICKov TS816B
 开机后5秒钟没有连上配对的产品,进入配对模式。
 在连接模式,断升主设备(手机,电脑等),进入配对模式。
 若10分钟没有连接产品,自动关机。

- 1. 電源がオフの状態で電源ボタンを約5秒程度長押しでペアリングモードになります。Bluetooth設備コード: PICKov TS816B
 2. 電源がオンにしたら5秒でBluetoothデバイスと接続されない場合、ペアリングモードになります。
 3. 連接モードで接続先機器(携帯、パソコンなど)との接続が切られたら、ペアリングモードになります。
 4. Bluetoothデバイスと接続されない場合、約10分後に自動的に電源がオフにかります。
- 源がオフになります。

Voice 声音提示 音声

Pairing

LED Indicator 指示灯 ランプ

Quick flash of blue and red LED lights alternatively, twice every 1 second during pairing process. 蓝红光交替快闪,1秒2次。 赤色と青色更迭で点滅、1秒ごとに2回。



Connected Mode 连接模式 連接モード



Voice 声音提示 音声

Connected

LED Indicator 指示灯 ランプ

When connected, slow flash of blue LED light, once every 3 seconds. 连接成功后,蓝光慢闪,3秒1次。 接続成功の場合、青色でゆるやかに点滅、3秒ごとに1回。



7

Directions 操作方法

If you wish to clear your headphone's paired device memory, please hold down the power button and muti-function button simultaneously for 3 seconds.

同时长按开机键和多功能键3秒,复位。


電源ボタンとマルチファンクションボタンを同時に約3秒 押したら、リセットします。

LED Indicator 指示灯 ランプ

The light will turn off. 灯灭。 消灯**します**。



Charging / Low battery 充电模式/低电模式 充電モード/低電モード

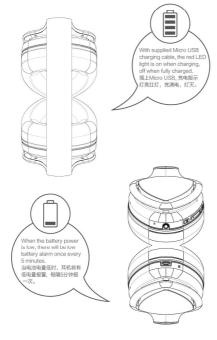

Directions 操作方法

Micro USB cable should be plugged into a power source like a phone charger. With supplied Micro USB charging cable, the red LED light is on when charging, off when fully charged.

插上Micro USB, 充电指示灯亮红灯,充满电,灯灭。

マイクロUSBと接続したら、充電ランプ赤色に点灯します。 充電完了したら、消灯します。

When the battery power is low, there will be "low battery" alarm once every 5 minutes.

当电池电量低时,耳机将有低电量报警,每隔5分钟报一次。 電池が低い場合、イヤホンは低電量を通報し、5分ごとに1回。



Product overview 按键 ボタン



【1】Power button / 开关机键 / 電源ボタン

【2】Volume up button / 音量"+"键 / 音量調整ボタン+

Short press over the volume up button will increase the volume, there are 15 volume levels. The default volume is volume level 11.Long press over the volume up button will play next song.

短按音量增加,到最大音量有提示,总共音量分15级, 开机 默认音量默认是11级, 长按 "+" 键切换到下一曲。

音量調整+ボタンを押して、音量が大きくなります、最大音量になったら提示音がします、音量調整は15級に分けられます、電源をオンにしたら、音量の初期値は11級です;音量調整+ボタンを長押しすると、曲送りします。

【3】Volume down button / 音量"-"键 / 音量調整ボタン -

Short press over the volume down button will decrease the volume, long press over the volume down button will play previous song.

短按音量减少;长按"-"键切换到上一曲。

音量調整 - ボタンを押して、音量が小さくなります; 音量調整 - ボタンを長押しすると、曲戻りします。

【 4 】Multi-function button / 多功能键 / マルチファンクションボタン

Long press over this button will have iphone enter into Siri mode. One short press over this button to answer phone call, press again to end phone call. One short press to pause the music playing.

长按此键(苹果手机进入Siri模式),有来电时单击接电话,再单击,挂电话,播放音乐时单击暂停。

このボタンを長押しして(Iphoneがsiriモードになります)、電話着信時クリックしたら、電話をでます。もうクリックしたら、電話が切れます。音楽再生中クリックしたら、像は



Cable MIC Control 线控 サブ・コントローラー



Directions 操作方法

When out of battery power, you can still use the headphone with the supplied cable MIC control:

- Play music or pause
 Answer or end phone call
 Double press for next song
 Triple press for previous song
- ·播放或暂停歌曲或视频 ·接通或挂断来电 ·连击2次进入下一曲 ·连击3次进入上一曲

- ・歌やビデオの再生・一時停止 ・電話の応答・拒否 ・連続して2回クリックすると次の曲へ ・連続して3回クリックすると前の曲へ

WARRANTY CARD

Thank you for choosing dioo headphone, for the sake of your rights, the following services are provided:

- Warranty service: replacement service within 15 days from the date of the purchase. (Note: no cosmetic damage, no damage to the accessories), one-year warranty; users can ask dealers to provide warranty service.
- 2. No warranty service will be provided, if the headphone is damaged due to the following reasons:
- 2.1 The warranty has expired.
- 2.2 Cable, Microphone, Mic control and housing are damaged due to inappropriate use. Or such damages are caused by an unauthorized service provider.
- 2.3 Improper storage: speakers and microphone can be affected by damp if the headphone is exposed to moist environment for a long period of time.
- 2.4 The exterior packaging and accessories given as free gifts, the additional configuration and free gifts offered by the sales staff beyond the standard product kit;
- 2.5 Hardware damages by using inappropriate audio source or a forced insertion of the earphone plug into an unmatching socket.
- 3. Please present a valid purchase voucher or invoice when warranty service is needed.
- 4. Our company reserves the right of interpretation of the after–sales service policy and the right to make changes, we appreciate your kind understanding that you might not be informed if changes are made.

Please contact your retailer for assistance www.diooaudio.com/Support.html

保修卡

感谢您选购dioo耳机,为维护您的权益,本公司品牌产品全面执行中国法定的三包服务及提供如下的售后服务:

- 一、保修服务:自购买之日起15天内包换服务(注:在外观无损,包装配件无破损外观干净并且齐全的前提下),一年的保修服务;用户可以委托经销商进行保修服务。
- 二、若有以下原因造成的耳机坏,恕不提供保修服务:
- 1、产品序列号标签有涂改、替换、撕毁等现象,或产品没有序列
- 号、质保凭证上的产品型号、编号与产品实物不相符的;
- 2、产品超过dioo品牌耳机中国规定的质保期限;
- 3、非正常使用导致耳机信号线、麦克风、线控、耳壳破裂以及人为引起的损坏,或由非经本公司授权维修点修理引起的损坏;
- 4、不当存储:如耳机长时间暴露在潮湿环境中使扬声器、麦克风受潮浸水;
- 5、外包装部分及内附的赠品附件、销售人员承诺的产品之外的附加配置和赠品:
- 6、使用非适配音源或由于强行插入非对应接口所造成的硬件损坏。
- 三、要求保修服务时请携带此卡及有效购机凭证,妥善保存,请勿 自行修改,否则将被视为作废。
- 四、本公司保留对该产品售后服务条例的最终解释权,并有随时更 改权限;如有更改恕不另行通知。

请联系当地零售商获取帮助 www.diooaudio.com/Support.html

保証カード

本製品をお買い上げ頂き誠にありがとうございます。ご権益を守るために、 当社の商品は全部中国の法律が定めた三包(修理、取り替え、返品の三つの 保証)サービスを執行し、且つ下記アフターサービスを提供いたします:

- 一、修理保証サービス: 購買日から15日以内取り替えサービス (注: 外見が損傷無し、包装部品も破損無し且つ外見がきれいで揃っているという前提の下で)、一年の保証サービスを提供します。お客様は販売代理店に依頼して保証サービスを行うことができます。
- 二、下記の原因によるイヤホンの損傷は、保証サービスを提供しないのをご了承ください:
- 1、製品のシリアル番号ラベルは書き直し、取り替え、引き裂きという現象があり、又は製品がシリアル番号無し、品質保証書に載せた製品型番、番号が製品実物と一致しない場合。
- 2、製品はdiooブランドイヤマフに関して中国が規定した品質保証期限を 超えた場合。
- 3、不適切な使用によるイヤホンケーブル、マイク、コントローラー、ウッドハウジングの損傷及び人為的損傷、又は当社の授権修理店でない場所で修理を行うことによる損傷の場合。
- 4、不適切な保管: イヤホンが長時間で湿気っぽい環境に晒し、スピーカー、マイクが湿ったり浸水したりする場合。
- 5、外包装部分及 σ 0 付属品や景品、販売人員 σ 3 が承諾した製品以外 σ 6 付加配置や景品。
- 6、不適合音源を使用し、又は強制的に非対応ジャックに差し込んで発生 したハードウェア損傷。
- 三、保証サービスを要求する時にこの保証書及び有効購入証憑を持ってきてください。適切に保管し、自らで改修しないでください。でなければ無効とされます。
- 四、当社が当該製品のアフターサービス条例に対する最終解釈権を保留 し、そして随時に変更する権限があります。変更があれば別途に通知しな いのをご了承ください。

現地の販売店までお問い合わせください www.diooaudio.com/Support.html

Name/保修信息/保証情報:
Model/型号/型番;
Color/颜色/ カラ ー:
Retailer/销售商/販売店:
Date of Purchase/销售日期/販売期日:
Invoice number/销售单号/販売伝票番号:
Phone number/联系方式/連絡先・
THO ICE HAIL BOOK PASSES OF A CENTRAL OF
Shipping address/收货地址/受取人の住所:
Description of problem/故障说明/故障説明・

- * In order to make sure after sales service are carried out properly, please help fill in above information.
- * 为保证售后流程顺利,请务必填写以上信息。
- * アフターサービスプロセスのスムーズを保証するために、ぜひ上記の情報をご記入ください。