

**AXENT**  
SWITZERLAND

# USER MANUAL

Intelligent toilet

Primus



**Thank you for your trust.**

We really appreciate your purchase of AXENT products. Before using the products, please read this user manual to ensure safe and proper use.

Please follow the instructions written in this manual.

After reading this manual, please preserve it for future.

The content of the manual might change as a result of the constant upgradation of AXENT products while the update information will NOT be informed.

Illustrations in this manual are only for reference. They are NOT pictures of real items.

We sincerely hope that you could understand the methods to use the product after reading this user manual.

In order to guarantee the best performance of the product and your safety, we sincerely advice that:

**Please read this manual carefully before using this product for the first time.**



**■ The following warning signs warn you of dangerous situations and their severity:****DANGER!**

High risk, lethal hazards, severe injuries

**WARNING!**

Medium risk, severe injuries

**CAUTION!**

Low risk, minor injuries

**NOTE!**

Damage to property

## 1.1 NORMAL USE

The AXENT shower toilet can be used as a normal WC seat. Its use is limited exclusively to enclosed spaces.

Any other usage will be deemed as not corresponding with normal usage. AXENT undertakes no liability for abnormal usage.

## 1.2 IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USING

**WARNING!****To reduce the risk of burns, fire, or injury to persons**

- Close supervision is necessary when this product is used by, on, or near children or invalids.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

### SAVE THESE INSTRUCTIONS

---

# SAFETY

---

## 1.3 SAFETY INSTRUCTIONS

Carefully read and observe the following safety instructions!

### Information for the user

- Children and persons with insufficient knowledge or experience in handling the device, or who have limited physical, sensory or mental capabilities, may only use the device following proper instruction or when supervised.
- Make sure that children cannot play with AXENT shower toilet.

### Avoid malfunctions and damage to the product as a result of improper use.

- If AXENT shower toilet is moved from a cold location to a warm location, condensation may form. Leave the unit switched off for a few hours.
- Do not install AXENT shower toilet in rooms where there is a danger of frost. The room temperature must not be less than 39 °F (4°C).
- Do not place open fire sources, candles, cigarettes, or similar, on AXENT shower toilet.
- Do not reuse the old hose-set. Please use the new one only.
- Do not expose the AXENT shower toilet directly to water.
- Do not climb on or stand on the product.
- Do not place any heavy objects on the lid.
- Do not push the lid down with excessive force.

### Repairs must only be carried out by a person with the necessary expertise

- Do not carry out modifications, tamper with, install additional equipment or attempt to repair the AXENT shower toilet.
- Improperly performed repairs can lead to accidents, damage and malfunctions.

### Information on the use of batteries

- Keep batteries out of the reach of small children. Batteries can be life-threatening if swallowed. If a battery has been swallowed, call for medical assistance immediately.
- Batteries may not be recharged, reactivated by other means, dismantled, exposed to fire or short-circuited.
- Always remove empty batteries from the remote control immediately. They may leak and cause damage.
- Do not insert new and old batteries together in the remote control.
- Clean the battery and contacts before inserting the battery. Note the proper polarity.
- Remove the batteries if you do not use the remote control for an extended period.
- Do not expose the batteries to extreme conditions: avoid contact with hot surfaces or direct sunlight. Otherwise there is a risk of leakage.
- If battery acid has leaked, avoid contact with skin, eyes and mucous membranes. In case of contact with the acid, flush the affected areas with large amounts of clean water and consult a doctor immediately.

## **1.4 FCC INSTRUCTIONS**


- Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

## PRODUCTS


---

■ This manual is applicable for the following products:

- ▶ [W330-0431]

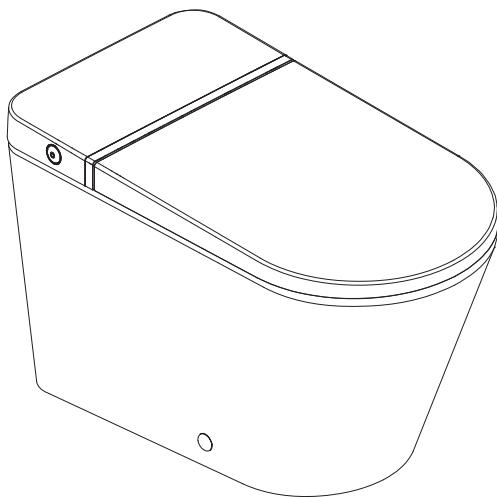

- ▶ [W330-0531]

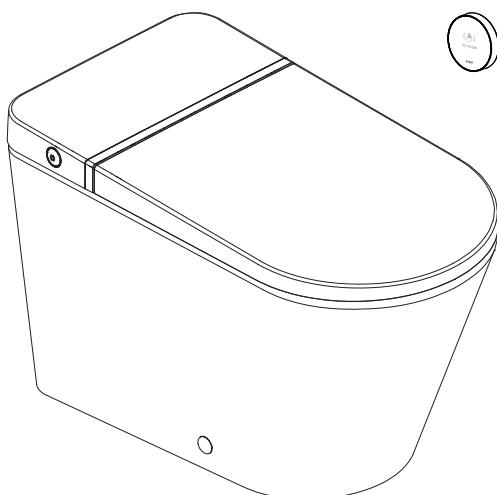

## ■ ABOUT THE MOUNTING INSTRUCTIONS

These mounting instructions come as part of the AXENT shower toilet and should be read carefully prior to installation.

### Explanation of the key words and symbols

 **DANGER!** High risk, lethal hazards, severe injuries

 **CAUTION!** Low risk, minor injuries

**NOTE!** Damage to property

### Target Readership and Qualifications

The shower toilet and associated water connection may only be installed by qualified plumbers.

### NOTE !

- Local installation regulations, country-specific standards and the low voltage directives must be observed at all times.
- DO NOT install the shower toilet in rooms where there is a danger of frost. The room temperature must not be less than 39 °F (4 °C).
- Condensation may form when the shower toilet unit is brought from a cold location to a warm one. Leave the unit switched off for a few hours.

### Safety instructions

 **CAUTION!**

Avoid damage to the product as a result of improper use.


- Do not reuse the old hose-set. Please use the new one only.

# INSTALLATION



---

## ■ PREINSTALLATION


- The floor and wall tiles should have been laid with the pipe hole and water supply pipeline preserved.
- Before installing the product, please make sure that the angle valve to clean the impurities and mud. Hence, the jam in the pipe and malfunction of the product could be prevented.
- Please assure the height of the protruding pit pipe above the ground.
- The place of the angle valve is as the following graph.
- Please make sure that adequate space is left to install the product: the length should be at least 47.2 inch ( 1200 mm ) and the width should be no less than 39.4 inch ( 1000 mm ) as shown in the following graph.

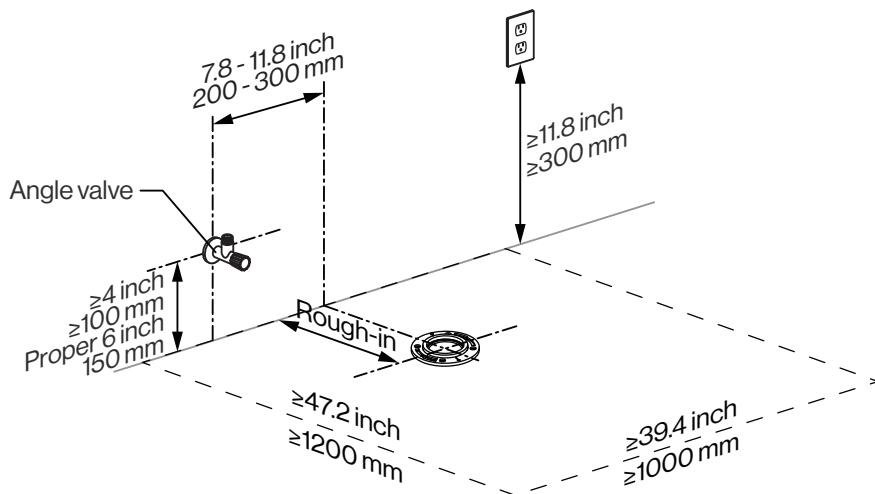

## ■ SCOPE OF DELIVERY







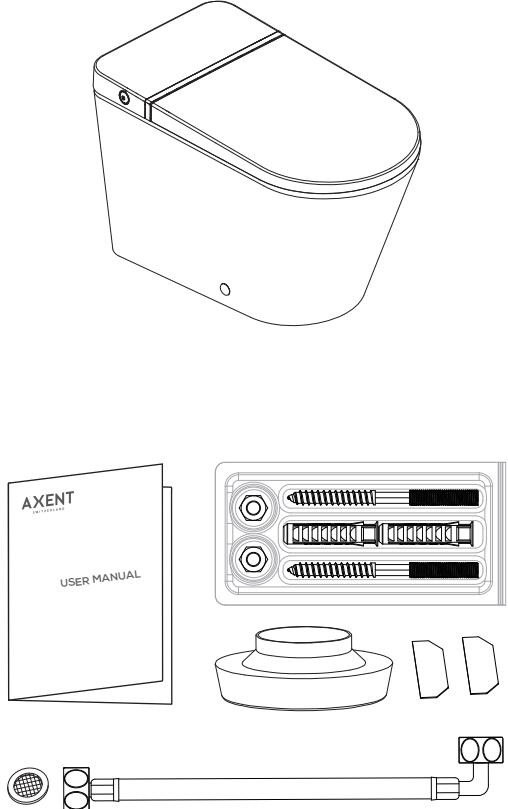
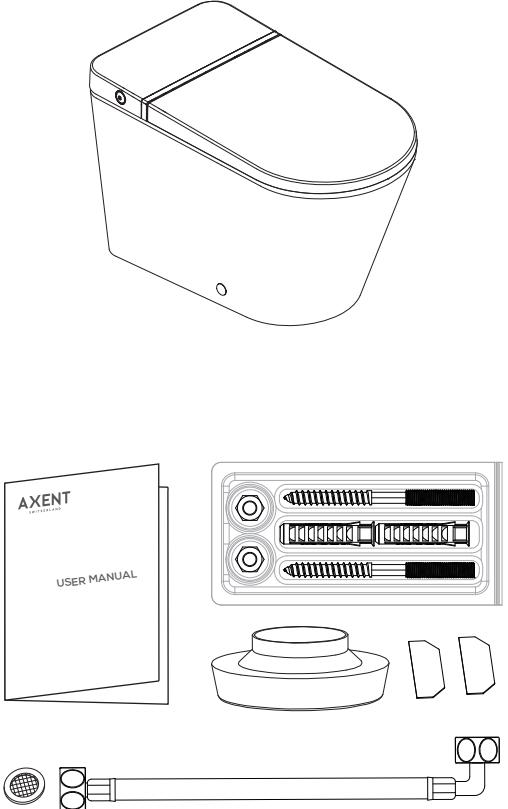
W330-0431	W330-0531
	


## ■ TOOLS (NO INCLUDE)

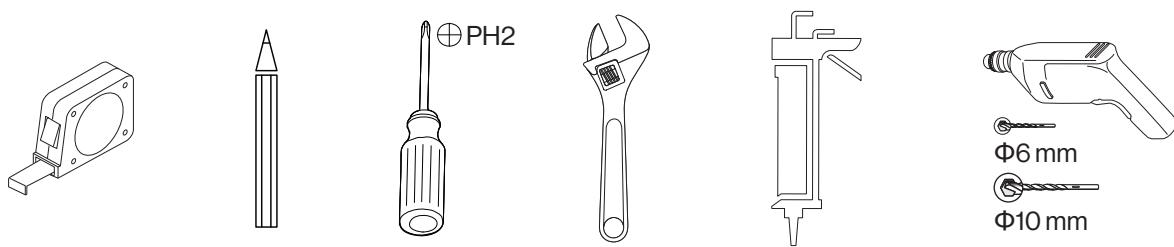

# INSTALLATION

## ■ MAIN INSTALLATION

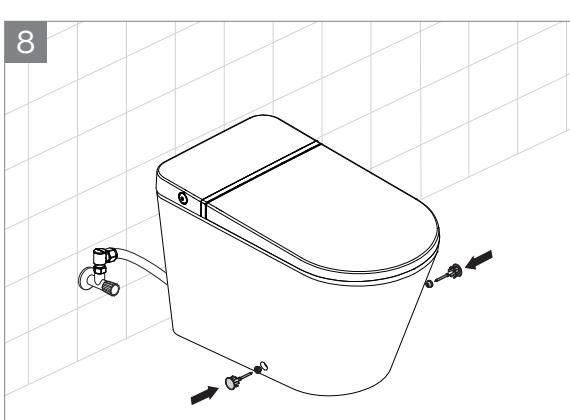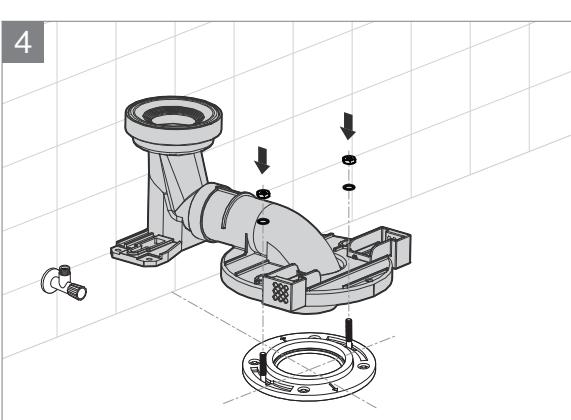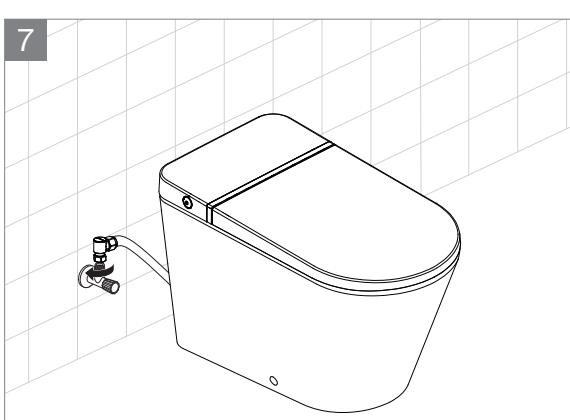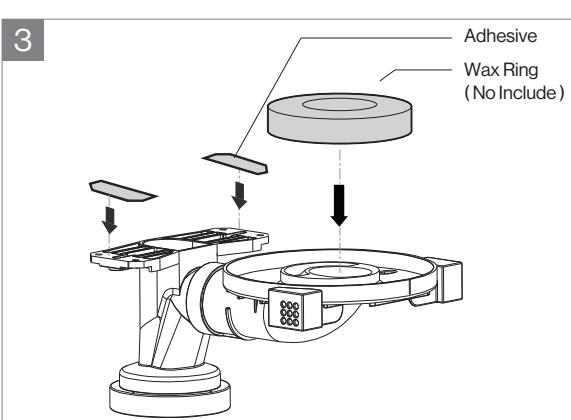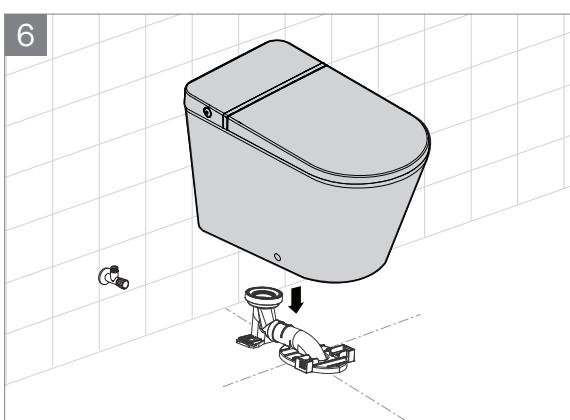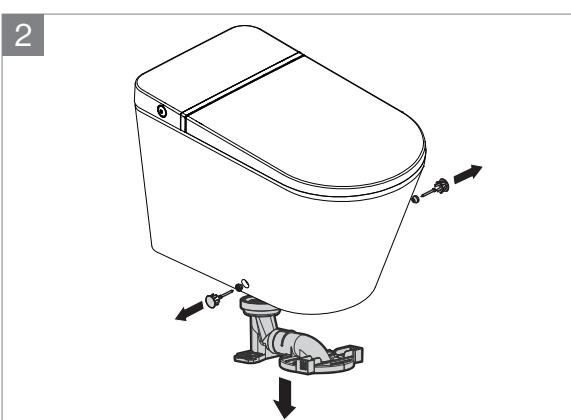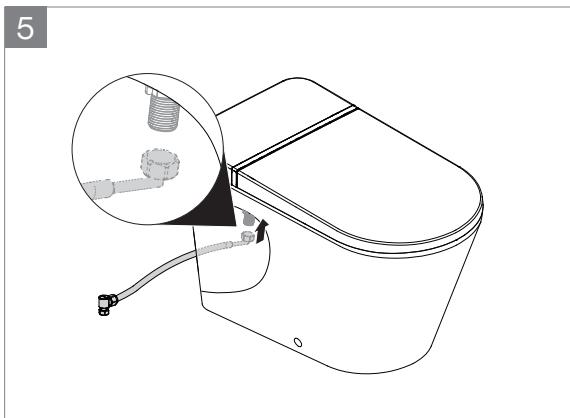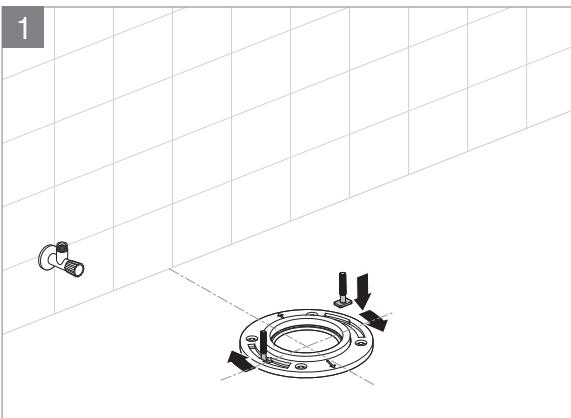

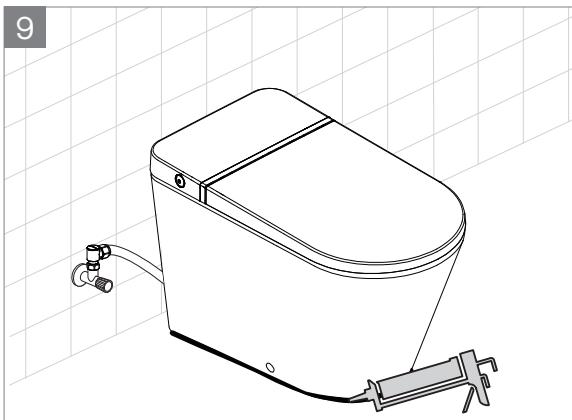


## Note!

It is prohibited to use the product immediately after installing the ceramic toilet seat. Instead, it is necessary to use it after the mold proof sealant is solidified.









Please keep the ground near the toilet seat bottom dry and avoid any contact with water within 24 hours after installment so as to influence the sealing quality of the mold proof sealant.

## ■ REMOTE CONTROL INSTALLATION (FOR W330-0531 ONLY)

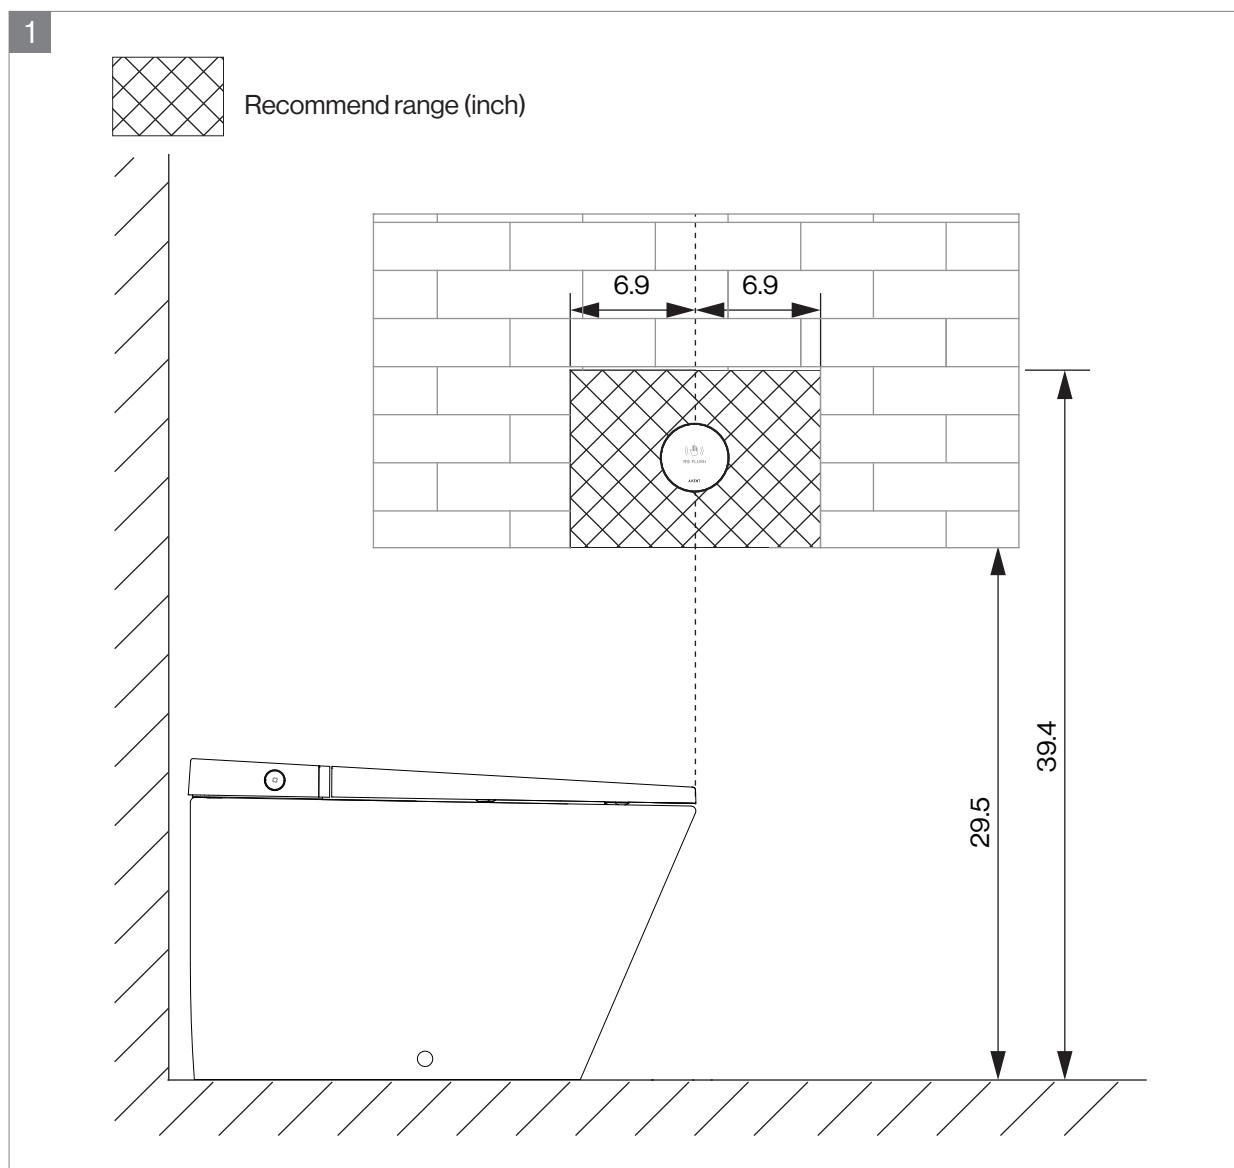

# INSTALLATION


---

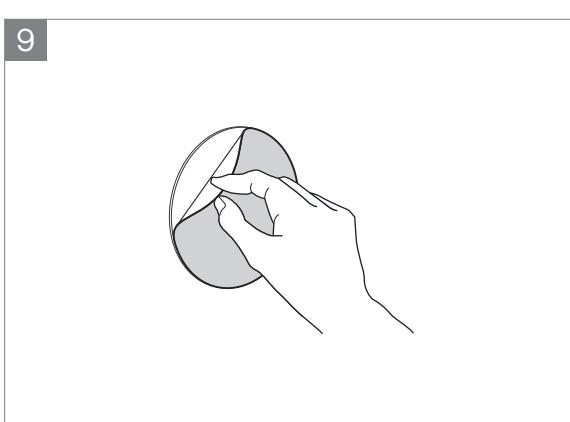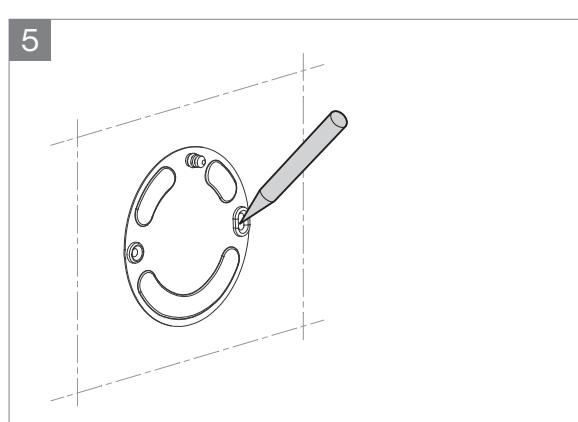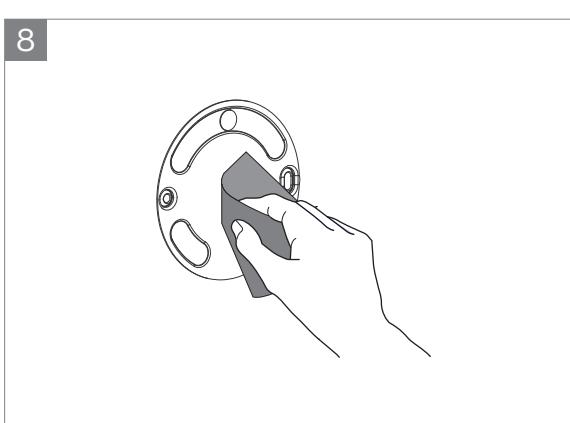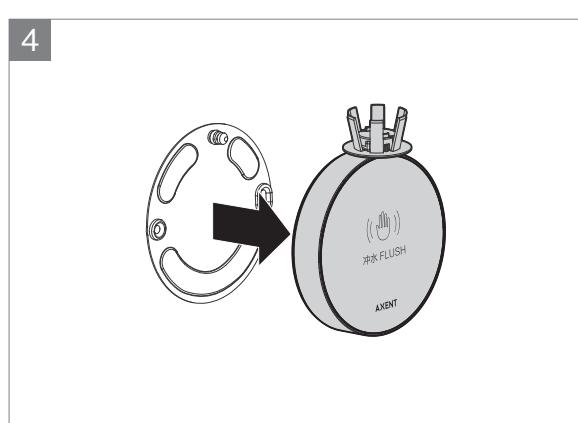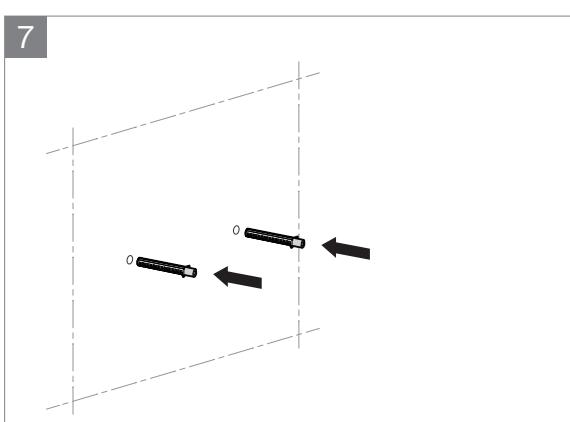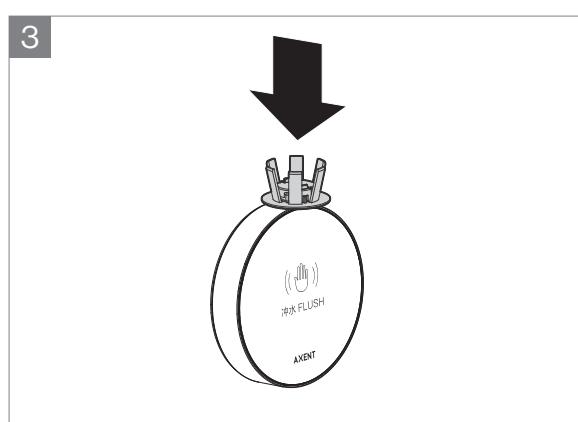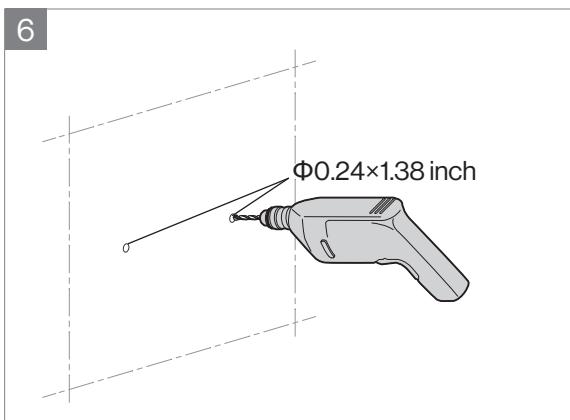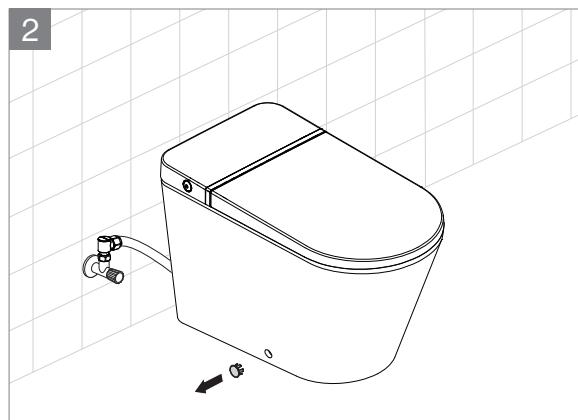


# INSTALLATION

---


10

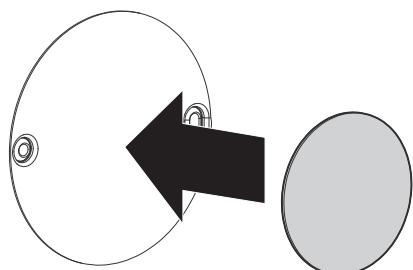


14

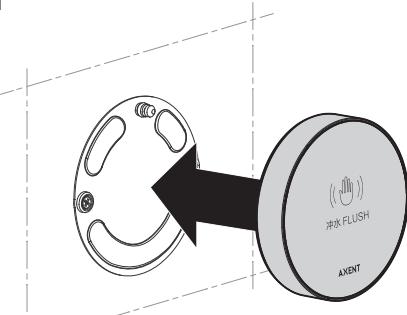


11

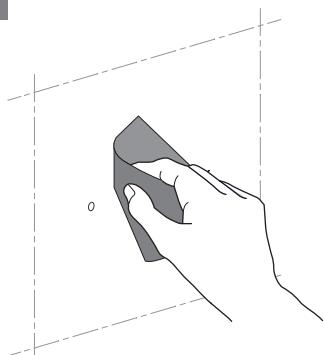


15

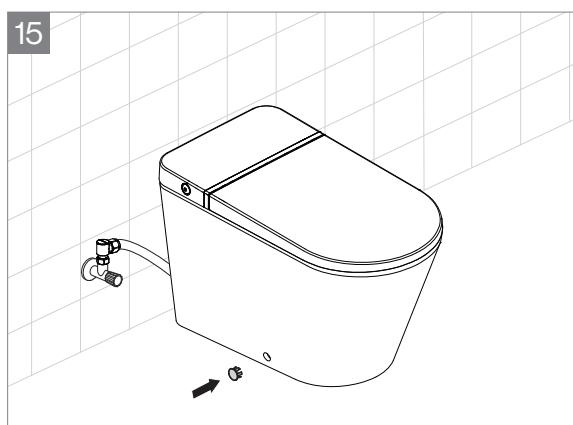


12

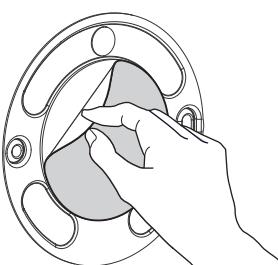

16






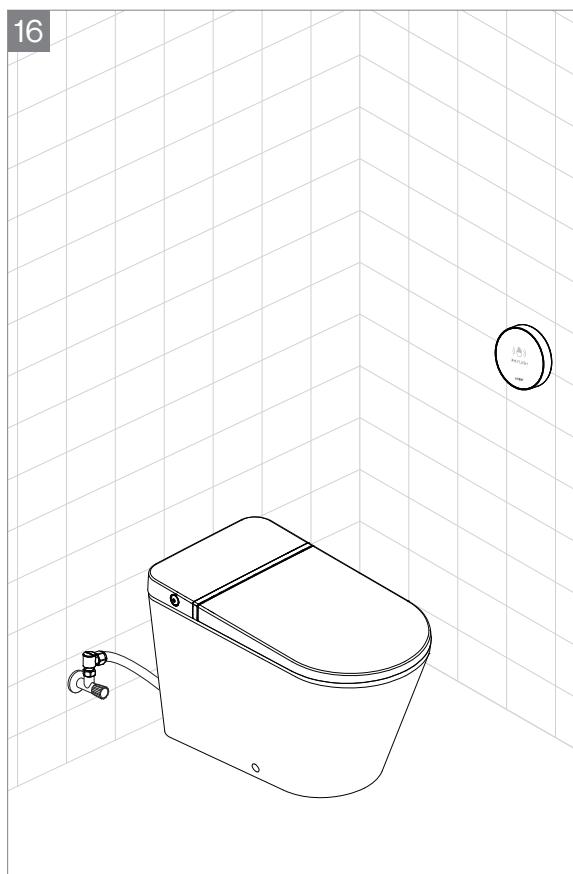


13








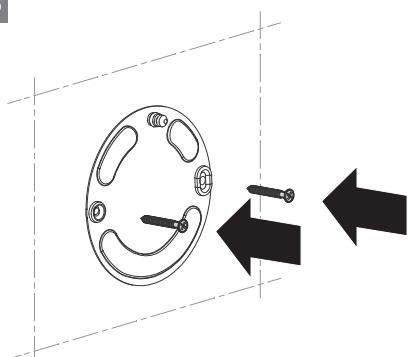


# INSTALLATION

## ■ MAIN BATTERY INSTALLATION

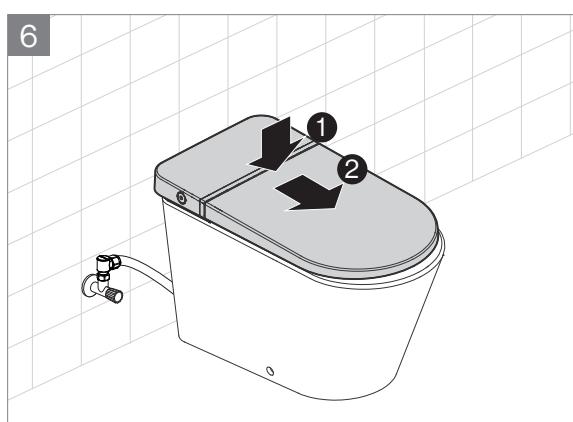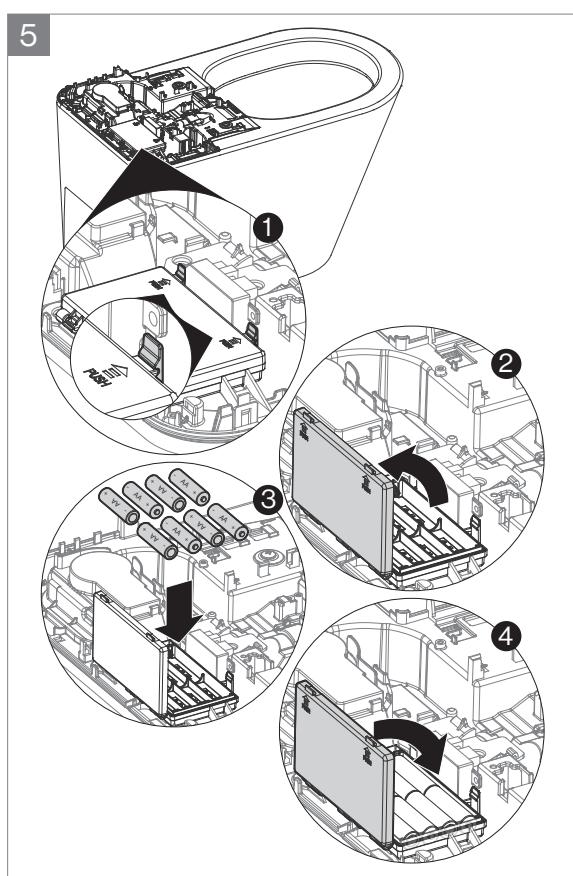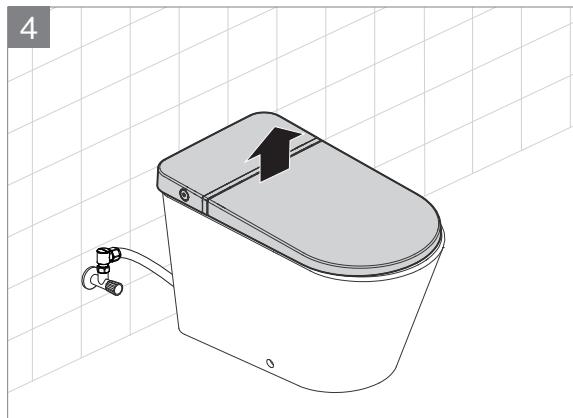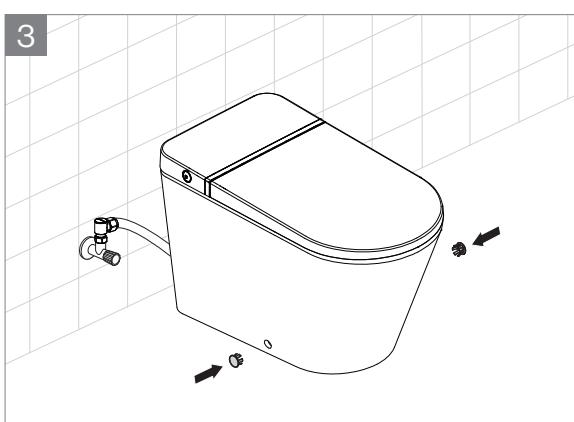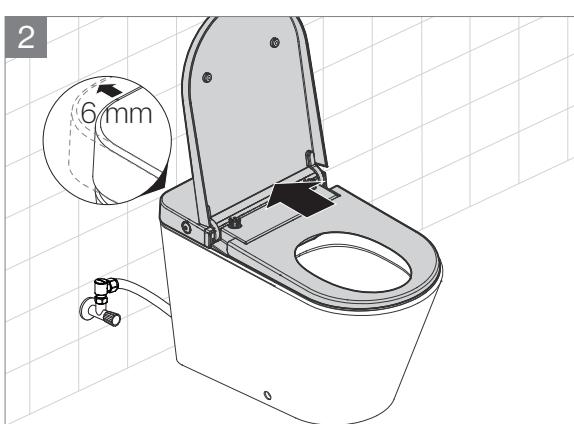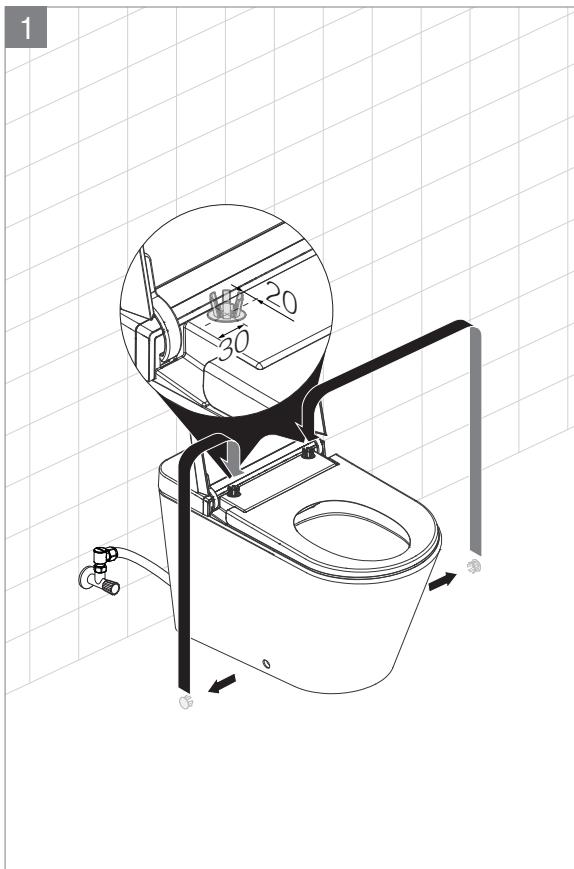

## ■ REMOTE CONTROL BATTERY INSTALLATION

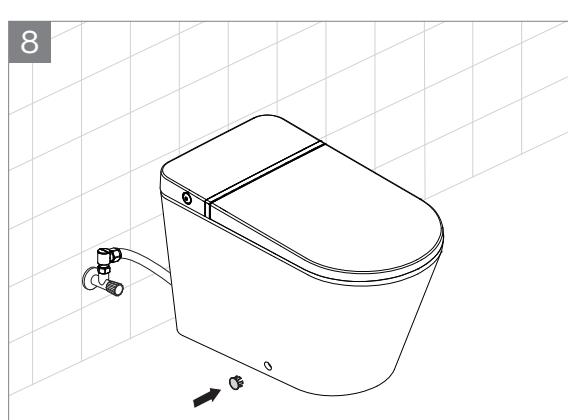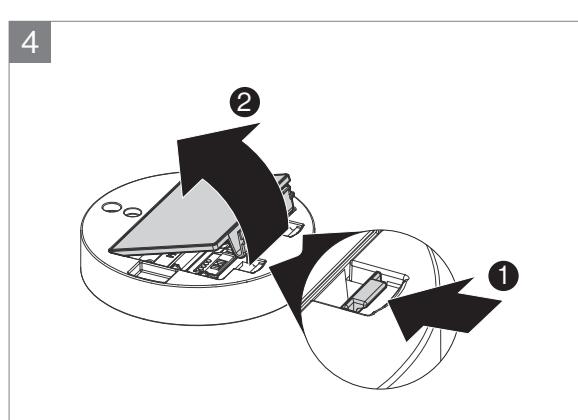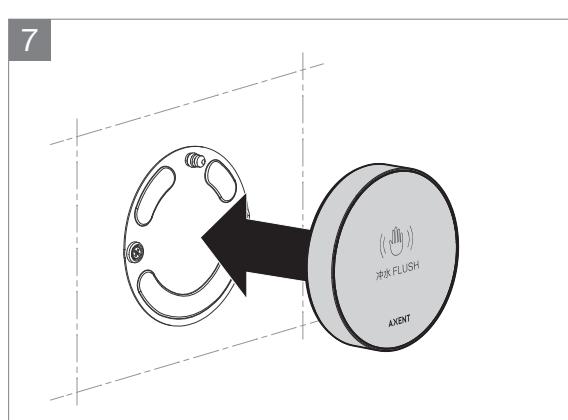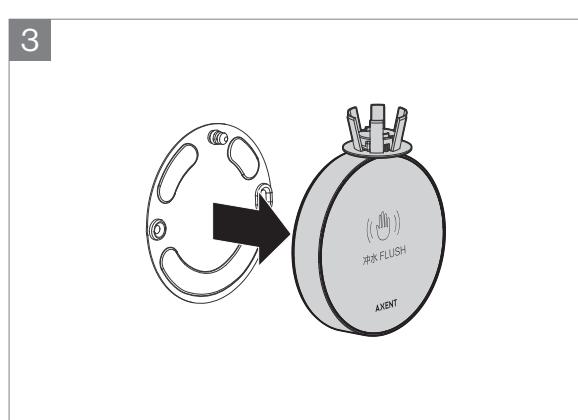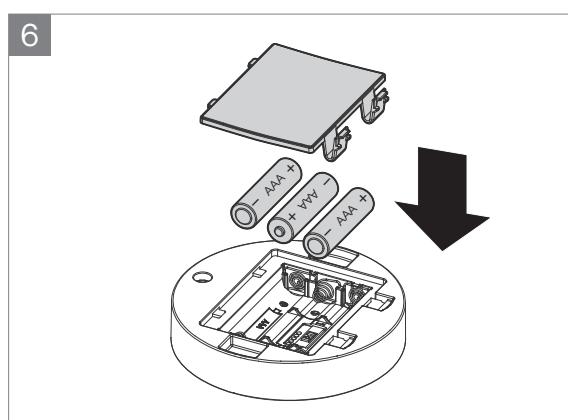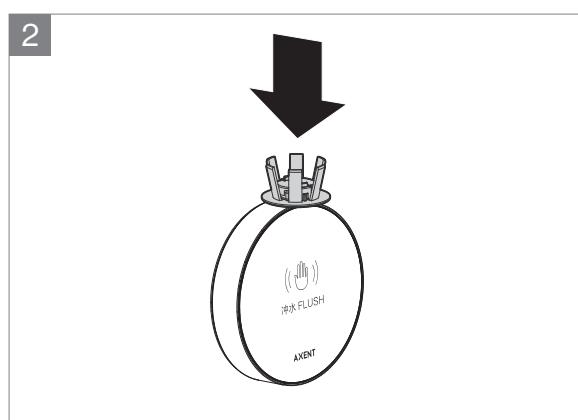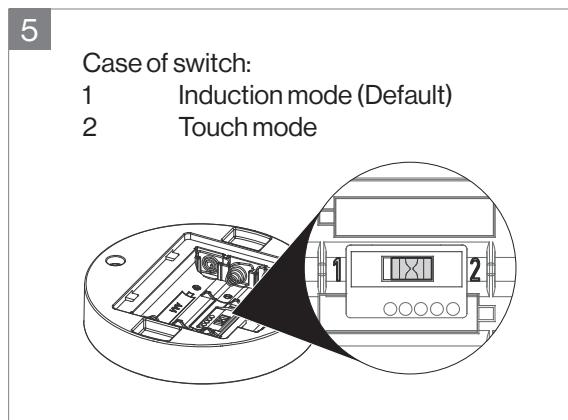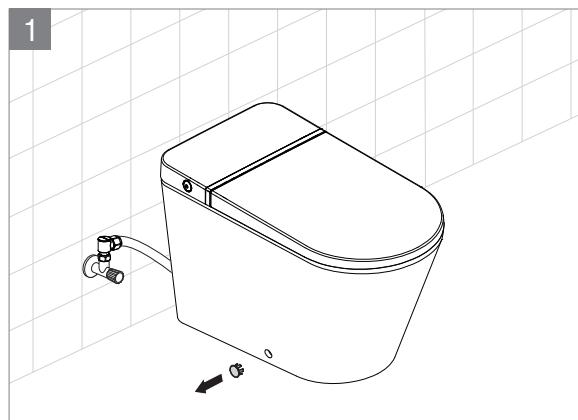

# **OPERATION**

---

## **■ TEST**

### **1) WATER SUPPLY**

Turn on the angle valve

### **2) FUNCTION TEST**

After the hidden tank is full:

- Press Flush button on the right hand side of the toilet. Flush function should be started.
- Wave hand nearly front of remote control. Flush function should be started.
- Switch the operation mode of remote control to touch mode, and touch the front of remote control. Flush function should be started.

## **■ OPERATION**

### **1) FLUSH**

#### **Side button**

Press Flush button on the right hand side of the toilet to start function.

#### **Remote control**

Induction mode:      Wave hand nearly front of remote control to start function.

Touch mode:            Touch the front of remote control to start function.

### **2) SWITCH OPERATION MODE OF REMOTE CONTROL**

Open UPS of remote control, and then you can see the switch. (See Step 5 on Page 17.)

- Turn switch to the 1, set operation mode to be Induction mode.
- Turn switch to the 2, set operation mode to be Touch mode.

## ■ SURFACE CLEANING

This product has been designed and manufactured with great care and attention to detail. If you follow a few simple cleaning instructions you will be able to enjoy its comfort, quality and beauty every day.

### CLEANING INSTRUCTIONS SEAT, LID AND BACK COVER

Use a mild soap solution to clean the seat and please take care that the seat and hinges are not left damp. Dry off any residual water or cleaning agent with a soft cloth. Avoid contact of the seat and hinges with abrasive, corrosive or chlorine-based cleaners, as these may cause damage or lead to flash rust. Therefore, when cleaning the bowl, make sure that the seat and cover are kept in an upright position until all cleaning agent has been flushed away.

### CLEANING INSTRUCTIONS CERAMIC

Under no circumstances should you use harsh or abrasive cleaning substances such as abrasive cream cleansers, scouring powder or drain cleaner on your ceramic surfaces. Also avoid using steam cleaners and hard, abrasive sponges.


The use of acidic cleaners with a pH value between 1 and 4 is highly recommended. Cleaners with a pH value in the neutral range (5 to 8) are not always suitable. We strongly advise against using either weak or strong alkaline cleaners, i.e. substances with pH values from 9 to 12.

## ■ REPLACE BATTERY

Main See Section "Main battery installation" on Page 16.

Remote control See Section "Remote control battery installation" on Page 17.

## ■ FILTER CLEANING

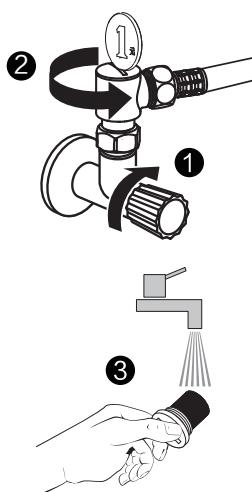

The filter net could be detached as shown in the graph on the left wash it with clean water.



- When the water flow is less than normal, please clean the filter.
- During the whole cleaning process, the product and hose should be separated.
- Please assure that the angle valve is shut off.
- Please put the filter back in reversed sequence after cleaning it.

## MAINTENANCE

---

### ■ MALFUNCTIONS DURING OPERATION

When the product is thought to malfunction, please try the following methods. If those methods could not make the product work normally, please return the product to a service center for examination and repair.

MALFUNCTION	CAUSE	FAULT CLEARANCE
Leaking	Connection loose	Check connection between hose and main and tighten it.
Flush not function	Water Supply Error	Check water supply and ensure the angle valve on.
Low Flush Volume	Low water pressure	Please ensure the water pressure over 14.5 psi.
	Short time for store water	Please waiting for 50 sec. for store water after last flush.
«Beep» thrice at intervals	The main storage battery low	Replace the main battery. See Section "Main battery installation" on Page 16.
Indicator blink three times	The remote control storage battery low	Replace the remote control battery. See Section "Remote control battery installation" on Page 17.

ITEM	DESCRIPTION	
Article No.	W330-0431	W330-0531
Power	-	Main: DC 6V (AA×8) Remote Control: DC 4.5V (AAA×3)
Water supply range	14.5-108.8 psi	
Water Consumption	1.28 GPF	
Flush type	Vacuum V Flush	
Adaptable temperature range	39 - 104 °F	
Net weight	94.8 lbs	
Carton size	32.6 × 19.6 × 24.5 inch	

## ■ DIMENSION

