

# TRUE COLOR LED HOG NIGHTLIGHT

# **USER MANUAL**



# GETTING STARTED

Thank you for purchasing your Johnny Stewart Hog Nightlight. Be sure to read all operating instructions prior to use.

### INCLUDED IN YOUR KIT:

- [1] Johnny Stewart 2-color LED Hog NightLight
- [1] Remote w/ lanyard
- [1] User manual

## HOG NIGHTLIGHT UNIT FUNCTION

**ON / OFF** = Power Unit On or Off

**GREEN** = Green LED Illumination

**RED** = Red LED Illumination **MOTION** = Motion Detection

DUSK = Dusk / Light Sensor Mode

(+) = LED Intensity Up

(-) = LED Intensity Down

# REMOTE FUNCTION:

DUSK = Dusk/Light Sensor Mode
MOTION = Motion Detector Mode


**RED** = Red LED IIIumination

**GREEN** = Green Illumination

( + ) = LED Intensity Up

(-) = LED Intensity Down

(-) = Remote Wake Up Button

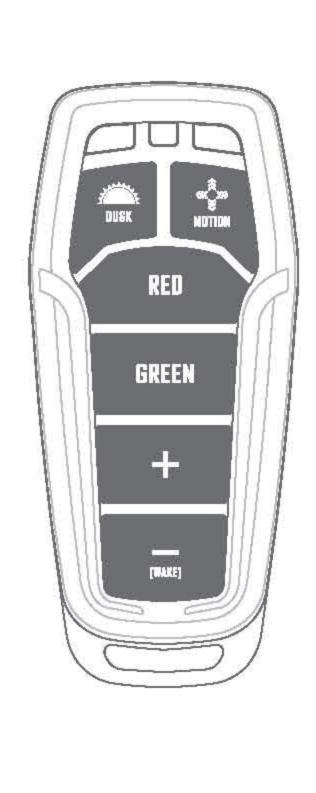

#### **AREA LIGHT UNIT OPERATING INSTRUCTIONS:**

- 1. Power unit On/Off through ON/OFF Button.
- 2. Select desired color configuration by selecting (RED) or (GREEN) button(s).
- 3. Select desired LED intensity using Up ( + ) or Down ( ) buttons.
- 4. Motion Detection Mode
  - Select color and intensity level.
  - b. Select (MOTION) button to turn on this function.
  - c. Select (MOTION) button again to turn off this function.
- 5. Dusk/Low light Mode
  - Select color and intensity level.
  - b. Select (DUSK) button to turn on this function.
  - c. Select (DUSK) button to turn off this function.

#### REMOTE OPERATING INSTRUCTIONS:

- Power Unit "ON" using the light unit itself.
- "Wake" unit by pressing ( ) button.
- 3. Select desired color using (RED) or (GREEN) buttons.
- 4. Activate/Deactivate "Motion" mode using (MOTION) button. When activated, will illuminate for 15s, if no other motion is detected.
- 5. Activate/Deactivate "Dusk" mode using (DUSK) button

#### TROUBLESHOOTING:

#### 1. UNIT LEDS ARE DIM

Replace Batteries in light unit.

#### 2. ALL FUNCTIONS ARE FROZEN

Perform "Factory Reset" by switch power off, hold ( – ) button on unit, power back on. All Green and Red LEDs should be on lowest intensity.

# 3. REMOTE DOES NOT WORK

Press (-) button to wake unit. (remote goes to sleep mode after 15s of inactivity)

Replace A23 battery.

### **FCC Notice**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference to another device. (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur with special installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures: Reorient or relocate the receiving antenna.

- Increase separation between the equipment and receiver. Connect the equipment to an outlet on a circuit different from which the receiver
- is connected. Consult the dealer or an experienced radio/TV technician.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



