NOTE: THIS RELEASED DRAWING WAS PRODUCED BY COMPUTER, DO NOT UPDATE MASTER MANUALLY.

ECN No. REV. ITEM DESCRIPTION PREPARED BY APPROVED BY

New released


B

B

材质: 105g铜版纸

单黑印刷

Fold Line

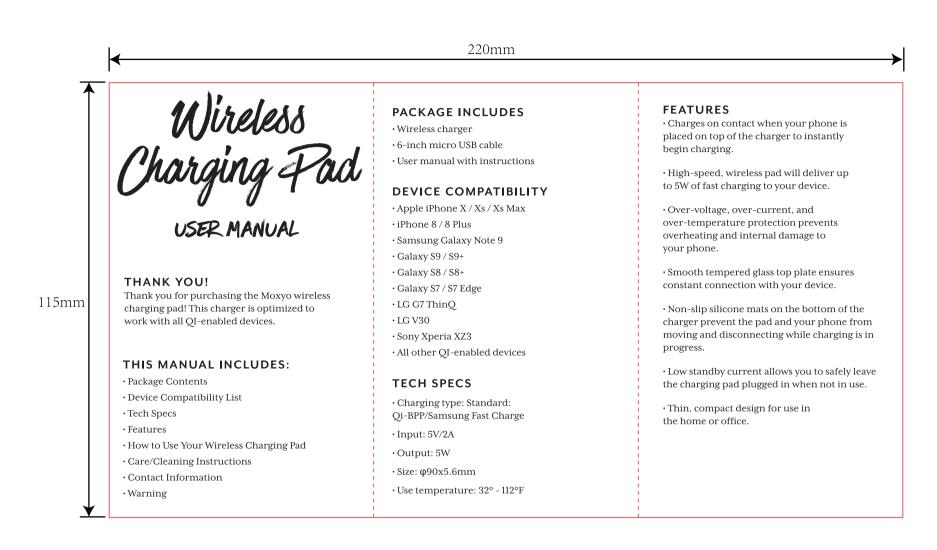

HOW TO USE YOUR WIRELESS CHARGING PAD

Contents

· Protective plastic film

Wireless charger6-inch micro USB cable

1. Remove the thin plastic film over the top of the charging pad—your phone won't charge if the plastic isn't removed.

2. Connect the supplied micro USB cable to the charging pad, then connect the cable to an AC wall adapter (sold separately). Plug the wall adapter into a wall outlet

3. Place your phone on top of the charging pad (the side with the printed design). Try to align the center of the device with the center of the charging

4. Wait for a green ring to appear around the edge of the charger—this indicates that charging has begun. The ring will disappear within 3 seconds, but charging is still occurring.

HOW TO TAKE CARE OF YOUR WIRELESS CHARGING PAD

• Store your wireless charging pad in a dry place, away from moisture and corrosive materials (such as cleaning materials and other chemicals).

Keep the charging pad out of direct sunlight and other areas where intense heat is present.
Clean the wireless charging pad with a soft,

water-dampened cloth when necessary. Do not use any kind of chemicals, soaps, or detergents.

• Do not hend, disassemble, or attempt to

 \cdot Do not bend, disassemble, or attempt to repurpose or modify this device in any way.

• Do not insert anything other than the micro USB cable into the charging port.

Do not submerge the charging pad in liquid.
Monitor use with small children.

CONTACT US

If you have any questions or concerns about your Moxyo wireless charging pad, please contact us.

Email: support@moxyo.com
Phone: 1.844.452.6337
Website: www.moxyo.com

WARNING

Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excessive heat, release of toxic fumes, or fire, for which damages you ("Purchaser") and not Moxyo ("Manufacturer") are responsible. This product is intended only for use with appropriate mobile devices. Please consult your device packaging or manufacturer's website to determine if this product is compatible with your specific device. Manufacturer is not responsible for any damages to any device incurred through the use of this product. Further, Manufacturer is not in any way liable to you or to any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device or accessory other than the appropriate

devices for which this product is designed. Manufacturer is not responsible for any damages you or any third party may suffer as a result of misuse of this product as outlined above. Purchase agrees to indemnify Manufacturer for any damages arising from unintended use or misuse, including with an unintended device. If this device is accessible to a minor, the purchasing adult agrees to sole responsibility for providing supervision, instructions, and warnings of this product. Purchaser agrees to indemnify Manufacturer for any damages arising from unintended use or misuse of this product by a minor. Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try correcting the interference by one or more of the following

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded

cables. All peripherals must be grounded and shielded. Operation with non-certific peripherals or non-shielded cables may result in interference to radio or reception. Modification:

Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled
environment. This equipment should be installed and operated with minimum distance 20ci
between the radiator & your body.

备注:

- 1, 来料尺寸公差±1mm
- 2,来料品质要保证印刷优良,无刮花,无脏污,无破损

TECHEN®		DRAWN: Judy	DATE: 2018-09-27	TITLE			
TECYEA ELECTRONICS LTD		CHECK:	DATE:	WLC3L08_说明书			
UNLESS OTHERWISE SPECIFIED		ADD:	DATE:				
ALL DIMENSIONS ARE IN MM		APP:	DAIE.	SIZE	SIZE THIS INFORMATION IS CONFIDENTIAL AND PROPRIETARY TO TECYEA AND		
TOLERANCES ANGULAR Unit: mm		PROJECT CODE		A4	SHALL NOT BE REPRODUCED OR FURTHER DISCLOSED TO ANYONE OTHER THAN TECYEA EMPLOYEES WITHOUT WRITTEN AUTHORIZATION FROM TECYEA ELECTRONICS LTD.		
	THIRD ANGLE PROJECTION			DOC NO		SHEET	REV
SURFACE ROUGHNESS	BREAK ALL BURRS AND SHARP EDGES	WLC3L08		DWG-7040-0000076-0A		1 of 1	А
DO NOT SCALE DRAWING							