IS11CA User Manual

## Introduction

Thank you for purchasing the IS11CA. Before using your cell phone, be sure to read this PDF manual to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

### Manuals for the IS11CA

The IS11CA comes with the Instruction Manual.

- For learning the basics:
  - Read this manual.
- For learning details on using each function:


Read the supplied Instruction Manual (Japanese). Be sure to read the Safety Precautions "安全上のご注意" to ensure proper usage of the IS11CA.

The keyword searchable au Online Manual is also available on the au homepage: http://www.au.kddi.com/manual/index.html

## **Illustrations and Screenshots in This Manual**

#### Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

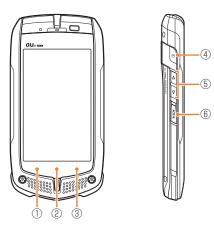

	Key Illustration
1	
2	டி
3	5
4	0
(5)	<b>4 •</b>
6	ACTIVE

#### Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

• The display design themes of your cell phone vary by model color.

## **Notes on Cell Phone Use**

## **Cell Phone Etiquette**

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- Use of cell phones is not allowed in some places.
- Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
- Using a cell phone in an aircraft is prohibited by law. Turn the cell phone power off.
- Radio waves from cell phones may interfere with medical electrical equipment.
- Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker.
   Turn the cell phone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- Be considerate of where you use the cell phone and how loudly you talk.
- Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
- Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
- Move to areas where you will not inconvenience others on trains or in hotel lobbies.

- Refrain from talking in a loud voice.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

## **Contents**

In	troduction				
III	Illustrations and Screenshots in This Manual				
N	otes on Cell Phone Use	2			
	Cell Phone Etiquette	2			
C	ontents	3			
G	etting Ready	5			
	Checking the Contents of the Box Names of Parts Charging the Battery Pack Operating the Touch Panel Turning On Power Switching the Display Language to English Initial Setup Getting to Know the Home Screen Security Code and Passwords	6 7 8 8 8			
P	hone	11			
	Making a Call  Making an International Call  Answering a Call  Returning a Call (Outgoing History/Incoming History)  Setting the Answering Memo  Playing a Message in Answering Memo	11 11 11 11			

Using Global Passport 13
Obtaining the PRL (Roaming Area Information) 13 Setting the Area
Character Input 14
Entering Characters with ATOK14
Address Book 15
Saving an Address Book Entry
Mail 16
Sending E-mail Massages
Reading Received E-mail/C-mail Massages 16
Reading Received E-mail/C-mail Massages
Camera         17           Taking a Photo         17
Camera         17           Taking a Photo         17           Recording a Movie         17
Camera         17           Taking a Photo         17           Recording a Movie         17           Gallery         18
Camera         17           Taking a Photo         17           Recording a Movie         17           Gallery         18           Using Gallery         18
Camera         17           Taking a Photo         17           Recording a Movie         17           Gallery         18           Using Gallery         18           Browser         19           Viewing Sites with Browser         19           Using Bookmarks         19

Bluetooth	21
Turning Bluetooth On or Off	
USB Connection	22
Connecting Your Phone to a Computer via USB	22
FCC Notice	23

## **Getting Ready**

## **Checking the Contents of the Box**


The box contains the cell phone and accessories.

- Cell phone
- Battery pack
- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
  - The following accessories are not included.
    - microSD memory card Desktop holder
    - USB cable Stereo earphone

- AC adapter

Purchase a specified AC adapter (sold separately).

### **Names of Parts**

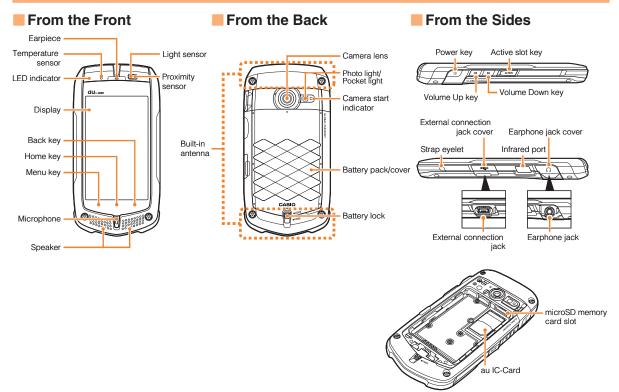

## **Charging the Battery Pack**

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).
- Connect a specified AC adapter to the cell phone.
  - Check the shape of the connector of the AC adapter and then plug it straight into the power terminal of the cell phone.
- Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.
- Confirm that the indicator lights.
  - Charging: A charge beginning sounds and the indicator lights.
  - Charging finished: A charge completion sounds and the indicator goes out.

## **Operating the Touch Panel**

The display of the IS11CA is a touch panel. You can operate the IS11CA by directly touching the screen.

## Tap/Double Tap

Tap: Gently touch a screen and then immediately release your finger.

Double tap: Tap the same position twice.

## Long Touch

Keep touching an item or key.

### Slide

While your finger is gently touching the display, trace it to the desired direction.

### Flick

Operate the screen by quickly moving (flicking) your finger up, down, right, or left.

#### Pinch

While two of your fingers are touching the screen, move the fingers apart or closer together.

## Drag

While your finger is gently touching the screen, trace it to the desired position.

## **Turning On Power**

- Hold down for at least two seconds.
- Turning Off Power
- Hold down for at least two seconds.
- $\blacksquare$  Tap *Power off*  $\rightarrow$  OK.

# Switching the Display Language to English

You can switch the display language for function names and other items to English.

- Tap the Launcher icon on the Home screen.
- 🛾 Tap 設定 (Setting).
- 【3 Tap *言語とキーボード* (Language & keyboard).
- 🛂 Tap *言語 (Language)を選択* (Select language).
- 5 Tap English.

## Initial Setup

To set up the following, refer to the supplied Setting Guide (Japanese) before using the IS11CA.

## Setting Up Your Account

- Set up your Google account to use Google applications such as Android Market.
- Set up au one-ID to use au one Market, au one ナビウォーク (NaviWalk), etc.

## Setting Up E-Mail


- Set up e-mail to use e-mail (xxx@ezweb.ne.jp).
  - E-mail setup is unnecessary if you have switched your au phone to the IS11CA.

## Setting Up Wi-Fi®

• Set up Wi-Fi to use Wi-Fi connection.

# Getting to Know the Home Screen

The Home screen is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features.

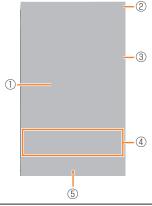

- ① Widgets are applications that you can use directly on the Home screen.
- The Status bar shows the time, signal strength, battery status, and other information. It also displays notification icons.
- Touch and hold an empty spot to add a shortcut to an application, a widget, and so on.

- 4 Touch items on the Home screen to open them.
- Touch the Launcher icon to open the Launcher and view all your applications.
- At the top of the screen, the Status bar displays the time, information about the status of your phone, and icons for notifications that you have received.
- Touch the Launcher icon at the bottom of the screen to view all installed applications.

## Viewing other parts of the Home screen

Slide your finger left or right across the Home screen. These extensions to the Home screen provide more space for widgets, shortcuts, and other items.

## **Security Code and Passwords**

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

## Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au homepage
Initial Setting	The four-digit number you wrote on your subscription form

### Lock No.

Usage Example	Setting/Canceling Screen lock, Restrict address book, etc.
Initial Setting	1234

### PIN Code

Usage	Preventing unauthorized use of the au IC-
Example	Card by a third party
Initial Setting	1234

## **Phone**

## Making a Call

- Tap the Phone icon on the Home screen.
- Enter a phone number.
- 3 Tap Call.

## **Making an International Call**

### 001 International Call Service

Available without any additional application Example: To call 212-123- $\triangle\triangle\triangle$  in the USA

Enter the access code, a country code, area code and phone number.  $\rightarrow$  Tap *Call*.

- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:

From au cell phones (toll-free):

157 (area code not required)

From fixed-line phones (toll-free):

0077-7-111

(Open 9:00 to 20:00 everyday)

## **Answering a Call**

Slide the Phone icon to the right during an incoming call.

# Returning a Call (Outgoing History)

- On the phone number entry screen, tap Incoming History/Outgoing History.
- 2 Select the entry you want to call.
- 3 Tap Call.

## **Setting the Answering Memo**

- Tap the Launcher icon on the Home screen.
- **2** Tap Settings.
- **3** Tap Call settings.
- 4 Tap Call/Message.
- **5** Tap Answering memo settings.

# Playing a Message in Answering Memo

- Tap the Launcher icon on the Home screen.
- 2 Tap Settings.
- **3** Tap Call settings.
- 4 Tap Call/Message.
- 5 Tap Answering memo List.
- 6 Select the massage to be played.

## **Using Global Passport**

# Obtaining the PRL (Roaming Area Information)

The PRL (roaming area information) contains information on roaming areas of overseas partner providers who have signed an international roaming contract with KDDI (au). When you use it in a CDMA network, setting is necessary.

- Tap the Launcher icon on the Home screen.
- **2** Tap Settings.
- 3 Tap Wireless & networks.
- 4 Tap Mobile networks.
- 5 Tap Roaming settings.
- 6 Tap PRL Settings.
- **Tap** *Update PRL version*.

  The PRL is obtained. Download the PRL data by following the on-screen instructions.

## **Setting the Area**

- II Tap the Launcher icon on the Home screen.
- **2** Tap Settings.
- **13** Tap Wireless & networks.
- 4 Tap Mobile networks.
- **5** Tap *Roaming Settings*.
- 6 Tap Area Settings.

## **Character Input**

## **Entering Characters with ATOK**

## Number Keyboard

This keyboard has the characters laid out in the same order as that of an ordinary cell phone. You can use four input methods: Cell Phone Input, Gesture Input, Gesture Input Pro, and Flick Input.

## QWERTY Keyboard

This keyboard has the characters laid out in the same order as that of an ordinary PC.

## Pictogram/Face Mark/Symbol Panels

These panels allow you to input pictograms, face marks, and symbols.

Slide left/right to select a category or character.

#### Character Code/Fixed Phrase Panels

These panels allow you to select and input characters from a character code table, also to select and input fixed phrases from a fixed phrase list.

Tap a category to select it, and slide up/down to select a character.

## **Address Book**

## Saving an Address Book Entry

- Tap the Address Book icon on the Home screen.
- **2** Tap the Menu key  $\rightarrow$  *Add New Item*.
- Select and edit item.

## **Using an Address Book**

- Tap the Address Book icon on the Home screen.
- Select the contact.

## Mail

## **Sending E-mail Massages**

- II Tap the Launcher icon on the Home screen.
- 2 Tap *E-mail*.
- On the inbox screen/the outbox screen, tap Create.
- Tap the Enter Destination icon.
- Select/Set the address.
- 6 Tap the subject entry field. → Enter a subject.
- Tap the message entry field. → Enter a message.
- B Tap Send.

## **Sending C-mail Massages**

- II Tap the Launcher icon on the Home screen.
- 2 Tap C-mail.
- Tap the Enter Destination icon.
- Select/Set the address.
- Tap the message entry field. → Enter a message.
- 6 Tap Send.

# Receiving E-mail/C-mail Massages

- A mail massage is received.
- Tap the status bar.
- Select mail information.
- 4 Select the received mail.

# Reading Received E-mail/C-mail Massages

- On the inbox screen/the outbox screen, tap Folder.
- Select a folder.
- Select a mail massage.

When you select an unsent mail message in the Unsent box, the E-mail/C-mail creation screen is displayed.

## **Camera**

## **Taking a Photo**

- II Tap the Launcher icon on the Home screen.
- 2 Tap Camera.
- Tap the Shutter icon on the screen.
  Saved data can be browsed in *Gallery* on the Launcher.

## **Recording a Movie**

- II Tap the Launcher icon on the Home screen.
- 2 Tap Camcorder.
- I Tap the start movie icon on the screen.
- 4 Tap the stop movie icon on the screen.
  Saved data can be browsed in *Gallery* on the Launcher.

## **Gallery**

## **Using Gallery**

- Tap the Launcher icon on the Home screen.
- 2 Tap Gallery.
- 3 Select an album.
- Select an image or a movie to be displayed.

## **Browser**

## Viewing Sites with Browser

- Tap the Launcher icon on the Home screen.
- 2 Tap Browser.

## **Using Bookmarks**

On the browser screen, tap the Menu key → Bookmarks.

## **Bookmarking a Web Page**

- On the browser screen, tap the Menu key → Bookmarks.
- $\blacksquare$  Tap  $Add \rightarrow OK$ .

## Wi-Fi

## Turning Wi-Fi On and Connecting to a Wi-Fi Network

- II Tap the Launcher icon on the Home screen.
- **2** Tap Settings.
- **Tap** *Wireless* & *networks* → *Wi-Fi settings*. The Wi-Fi settings screen appears.
- 4 Tap Wi-Fi to check it. Wi-Fi turns on and your phone scans for available Wi-Fi network.

## **Bluetooth**

## **Turning Bluetooth On or Off**

- II Tap the Launcher icon on the Home screen.
- **2** Tap Settings.
- **3** Tap Wireless & networks.
- 4 Check or uncheck Bluetooth to turn it on or off.

## Pairing Your Phone with a Bluetooth Device

- II Tap the Launcher icon on the Home screen.
- **2** Tap *Settings*.
- **3** Tap Wireless & networks  $\rightarrow$  Bluetooth settings.

## **USB Connection**

## Connecting Your Phone to a Computer via USB

- Use the USB cable (sold separately) to connect the phone to a USB port on your computer.

  The USB Connection dialog opens.
- 2 Tap Mass Storage → OK. When the phone is connected as USB storage, the screen indicates that USB storage is in use and you receive a notification

## **FCC Notice**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

#### Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency

electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

#### **Body-worn Operation**

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

#### Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

#### Specific Absorption Rate (SAR) for Wireless Phones

The highest SAR value for this device when tested at the ear is 0.90 W/kg, and when worn on the body, 0.70 W/kg.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/fccid after searching on FCC ID TYK-BHJ3994. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) web-site at http://www.ctia.org.