

SMM107 US instruction sheet


Date: 8 May 19



INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES MODE D'EMPLOI

SMM107

Professional Wireless Microphone
Micrófono Profesional Inalámbrico
Micro Sans Fil Professionnel

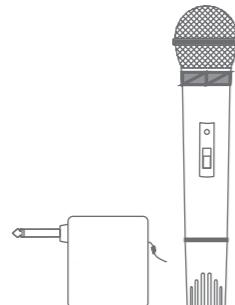

The Singing Machine® is a registered trademark or The Singing Machine Co., Inc.
The Singing Machine® es marca registrada de The Singing Machine Co., Inc.
The Singing Machine® est une marque déposée de The Singing Machine Co., Inc.


E1

Battery Precautions

The precautions below should be followed when using battery in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. Reversed battery may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
4. Do not try to recharge battery not intended to be recharged, they can overheat and rupture (Follow battery manufacturer's directions).
5. Rechargeable battery is to be removed from the product before being charged.
6. Rechargeable battery is only to be charged under adult supervision.
7. Exhausted battery is to be removed from the product.

Contents



Congratulations on your purchase of a Singing Machine Wireless Microphone. We at the Singing Machine know that it will provide you and your friends with endless hours of entertainment. Inside you will find instructions on how to use and maintain this unit.

E2

Specifications

TYPE	-74 dB 600 OHMS IMPEDANCE UNI-DIRECTIONAL DYNAMIC MICROPHONE
POWER SOURCE	9V Batteries x 2 (Not included)
MICROPHONE DIMENSION	24.0 x 5.0 x 5.0 cm 9.4 x 2.0 x 2.0 Inches
RECEIVER DIMENSION	7.2 x 9.9 x 2.6 cm 2.8 x 3.9 x 1.0 Inches

E3

Wireless Microphone Information

FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Microphone Details

Settings

The switch on the microphone in your Singing Machine Wireless Microphone has three settings:
1. ON - The switch is in the top position. The microphone will function. The red indicator light is on. The microphone will use battery power.

2. STANDBY - The switch is in the middle position. The microphone will not function. The red indicator light is on. The microphone will use battery power.

NOTE: The purpose of this setting is to maintain a connection between the microphone and the receiver when moving around the area in which it is being used.

3. OFF - The switch is in the bottom position. The microphone will not function. The red indicator light is off. The microphone will not use battery power.

Your Singing Machine Wireless Microphone set is now ready for use!

NOTE: The receiver is provided with flexible wire antenna. If reception is weak, extend the antenna to improve reception.

Maintenance

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

Instructions for Use

1. Insert one (1) active DC 9-Volt battery into microphone by unscrewing the bottom.
2. Set the switch on the microphone to the STANDBY position.
3. Insert one (1) active DC 9-Volt battery into the slot located in the back of the receiver.
4. Plug the receiver into the Microphone Input Jack of your Singing Machine karaoke machine.
5. Set the switch on your Singing Machine karaoke machine to the ON position.
6. Adjust the Master Volume and Mic Volume Controls of your Singing Machine to a comfortable level.
7. Set the switch on the receiver to the ON position.
8. Set the switch on the microphones to the top ON position.

