



This product is not a toy.

iWave and the iWave logo are registered trademarks of iWave Sicura Media, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by is under license. All other trademarks and trade names are those of their respective owners. ©2014




New York NY 10018
support@iwaveaudio.com
www.iwaveaudio.com
Made in China exclusively for
iWave Sicura Media, Inc.

iwave
WIRELESS




BSK25 WINDSOR
Bluetooth® Wireless Speaker

Parts & Features

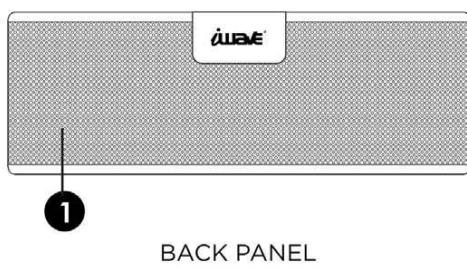

BACK PANEL

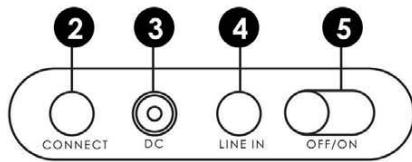

Speaker Features

1. Speaker grill
2. Bluetooth Button
3. DC IN
4. Aux Line-In
5. On/Off Switch
6. Volume Down
7. Previous Track
8. Play/ Pause
Phone Button
9. Next Track
10. Volume Up

Connections

Connect Power

Caution:

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Connect the power cord to the wall outlet.

Connect to External Audio Device

Use an 3.5mm to 3.5mm audio cable to connect the external audio device (e.g. TV, iPhone...) headphone socket to the AUX socket on the unit.

Basic Operations

Power ON/OFF

- When you first connect the unit to the main socket, the unit will be in STANDBY mode.
- Slide the button on the main unit to the ON position.
- Slide again to switch the main unit back to Standby mode.

Note:

- Be sure to unplug the power cord from the outlet when the system is not in use for an extended period of time.
- If there is no signal under the Bluetooth and AUX mode, the unit will automatically switch off within 10 minutes.
- When turning the system on, the system will continue in the mode it was in when it was turned off last time.

Adjust Volume Level

- Press the Volume Up/Volume Down buttons to adjust the volume.
- The display will flash once when you reach max volume.

Using A Bluetooth Device

AUX Operations

1. Ensure that the unit is connected to the TV or audio device.
2. Press Volume Up / Down to adjust the volume to your desired level.
3. In AUX mode, operate your audio device directly for playback features.

Pair Bluetooth-enable Devices Manually

Note:

- The first time you connect your Bluetooth device to this speaker you need to pair your device to this speaker.
 - The operational range between this player and a Bluetooth device up to 30 feet.
 - Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - Keep this player away from any other electronic device that may cause interference.
1. If the device hasn't been paired with a device it will enter paring mode automatically.
 2. Press the Bluetooth Connect button to be searchable.
 3. Activate your Bluetooth device and select the search mode. "Windsor" will appear on your Bluetooth device list.
 4. Select "Windsor" in the pairing list. If the pairing succeeds, the device will make a confirmation sound.
 5. To disconnect the Bluetooth function, disable the function from your Bluetooth device.

NFC Operation

Pairing an NFC-enabled Device

1. Activate NFC on your mobile device.
2. Tap the mobile device on the NFC sensing area of the unit.
3. Operate your mobile device directly for playback features.
4. To disconnect, tap the mobile device on the NFC sensing area of the unit to disconnect or disable NFC from your mobile device.

Listen to music from Bluetooth device

If the connected Bluetooth device support Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player. If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.

1. Pair your device with the player.
2. Start playing music via your device (if it supports A2DP).

Note:

- To pause/resume play, press play/ pause button on the device or use the native controls on your device.
- To skip to a track, press the track up/down buttons on device.

Hands Free Instruction

Hand Free Controls

- First pair Bluetooth device with speaker
- When there is a call coming in, press the phone button to answer, playing music will pause; and press again to end call. Hold button for 3 seconds to refuse call. Press twice to redial numbers.
- Hold the Volume Up button to redial last dialed number
- Hold the Volume down button to mute microphone, hold again to unmute.

Trouble Shooting

No power

- Ensure that batteries are inserted correctly or that the AC cord of the device is connected properly.
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

No Response From the Unit

- Disconnect and reconnect the AC power plug, then turn on the unit again, or remove and re-insert batteries.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your bluetooth device.

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

1. Read these instructions — All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions — The safety and operating instructions should be retained for future reference.
3. Heed all warnings — All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions — All operating and use instructions should be followed.
5. Do not use this apparatus near water — The appliance should not be used near water or moisture — for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordaVnce with the manufacturer's instructions.



8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
16. Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus: Install all batteries correctly, + and - as marked on the apparatus.

Warning

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical with the voltage of your local power supply. Important Safety Instructions
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Make sure there is at least 7.9 inches of space above and at least 1.97 inches of space on each side of the unit.
- Do not place this unit close to strong magnetic field.
- Do not place the unit on the amplifier or receiver.
- Don't place this unit close to the damper, or the moisture will affect the life of the laser head.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The rating label is pasted on the bottom of the equipment.

Specs

General

- Model No.: BSK25
- Speaker size: 10.07" x 3.14" x 3.67" in
- Power by DC 12V 3A Charger / 8 AA Batteries
- Operation Time: 7 Hrs
- Output power: 2x10w
- Working distance: < 30ft (10 m) (Distance may vary between different cellphone Bluetooth devices and the environment)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,

and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cyber Blue (HK) Limited, declares that this Radio-Frequency peripheral is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.