


Set-up Procedure for F-FM96MCU

1. Loosen two screws by tool enclosed with EUT and remove the bottom plate.

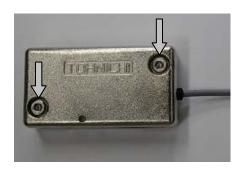

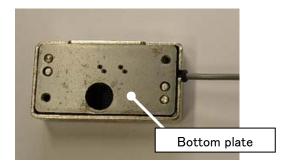

2. To set up EUT in the transmit mode, lift the lever up and insert sponge in, then LED lights up. While LED is lighting up, the EUT transmits continuously..

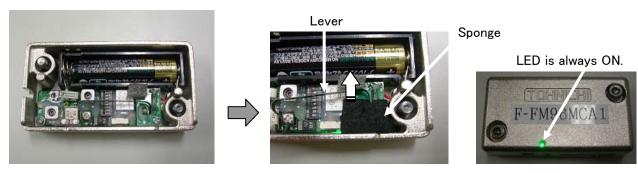

3. Put the bottom plate back to the transmitter with two screws.