



#### 6 CHANNEL RADIO CONTROL SYSTEM

#### Transmitter T5F

(2 sticks,6channel,FM transmitter) Transmitting frequency: 72 Mhz

Modulation method:FM


Power requirement: 12V(penlight battery 8pcs); 3W


## Receiver R6F

(6channel.FM receiver) Receiver frequency: 72 Mhz

Size:40X25X15mm

Power requirment: 4.8V or 6.0V; 200mW

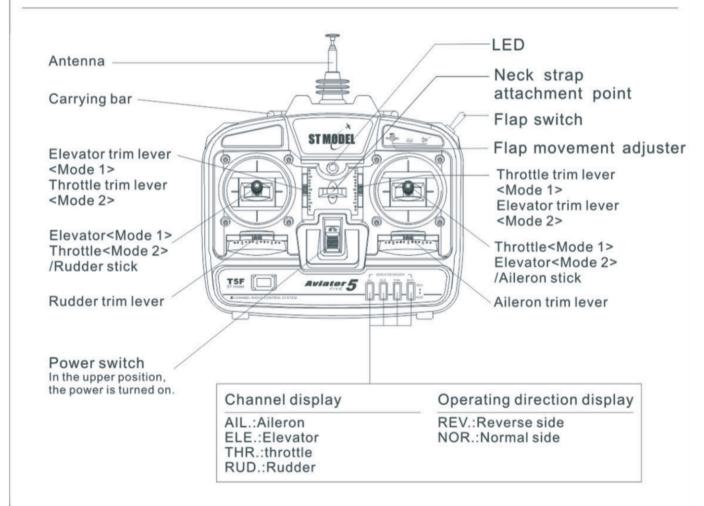



Ch1:Aileron Ch2:Elevator Ch3:Throttle Ch4:Rudder Ch5:Flap Ch6:AUX

ShengTeng Electric R/C Model Plane Co.,Ltd Phone No.:0086-573-2032127 Fax No.:0086-573-2089745

E-mail:shengteng@263.net.cn Web site:www.sheng-teng.com

- Remove and insert the battery according to the "positive / negative" marks of battery case of the rear cover of transmitter.
- Non-rechargeable batteries are not to be recharged;
- Rechargeable battery are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited;
- Children under the age of 12 must be accompanied by an adult.
- The battery chargers used with the toys are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this battery charger until the damage has been repaired.

# Warning:

- 1. The replacement of the crystal is in violation of the FCC rules.
- 2. All controls, adjustments and switches may be operated or adjusted without resulting is in a violation of FCC rules.
- 3. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Statements:

- 1. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate