Tenda

Quick Installation Guide

For product or function details, please go to www.tendacn.com.

WiFi Router
AC8/AC5

WiFi router * 1
Power adapter * 1
Ethernet cable * 1
Quick installation guide * 1

Package contents

- WiFi router * 1
- Power adapter * 1
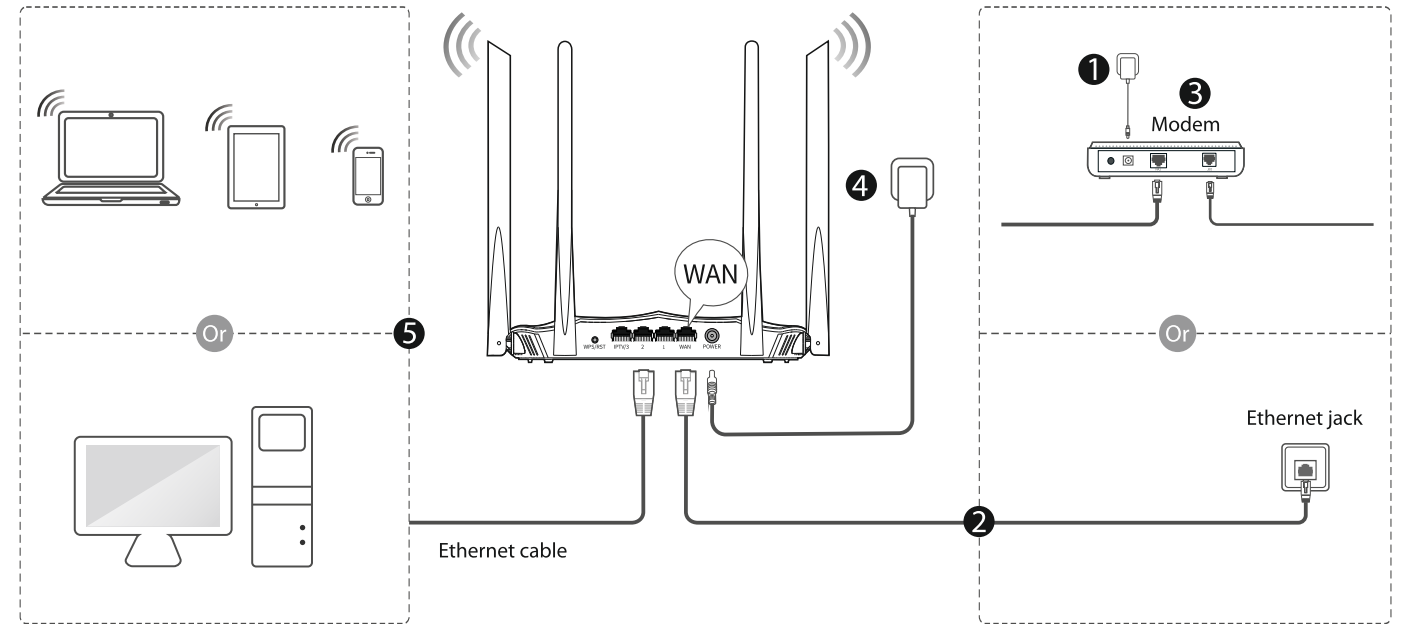- Ethernet cable * 1
- Quick installation guide * 1

Scan to download the **Tenda WiFi** app, or get it on **Google Play/App Store**.

Step 1: Connect your devices.

❶ Power off your modem, and remove its battery (if any).
❷ Connect the WAN port of the router to a LAN port of your modem or to an Ethernet jack.
❸ Reinstall its battery, and power on your modem.
❹ Use the included power adapter to connect the router to a power source. The LED indicator lights solid on.
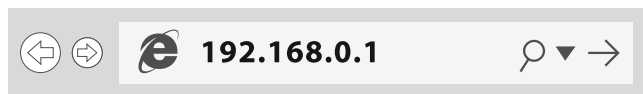❺ Connect your devices to the router.

Wireless devices: Connect wireless devices to the WiFi network of the router using the default WiFi name specified on the bottom label of the router. By default, there is no WiFi password.
Wired devices: Connect wired devices to port IPTV/3, 1, 2 of the router.

Modem

WAN

Or

Or

Ethernet jack

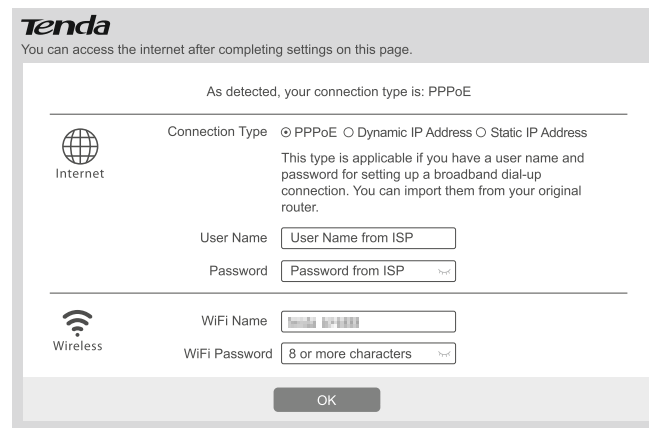Ethernet cable

Step 2: Set up the router for internet access.

1. Start a web browser on the device connected to the router. Enter **tendawifi.com** or **192.168.0.1** in the address bar, and press **Enter**.
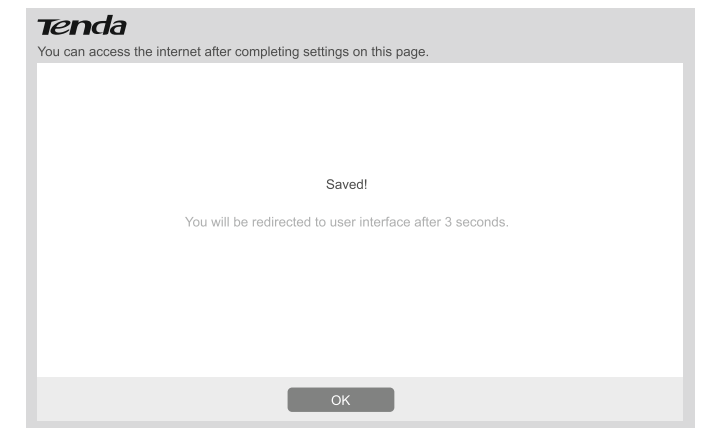
192.168.0.1

Tips
If you cannot log in to the web UI of the router, refer to **Q1** in **FAQ**.

2. The router detects your internet connection type automatically. PPPoE is used for illustration here. Enter the **User Name** and **Password** provided by your ISP (Internet Service Provider).

3. Customize your **WiFi Name** and **WiFi Password**, and click **OK**.

Tenda
You can access the internet after completing settings on this page.

As detected, your connection type is: PPPoE

Internet	Connection Type ⦿ PPPoE ○ Dynamic IP Address ○ Static IP Address

This type is applicable if you have a user name and password for setting up a broadband dial-up connection. You can import them from your original router.

User Name: User Name from ISP
Password: Password from ISP

Wireless
WiFi Name
WiFi Password: 8 or more characters

OK

Done. You can enjoy the internet now.

Tenda
You can access the internet after completing settings on this page.

Saved!

You will be redirected to user interface after 3 seconds.

OK

Step 3: Access the internet.

Wireless devices: Connect your wireless devices to the WiFi network of the router using the WiFi name and WiFi password you set.
2.4 GHz WiFi name (SSID): The WiFi name you set here.
5 GHz WiFi name: The 2.4 GHz WiFi name plus a suffix **_5G**.

Tips
To modify the WiFi name and WiFi password, see **Q4** in **FAQ**.

Wired devices: Your wired devices connected to the router can access the internet directly now.