



HEX ENCOREPRO[™] PARTY SYSTEM

QUICK START GUIDE

Instructions en français......11 Instrucciones en español......22

Get ready for huge, booming sound!

The 808 Hex Encore Pro Party System has what you need to take your party to the next level!

- + **Multiple audio inputs** that let you play music via USB, Bluetooth, even the radio or a direct input.
- + **Two microphone inputs** that let you (and a friend!) sing along, with one mic included. The second input even lets you plug in your guitar!
- + **Preset EQ** settings that let you get exactly the sound you want.
- + Bass boost that gives your music an extra kick!
- + **Built-in multi-mode lighting** that creates the ultimate portable light show.

This guide takes you through the steps to get started!

Press Me and See!

What can a single button do? Press the BASS button on the top of the Encore Pro to find out for yourself—a big punch to your music, and a light show with some serious wattage! Just play, press, and pump it up!

BASS

Step 1: Unpack


Make sure the following items came in this package.

- Speaker
- Microphone
- 4ft Audio Cable
- AC Power Cord

Step 2: Plug in the speaker


Attach one end of the AC power cord to the **AC MAINS** jack on the back of the speaker.

Plug the other end of the power cord into a working outlet or surge protector.



Step 3: Turn the speaker on

Press and hold the $\ensuremath{\omega}$ button on the top of the speaker to turn it on.

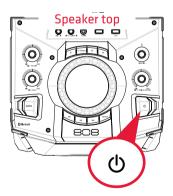

Step 4: Choose your audio source

Press the SOURCE button on the top of the speaker to cycle through the available inputs:

```
USB "_USB"
RADIO "_TUN"
3.5mm "_AU_""
RCA "LINE"
BT "_BT_"
```

The display on the front of the speaker shows you which audio source is currently playing.

To set up Bluetooth: Follow the instructions below.

Note: You can also select the Bluetooth and FM sources directly with the BT and FM buttons on the top of the speaker.



Setting up Bluetooth

- Press the BT button on the speaker. The display says "BT," then "NOBT" (if you haven't paired it yet).
- 2. Enable Bluetooth on your phone or other audio device

 If it isn't already on, turn on the Bluetooth function of your device.
- 3. Select 808 Encore Pro from the list of devices

The display on the front of the speaker says "BT CONNECTD" when it's finished connecting to your phone.

Notes: If you don't see **808 Encore Pro** in the list of Bluetooth devices on your phone, choose "Scan" from your phone's Bluetooth menu.

The process of enabling Bluetooth and connecting varies from device to device. See your device's owners manual for more information and specific instructions.

4. Start playing music on your device

The speaker starts streaming your music wirelessly.

Note: Make sure your device's volume is set to at least 75%.

Bluetooth Wireless Connection Tips

- Make sure the Bluetooth capability of your device is turned on.
- Make sure Bluetooth is the source selected on the Encore Pro.
- Make sure there's nothing plugged into the speaker's Aux In or RCA In jacks when
 you're trying to use Bluetooth.
- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the speaker, move closer to it.
- If your device asks you for a password to connect, use "0000".

Using EQ

This speaker has an **EQ** button that lets you select one of the preset equalization settings (**Rock**, **Jazz**, **Samba**, **Pop**, **Balance**, and **Funk**) that automatically adjust the equalization to enhance the sound for each type of music.

To use one of the preset EQ settings: Press the **EQ** button to cycle through the presets until you reach the setting you want to use. The front display tells you the current setting.

Activating Bass Boost and Light Show

The Encore Pro speaker offers a Bass Boost feature that gives your music a volume lift and bass punch. Press the **BASS** button on the top of the speaker to toggle Bass Boost on and off. The **BASS** button also triggers the Encore Pro light show effects on the speaker's front.

Using the Microphone Inputs

The Encore Pro comes with a microphone you can use to sing along or make announcements! Simply plug this provided microphone into the MIC1 jack on the top of the speaker and control the microphone volume with the MIC1 VOLUME knob on the top of the speaker. You can add an echo effect using the MIC1 ECHO knob under the volume knob. Start playback on any of the audio sources and sing along!



The Encore Pro can accommodate a second microphone or a guitar as well (not provided). Use the MIC2/GUITAR VOLUME knob to control this jack.

Using Two Encore Pros (BT Stereo)

If you have two Encore Pro speakers, you can use them together in stereo, either with Bluetooth Wireless Stereo, or through a wired connection.

To set up a 2 Encore Pros via Bluetooth Stereo: Make sure the second speaker is on. Press the **BT STEREO** button on the both speakers. The displays on the speakers will say "HOST" and "SL" when connected. (Press and hold **BT STEREO** on one speaker to disconnect.)

To set up a 2 Encore Pros via wired connection: Connect an RCA stereo cable (not included) to the OUT L/R jacks on the back of one Encore Pro. Connect the other end of this cable to the IN L/R jacks on the back of the other Encore Pro. Press the SOURCE button on the second Encore Pro to select the LINE IN input.

Using Dynamic Lighting

The **LIGHTING** dial on top of the speaker gives you control over the built-in dynamic lighting on the speaker's front.

Press the **LIGHTING** dial to cycle through the multiple lighting modes:

Always on: Turn the **LIGHT** dial to change colors.

Dance: The light pulses and changes color to the beat of your music.

Pulse: The light pulses to the beat of your

music (you might need to turn your music up!). Turn the **LIGHT** dial to change colors.

Party: The light changes colors to the beat of the music.


Breath: The light gradually intensifies and diminishes. Turn the **LIGHT** dial to change colors.

Chill: The light slowly goes through all the colors.

Off: Turns the front lighting off.

Turn the **LIGHTING** dial to cycle through the available colors for the Always On, Pulse, and Breath modes.

In addition to the light modes available through the **LIGHTING** dial, the speaker also features a "light show" mode, triggered by the **BASS** button.

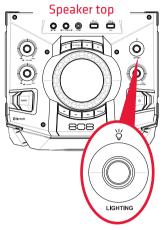

Tour of the Encore Party System

MIC 1 and MIC 2/GUITAR jacks let you connect up to two microphones (including the provided mic) or guitar to use with the speaker, for karaoke or announcements.

AUX IN jack lets you connect to an external audio device with a 3.5mm audio cable. The speaker switches automatically to LINE when you insert the cable

BT button switches to the Bluetooth source (press) or starts the Bluetooth pairing process (press and hold).


BT STEREO button switches to the multi-speaker Bluetooth Stereo (press) or starts the multi-speaker Bluetooth Stereo setup process (press and hold).

MIC1 VOLUME dial adjusts the volume of the MIC1 in microphone.

MIC1 ECHO dial adjusts the reverb effect added to the microphone audio.


BASS button activates the bass boost volume lift and light show. Press to turn bass boost on/off.

or next track during USB or Bluetooth playback (press and hold for USB to scan through a track). In radio mode, press to go to the next frequency, or hold to go to the next strong station.

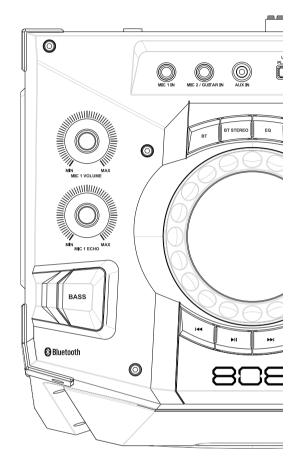

Volume dial adjusts the speaker's volume. The display shows the current level as you adjust (from 0, minimum, to 40, max).

▶II button starts or pauses playback in USB or Bluetooth modes. In radio mode, scans for stations and stores presets (press and hold).

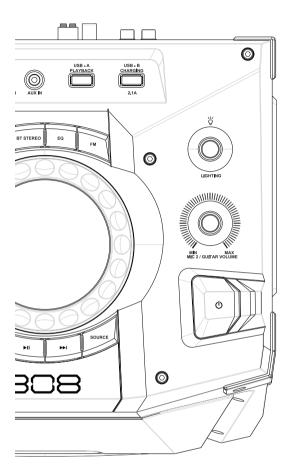

SOURCE button cycles through the different audio sources available: USB, LINE IN, RCA IN, BLUTOOTH, and RADIO. The dislpay shows the current audio source.

k

Display (front) shows the current audio source as well as information about the source (radio station frequency, for example) and Bluetooth connection status.

USB-A PLAYBACK port connects to a USB storage device for MP3 playback. To play music from this device, press **SOURCE** until the display reads "USB."

USB-B CHARGING port provides charging power to a USB-powered device. This jack does not support playback.

EQ button cycles through the speakers's preset equalization settings (**Rock**, **Jazz**, **Samba**, **Pop**, **Balance**, and **Funk**) to enhance the sound for each type of music.

FM button switches to the FM Radio source.

LIGHTING dial controls the speaker's multi-mode lighting. Press to cycle through the six light modes: Dance, Off, Always On, Pulse, Party, Breath, and Chill. Turn the dial in Always On, Pulse, and Breath mode to change the color of the light.

MIC2/GUITAR VOLUME dial adjusts the volume of the MIC2/GUITAR IN microphone or guitar.


button turns the speaker on and off.

9

AUDIO OUT L/R jacks connect to a second Encore Pro speaker for wired stereo.

AUDIO IN L/R jacks connect to external audio source.

FM antenna extends to improve FM radio reception.

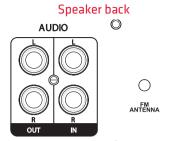

12 Month Limited Warranty

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

Important Information for 808 Model SP491

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE FOR FUTURE REFERENCE



"DANGEROUS

CAUTION: TO REDUCE THE AND ARROWHEAD WITHIN THE TRIANGLE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR S A WARNING SIGN BACK) ALERTING YOU OF NO USER-SERVICEABLE PARTS INSIDE. REFER VOLTAGE" INSIDE THE SERVICING TO QUALIFIED SERVICE PERSONNEL.

RISK OF ELECTRIC SHOCK DO NOT OPEN

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU O IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

SEE MARKING ON BOTTOM / BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Important Safety Instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10.Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

No naked flame sources, such as lighted candles, should be placed on the apparatus.

WARNING: The mains plug/appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with Items such as newspaper, table-cloths, curtains etc.

Care is required with the use of this apparatus in moderate climates.

See marking on the back of the product.

- 11. WARNING: Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used. use caution when moving the cart/ apparatus combination to avoid injury from tin-over



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

This is class II equipment designed with double or reinforced insulation so it does not require a safety connection to electrical earth (US: ground).

Plugging in for power

AC OUTLET POWER SUPPLY: 100-240 V ~ 50/60 Hz

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Care and Maintenance

- · Always use a soft cloth to clean the speaker and transmitter. Never use any product containing alcohol or other solvents as they may damage the surface.
- Use caution when plugging the power transformers in an AC outlet to avoid the risk of electric shock.
- If the speaker is used outside on a deck or patio, make sure you take it indoors in the event of a rainstorm to prevent possible damage.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Industry Canada Regulatory Information

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: 1) this device may not cause interference and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Industry Canada Regulatory Information

Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B)

CAN ICES-3 (B)/NMB-3 (B)

IC Radiation Exposure Statement: This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by VOXX Accessories Corporation is under license. Other trademarks and trade names are those of their respective owners.

Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

| | • | • |
|-----------------------|---|---|
| Model No.: | | |
| Purchase Date: | | |
| Dealer/Address/Phone: | | |

Information importante pour 808 Modèle SP491

IMPORTANTES INSTRUCTIONS DE SECURITE

BIEN LIRE ET CONSERVER POUR RÉFÉRENCE ULTÉRIFURE



MISE EN GARDE RISQUE DE CHOC ÉLECTRIQU NE PAS OUVRIR MISE EN GARDE : POUR

DANS LE TRIANGLE EST U MISE EN GARDE AVERTISSANT 'UTILISATEUR D'UN DANGER L À LA PRÉSENCE D'UNE « TENSION DANGEREUSE » INTÉRIEUR DE L'APPAREIL.

E POINT D'EXCLAMATION RÉDUIRE LE RISQUE DE DANS LE TRIANGLE CHOC ÉLECTRIQUE, NE EST UNE MISE EN RETIREZ PAS LE GARDE AVERTISSANT COUVERCLE (OU LE ANNEAU ARRIÈRE), 'UTILISATEUR DE UCUNE PIÈCE RÉPARABLE LA PRÉSENCE AR L'UTILISATEUR À L'INTÉRIEUR, CONFIEZ LES ÉPARATIONS À UN TECHNICIEN QUALIFIÉ,

D'INSTRUCTIONS IMPORTANTES ACCOMPAGNANT CET APPAREIL.

VOIR LA FICHE SIGNALÉTIQUE SOUS/À L'ARRIÈRE DE L'APPAREIL

L'appareil ne doit être exposé ni à un égouttement ni à des éclaboussures. Aucun objet rempli de liquide, par exemple un vase, ne doit être placé sur l'appareil.

Aucune source de flamme nue, comme une chandelle allumée, ne doit être dénosée sur l'annareil

AVERTISSEMENT : La prise électrique ou le coupleur est utilisé comme dispositif de déconnexion, celui-ci doit rester facilement accessible.

Ne pas installer ce matériel dans un espace confiné comme une bibliothèque ou un meuble similaire. La ventilation ne doit pas être gênée par l'obstruction des ouvertures de ventilation avec des objets tels que journaux, nappes, rideaux, etc.

Des précautions sont nécessaires pour l'utilisation de cet appareil dans des climats modérés.

Se reporter aux inscriptions au dos du produit.

RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, N'EXPOSEZ PAS CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

Instructions de sécurité importantes

- 1. Lire ces instructions.
- 2. Conserver ces instructions.
- 3. Respecter tous les avertissements.
- 4. Suivre toutes les instructions.
- 5. Ne pas utiliser cet appareil près de l'eau. 6. Nettoyer seulement avec un chiffon sec.
- 7. Ne bloquer aucune ouverture de ventilation. Installer conformément aux instructions du fabricant.
- 8. Ne pas installer près d'une source de chaleur, par exemple des radiateurs, des registres de chaleur, des poêles ou autres appareils (amplificateurs, par exemple) qui produisent de la
- 9. Ne pas contourner le dispositif de sécurité de la fiche polarisée ou de la fiche de type mise à la terre. Une fiche polarisée est munie de deux lames, dont l'une est plus large que l'autre. Une fiche de mise à la terre est munie de deux lames et d'une troisième broche de mise à la terre. La lame large ou la troisième broche sont fournies pour garantir la sécurité. Si la fiche fournie n'entre pas dans la prise, consulter un électricien pour le remplacement de la prise obsolète.

- 10. Protéger le cordon d'alimentation de manière à ne pas marcher dessus ni le pincer, surtout au niveau de la fiche, de la prise ou de la sortie du cordon de l'appareil.
- 11. AVERTISSEMENT: Utiliser uniquement des accessoires spécifiés par le fabricant.
- 12. Utiliser seulement avec le chariot, le socle, le trépied, le support ou la table spécifiés par le fabricant, ou le dispositif vendu avec l'appareil. Quand un chariot est utilisé, fair preuve de prudence lors du déplacement de l'ensemble chariot/appareil afin d'éviter toute blessure provoquée par un basculement éventuel.
- 13. Débrancher cet appareil pendant les orages électriques ou s'il n'est pas utilisé pendant de longues périodes.
- 14. Confier l'entretien de l'appareil à un technicien agréé. Faire réparer l'appareil s'il a été endommagé de quelque manière que ce soit, par exemple si le cordon d'alimentation, ou la fiche, est endommagé(e), si du liquide a été renversé sur l'appareil ou si des objets sont tombés sur l'appareil, s'il a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.

| | l |
|-----|---|
| | l |
| 1 1 | l |
| 1 1 | l |
| | ı |

Cet appareil de classe II est doté d'une isolation double ou renfermée et ne requiert pas de mise à la terre de sécurité.

Branchement

ALIMENTATION COURANT ALTERNATIF: 100-240 V ~ 50/60 Hz

MISE EN GARDE : Les consignes de maintenance de cette notice sont destinées uniquement aux techniciens qualifiés. Afin de réduire les risques d'électrocution, n'effectuez aucune tâche d'entretien autre que celles décrites dans les consignes de fonctionnement si vous n'êtes pas qualifié.

Entretien et maintenance

- Toujours utiliser un chiffon doux pour nettoyer le haut-parleur et l'émetteur. Ne jamais utiliser un produit qui contient de l'alcool ou d'autres solvants, car il risque d'endommager la surface.
- Faire preuve de prudence lors du branchement des transformateurs dans une prise de courant alternatif, afin d'éviter les risques de choc électrique.
- Si les haut-parleurs sont utilisé à l'extérieur, sur une terrasse ou sur un patio, veiller à les rentrer à l'intérieur en cas d'orage pour éviter de les endommager.

Déclaration de la FCC

Cet appareil est conforme à la partie 15 du règlement de la FCC. Le fonctionnement est sujet aux deux conditions suivantes

1) Cet appareil ne doit pas provoquer de brouillage préjudiciable et (2) cet appareil doit accepter tout brouillage reçu, y compris le brouillage susceptible de provoquer un fonctionnement indésirable.

Remarque: cet équipement a été soumis à des essais et a été déclaré conforme aux limites stipulées pour un appareil numérique de classe B, conformément aux spécifications de la partie 15 du règlement de la FCC. Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio. Cependant, il est impossible de garantir qu'aucun brouillage ne se produira dans une installation particulière. Si cet équipement cause un brouillage de la réception de radio ou de télévision, ce qu'il est possible de déterminer en éteignant puis en rallumant l'équipement, l'utilisateur est prié d'essayer de corriger le brouillage au moyen de l'une ou de plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance séparant l'équipement du récepteur.
- Brancher l'équipement dans une prise dont le circuit est différent de celui où est branché le récepteur.
- Consulter le revendeur ou un technicien expérimenté de radio/télévision.

Attention : les changements ou les modifications effectuées qui ne sont pas expressément approuvés par VOXX Accessories Corporation peuvent annuler l'autorisation accordée à l'utilisateur de se servir de l'équipement.

Déclaration FCC sur l'exposition aux radiations

Cet équipement est conforme aux normes d'exposition de la FCC en matière de radiations définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé en respectant une distance minimale de 20 cm entre l'émetteur de radiations et vous-même.

Information sur la réglementation d'Industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Information sur la réglementation d'Industrie Canada

CAN ICES-3 (B)/NMB-3 (B)

Numéro de modèle :

Déclaration IC sur l'exposition aux radiations : cet équipement est conforme aux limites d'exposition stipulées par IC pour un environnement non contrôlé.

Le mot servant de marque et les logos de *Bluetooth*® sont des marques déposées et sont la propriété de *Bluetooth* SIG, Inc. et toute utilisation de telles marques par VOXX Accessories Corporation est effectuée sous licence. Toutes les autres marques de commerce et dénominations commerciales sont celles de leurs propriétaires respectifs.

Information sur le produit

| Conserver la facture comme preuve d'achat, ainsi que pour obtenir des pièces et toute réparation cou | ıverte par la garantie. |
|---|-------------------------|
| Attacher la facture ici et inscrire le numéro de série et de modèle comme référence en cas de besoin. | Ces numéros se trouvent |
| sur le produit. | |

| d'achat : | |
|------------------------------|--|
| sse/téléphone du revendeur : | |
| | |

Información Importante para 808 modelo SP491

IMPORTANTE INSTRUCCIONES DE SEGURIDAD

FAVOR DE GUARDAR ESTO PARA UNA REFERENCIA FUTURA



TERMINADO EN

FQUILÁTERO

USUARIO DE LA

PRESENCIA DE

PELIGROSO" DENTRO

ADVIERTE AL

"VOLTAJE

FLECHA DENTRO DE

PRECAUCIÓN RESGO DE CHOQUE ELÉCTRICO NO ABRIR

PRECAUCIÓN: PARA
EVITAR EL RIESGO DE
CHOQUE ELÉCTRICO, NO
REMUEVA LA CUBIERTA (O
LA PARTE POSTERIOR).
DENTRO NO HAY PARTES
QUE REQUIERAN SERVICIO
POR PARTE DEL USUARIO.
REFIERA EL SERVICIO A
PERSONAL TÉCNICO
CALIFICADO.

EL SÍMBOLO DE ADMIRACIÓN DENTRO DEL TRIANGULO ES UN SIGNO DE ADVERTENCIA ALERTÁNDOLE DE INSTUCCIONES IMPORTANTES QUE ACOMPAÑAN AL PRODUCTO.

VEA LAS MARCAS EN LA PARTE INFERIOR / POSTERIOR DEL PRODUCTO

ADVERTENCIA: PARA EVITAR PELIGRO DE CHOQUE ELÉCTRICO O INCENDIO, NO EXPONGA ESTE PRODUCTO A LA LLUVIA O LA HUMEDAD.

Importantes Instrucciones de Seguridad

- Lea estas instrucciones.
- 2. Guarde estas instrucciones.
- 3. Preste atención a todas las advertencias.
- Acate todas las instrucciones.
- 5. No use este aparato cerca de agua.6. Limpie sólo con un trapo seco.
- 7. No obstruya ningún orificio de ventilación. Instale en conformidad con las instrucciones del fabricante.
- No instale cerca de fuentes térmicas, como radiadores, reguladores de calefacción, cocinas y otros aparatos que generen calor (incluidos los amplificadores).
- 9. No anule el propósito de seguridad que tiene el enchufe polarizado o puesto a tierra. Un enchufe polarizado tiene dos paletas, una más ancha que la otra. Un enchufe puesto a tierra tiene dos paletas y una clavija de conexión a tierra. La paleta más ancha o la clavija se incluyen por su seguridad. Si el enchufe proporcionado no encaja en su tomacorriente, solicite a un electricista que reemplace el tomacorriente obsoleto.

El aparato no deberá exponerse a goteos ni salpicaduras. No se debe colocar objetos que contengan líquidos como, por ejemplo, floreros, sobre el aparato.

Ninguna fuente de flama abierta, tal como velas encendidas, deberá colocarse sobre el aparato.

ADVERTENCIA: El acoplador del aparato o el enchufe de la red eléctrica (MAINS) se utilizan como dispositivo de desconexión; éste deberá estar siempre listo para funcionar.

No instale este equipo en un espacio confinado como, por ejemplo, una estantería de libros o una unidad similar. Para garantizar una ventilación adecuada, no cubra las aberturas de ventilación con artículos como, por ejemplo, periódicos, manteles, cortinas, etc.

Se debe tener cuidado siempre que se utilice este aparato en climas moderados.

Consulte las indicaciones marcadas en la parte posterior del producto.

- 10. Proteja el cable de alimentación de modo que no resulte pisado ni aprisionado, especialmente en el enchufe, la caja de contacto y el punto por donde sale del aparato.
- ADVERTENCIA: Utilice sólo aditamentos o accesorios especificados por el fabricante.
- 12. Use sólo con el carrito, base, trípode, soporte o mesa especificados por el fabricante o vendidos con el aparato. Si usa un carrito, tenga cuidado al mover el aparato y el carrito juntos para evitar lesiones si se vuelcan.
- Desenchufe este aparato en caso de tormentas o de lapsos prolongados de inactividad.
- 14. Solicite al personal técnico calificado todo tipo de mantenimiento del producto. Es necesario darle mantenimiento al aparato si ha sido averiado de alguna forma, por ejemplo, si se ha dañado el cable de alimentación o el enchufe, si se le ha derramado algún líquido encima, si han caído objetos en su interior, si ha sido expuesto a la lluvia o la humedad, si no funciona correctamente o si se ha deiado caer.



Este es un equipo clase II diseñado con doble aislamiento o refuerzo de manera que no requiera una conexión de seguridad a tierra eléctrica (EE.UU.: tierra).

Conexión a la red

FUENTE DE ALIMENTACIÓN CA: 100 - 240 V ~ 50/60 Hz

PRECAUCIÓN: Estas instrucciones de servicio son para uso exclusivo del personal de servicio calificado. Para reducir el riesgo de descarga eléctrica, no realice reparaciones que no se encuentren en las instrucciones de funcionamiento a menos que usted está calificado para hacerlo.

Cuidado y Mantenimiento

- Tenga precaución al enchufar los transformadores de potencia en un tomacorriente de CA para evitar el riesgo de choque eléctrico
- Si se utiliza el altavoz en una terraza o patio, asegúrese de almacenarlo en el interior en caso de tormentas para evitar posibles daños.

Declaración de la Comisión Federal de Comunicaciones de los Estados Unidos

Este dispositivo cumple con la Parte 15 de las Reglas de la FCC. Su funcionamiento está sujeto a las siguientes dos condiciones:

1) Este dispositivo no debe causar interferencia y 2) Este dispositivo debe aceptar toda interferencia recibida, incluida aquélla que puede causar un funcionamiento no deseado.

Aviso: Este equipo ha sido probado, y se consideró que cumple con los límites de los aparatos digitales de Clase B, de acuerdo con las especificaciones de la Parte 15 de las Reglas de la FCC. El objetivo de estos límites es ofrecer una protección razonable contra interferencias nocivas en una instalación residencial. Este equipo genera, utiliza y puede radiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con estas instrucciones, puede generar interferencia perjudicial para

las radiocomunicaciones. Sin embargo, no se garantiza que no se producirá interferencia en una instalación en particular. Si su equipo causa interferencia perjudicial para la recepción de radio o televisión, que se puede averiguar apagando y encendiendo el equipo, intente corregirla mediante uno o varios de los siguientes procedimientos:

- Vuelva a orientar o cambie de lugar la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte este equipo a un tomacorriente en un circuito diferente al que esté conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado de radio y televisión para solicitar asistencia.

Atención: Los cambios o modificaciones no aprobados expresamente por VOXX Accessories Corporation podrían anular la autoridad del usuario conferida para utilizar este equipo.

Declaración sobre la exposición a radiaciones según la FCC

Este equipo cumple los límites de exposición a radiación de la FCC establecidos para un entorno no controlado. Este dispositivo debe instalarse y operarse con una distancia mínima de 20 cm entre el radiador y su cuerpo.

Información Regulatoria de la Industria Canadiense

Este dispositivo cumple con las Normas de la Industria Canadiense para productos exentos de licencia. Su funcionamiento está sujeto a las siguientes dos condiciones: 1) este aparato no debe causar interferencia y 2) este aparato debe aceptar toda interferencia, incluida aquélla que puede causar un funcionamiento no deseado del dispositivo.

Información Regulatoria de la Industria Canadiense

CAN ICES-3 (B)/NMB-3 (B)

Declaración IC de exposición a la radiación: Este equipo cumple con los límites de exposición a la radiación establecidos por IC para un entorno no controlado.

La marca denominativa y los logotipos de *Bluetooth*® son marcas registradas propiedad de Bluetooth SIG, Inc. y el uso de dichas marcas por parte de VOXX Accessories Corporation se hace bajo licencia. Otras marcas comerciales y nombres de marcas son aquellas de sus respectivos dueños.

Información sobre el Producto

| ı | Guarde el recibo como prueba de su compra y preséntelo para obtener repuestos o solicitar servicio bajo garantía. |
|---|--|
| ı | Anéxelo aquí y anote los números de serie y de modelo para referencia en caso necesario. Estos números se encuentran |
| ı | en el producto. |

| · · · · · · · · · · · · · · · · · · · | |
|---------------------------------------|--|
| Número de modelo: | |
| Fecha de Compra: | |
| Distribuidor/Dirección/Teléfono: | |
| | |

SP491 Safety and Warranty 01