OWNER'S MANUAL Musical Umbrella



A CAUTION!

To operate this musical umbrella correctly, please read and understand the owner's manual before operating this product.

SAVE THIS MANUAL


FCC Notice To Users

Techwall is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PARTS LIST

1 Umbrella

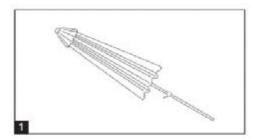


2 GFCI Power Cord

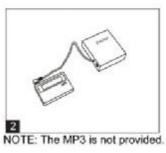

ASSEMBLY INSTRUCTIONS

Note: Before assembling your new patio umbrella, and placing it in your patio table, determine the location of your patio grouping.

Place your umbrella base (purchased separately,minimum weight 44 pounds) in the center of the area where you will be using your patio set. Be sure the base shaft is clear of obstructions, and any clamping devices are open to allow the Pole of Umbrella to be easily placed in the base.

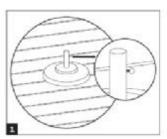


2 Assemble your patio table. Please refer to assembly instructions included with the table. If your table is already assembled, skip to Step 3.




ASSEMBLY INSTRUCTIONS

Put the patio table above the umbrella base. Adjust the patio table and/or the umbrella base to ensure the holes of them be in a straight line.

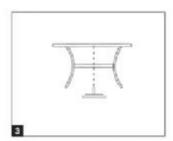


Put the pole of umbrella into the umbrella base through the holes of the patio table.

NOTE: Be sure base shaft is clear of obstruction, including any rings provided with the base for smaller diameter umbrella poles. Also insure any clamping devices are open.

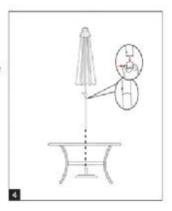

Make any final adjustment to the positioning of the table, umbrella, and umbrella base assembly on your patio surface. Follow the directions included with the umbrella base to secure the pole of umbrella in the umbrella base.

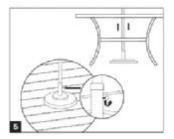


6 The full assembly.



Now your Musical Umbrella Is Ready to Use.

1


Open the musical umbrella by rotating it's handle. Then open the power of your MP3 and the emitter.

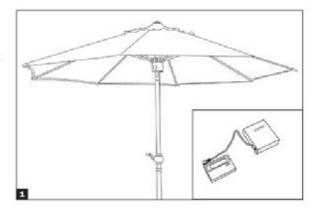

2

Press the button of the receiptor and loudspeaker attached on the umbrella.

Now you can enjoy the music!

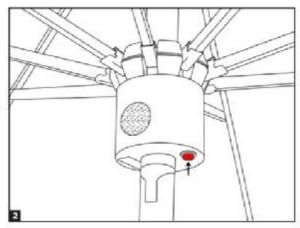

Cleaning and Maintenance

- Wash frame parts and fabric with mild soap and water, rinse thoroughly. Dry frame completely and allow the fabric to drip dry. Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Always close the umbrella in heavy wind conditions. Not doing so, may cause the umbrella to tip over and cause damage to its parts.
- In order to prolong the life and beauty of your umbrella, we recommend that the umbrella be stored in a dry and secure area during off season periods.