



Instructions

1 Print glossy White.




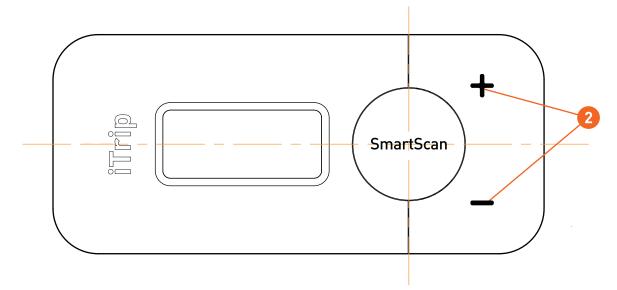

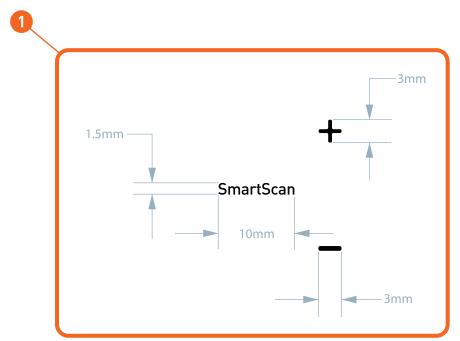

Instructions


- 1 Print Pantone 877 Metallic Silver.
- 2 Print on top of raised icons.

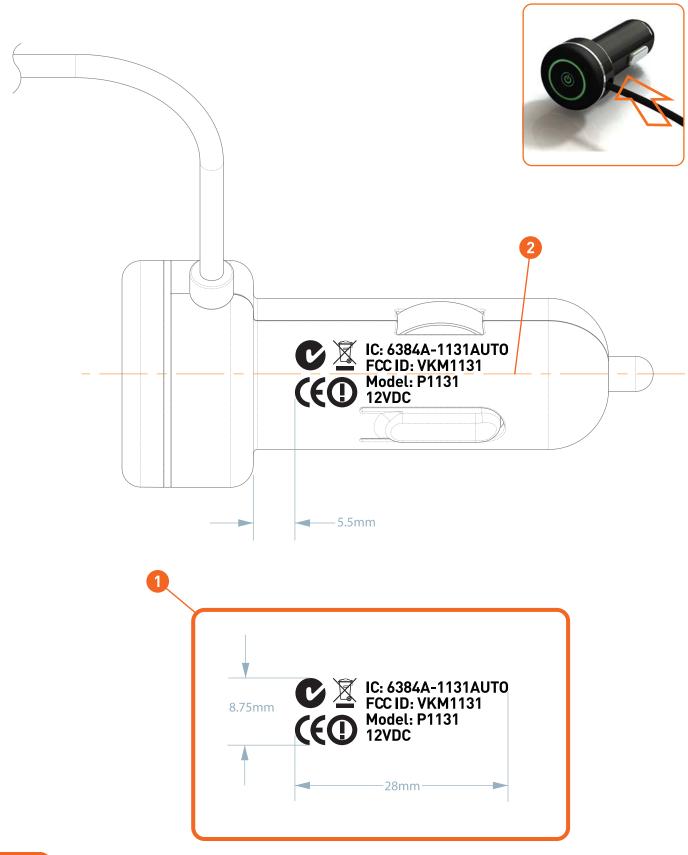

Instructions

- 1 Print matte black.
- 2 | Center graphics on power adapter.



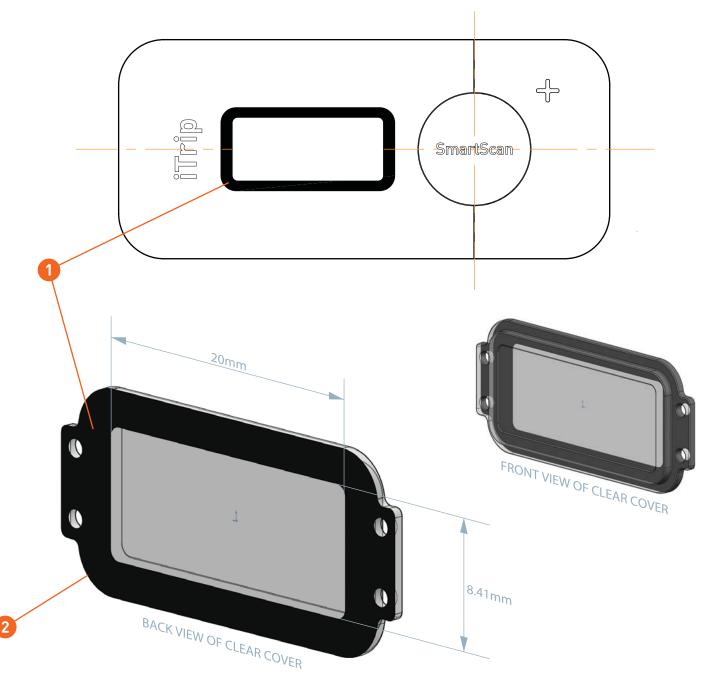

Print Artwork

- 1 Screen print second surface of clear plastic LCD cover (back of lens). Print in glossy black.
- 2 | Screen print should come all the way to outside edge of clear plastic LCD cover.