



INSTALLATION

- Place the receiver into the top of the mounting bracket with the flat side facing the ceiling. Tuck the receiver antenna and all wiring up into the mounting bracket, making sure the wires don't become pinched.

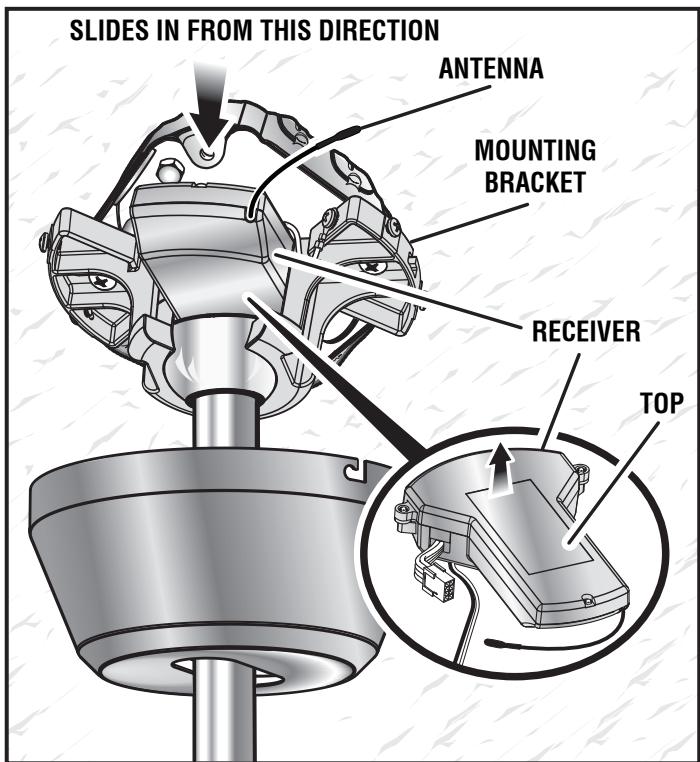


- Slide the canopy up into place and rotate clockwise to lock to mounting bracket assembly. Reinstall the two screws (M4 x 6 mm) removed previously and tighten securely.

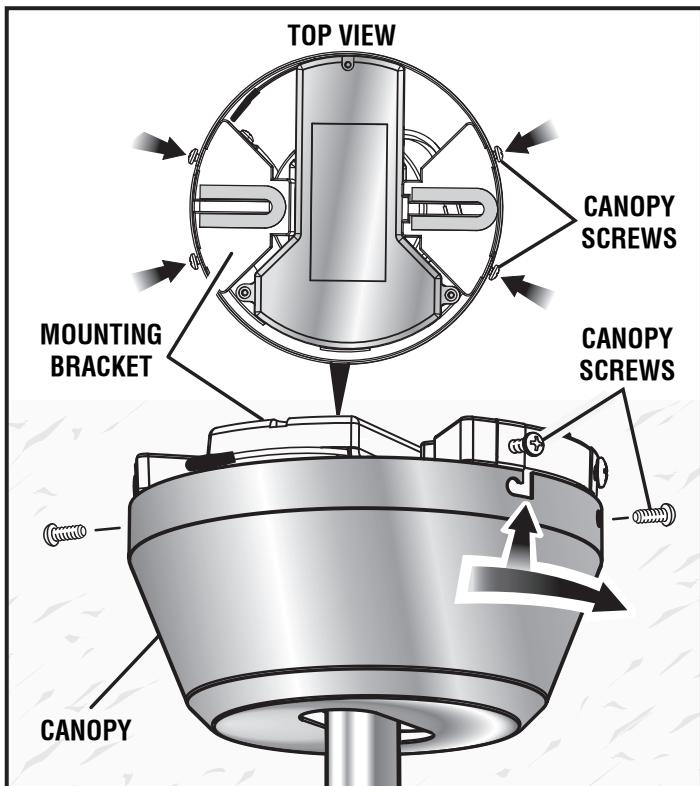


NOTE: If the canopy won't align with the screw holes, you may have overtightened the ceiling mounting bracket screws when securing the bracket to the outlet box. Remove the ceiling fan and loosen the screws just enough to allow the outlet box to become flush with the sheetrock, but not so much that the ceiling fan bracket is no longer securely fastened to the outlet box.

- Lift the screw cover ring up over the screws and twist counterclockwise to secure in place.

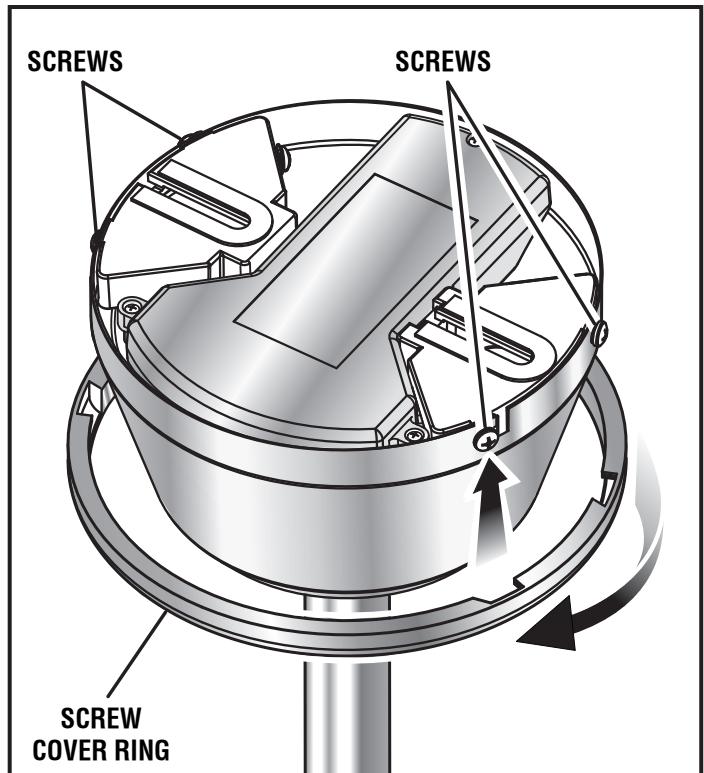


- Remove the thumb nuts at the end of the support arms.

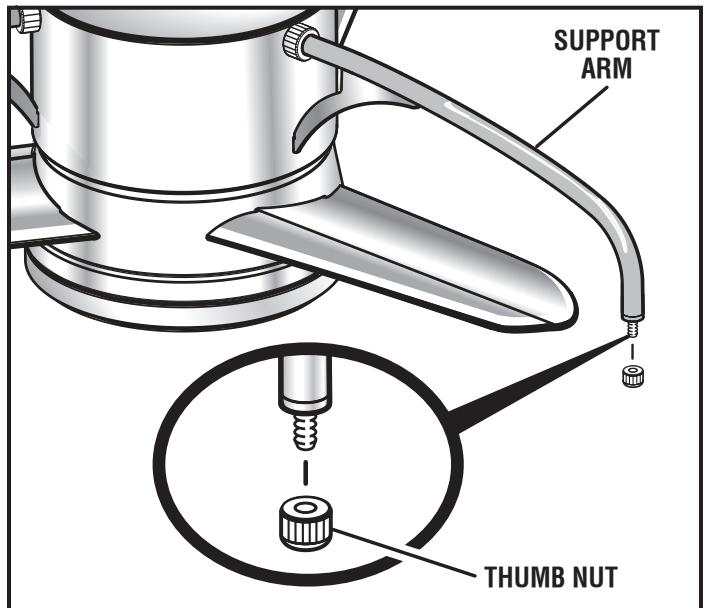


INSTALLATION


- Place the assembled light shade mounting bracket side up, then align the mounting brackets with the threaded ends of the support arms so the threaded ends pass through the holes in the mounting brackets.

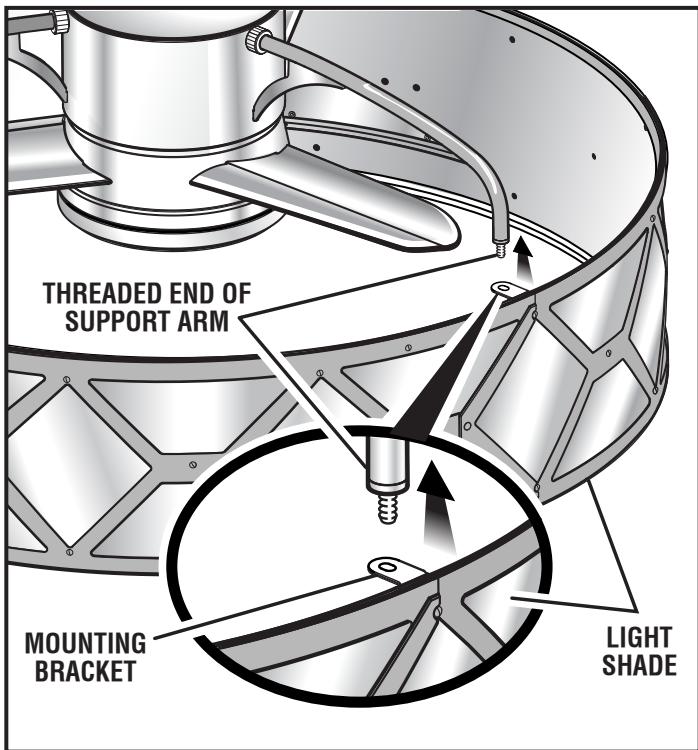

- Install the light lens and twist counterclockwise to secure.

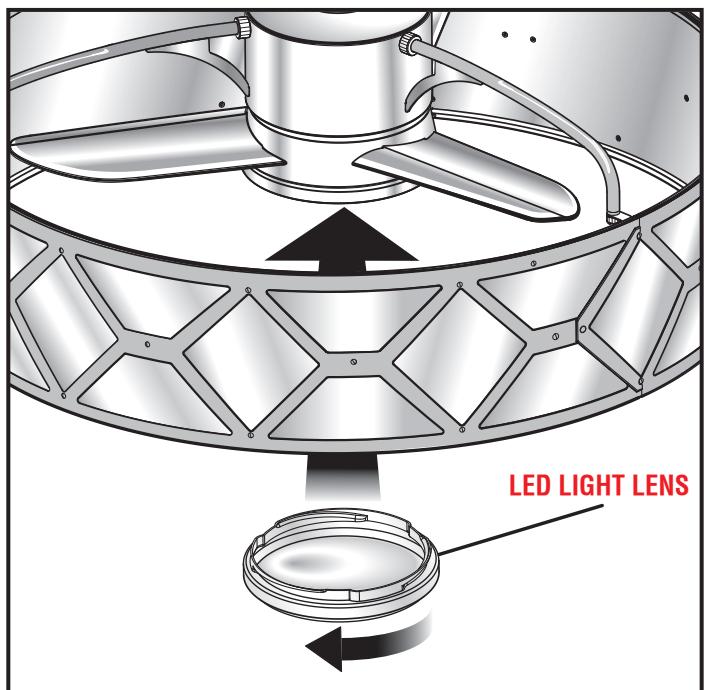

- Restore power to the room and wall switch, but do not turn on the wall switch yet.

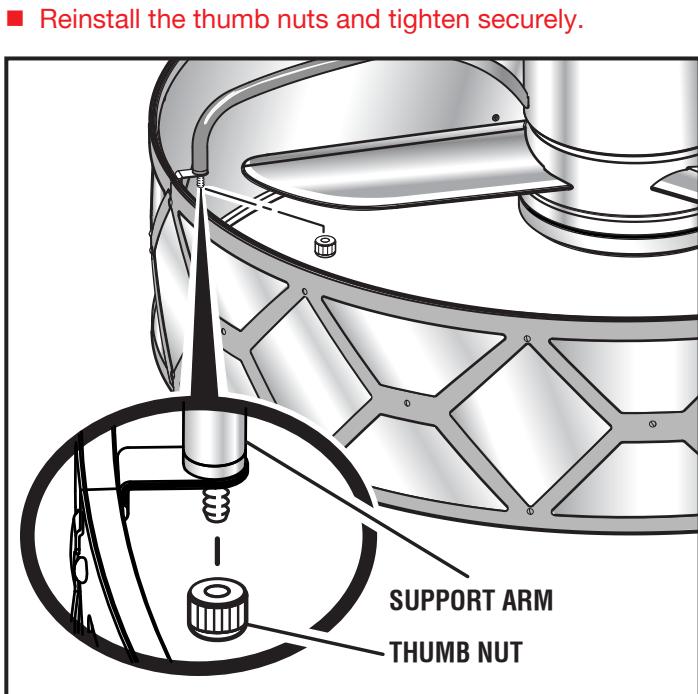

INSTALLATION

USING THE REMOTE CONTROL


WARNING:

Chemical Burn Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Keep button cell battery in original packaging until ready for use in the remote control. Dispose of used button cell batteries immediately.


NOTE: If you have not already done so, restore power to the room and wall switch, but do not turn the wall switch on. The remote control will have no effect on the fan when the switch is turned off.

- Install the CR2032 button cell battery provided into the remote control as shown.

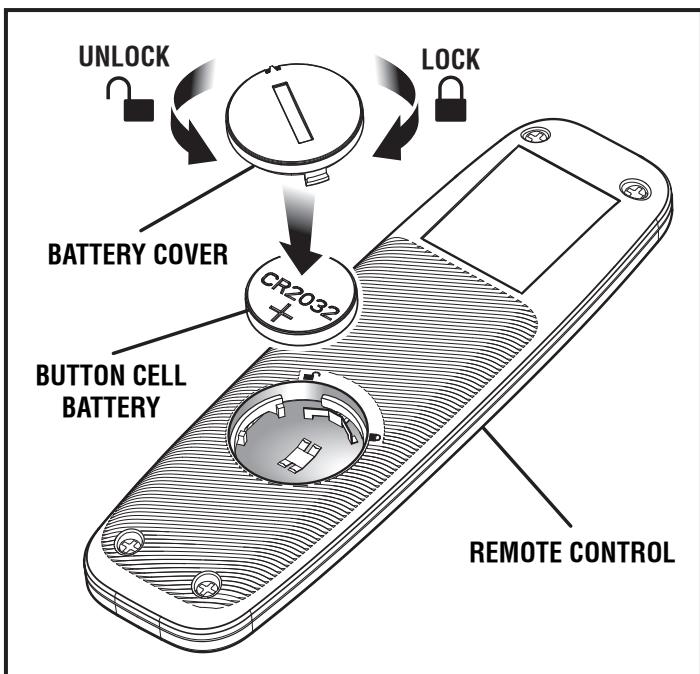

- Turn on the wall switch to provide power to the fan. For approximately 1 minute after the switch is turned on, the fan will search for the remote control. To pair the remote to the fan, press and hold the remote's fan (⟳) and light (💡) on/off buttons simultaneously for approximately 5 seconds.

NOTE: A total of 3 remotes can be paired to the fan. Simply repeat the step above to pair each one.

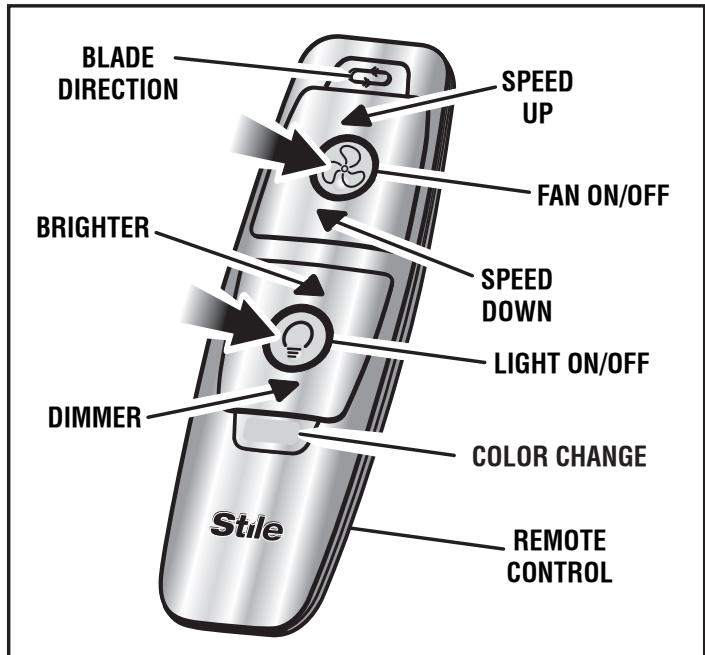

- To turn the light on and off, press and release the light on/off button (💡). Use the up (▲) and down (▼) arrows to control the brightness of the light.

NOTE: The brightness of the fan light can only be controlled by the remote control. A wall-mounted dimmer switch will not change the light's brightness.

- To change the color of the light, press the color change button. The light will cycle through the spectrum from warm white to daylight. Release the color change button when the light reaches your desired appearance. If you reach the end of the spectrum, release the button, then press again to go back the opposite way.
- To turn the fan on and off, press and release the fan on/off button (⟳). Use the up (▲) and down (▼) arrows to cycle through the fan speeds of Low, Medium, and Hi.
- To change the rotation direction of the ceiling fan blades, allow the blades to come to a complete stop, then press the blade direction button (⟳).

OPERATION

To mount the remote control holder:

- Remove the screw cover from the remote control holder.
- Install the remote control holder in the desired location using the two mounting screws provided.
- Replace the screw cover to cover the screw heads.

⚠ WARNING:

Always dispose of used batteries properly, including keeping them away from children. Even used cells may cause injury.

MODEL NO: CFARC03


FCC ID: VMZCFARC03 IC: 9880A-CFARC03

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

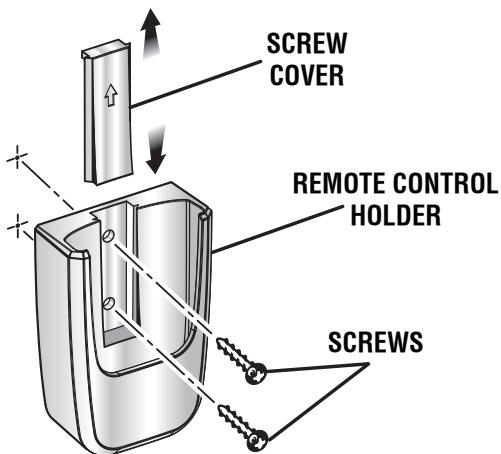

OPERATION


SETTING THE AIRFLOW DIRECTION

Choosing the correct airflow direction of the ceiling fan will enhance the fan's performance and make its use more enjoyable. To change the direction of airflow, use the blade direction button (↻) at the top of the ceiling fan's remote.


NOTICE:

Always allow the ceiling fan to come to a complete stop before changing the fan's direction.

- Choose a clockwise blade direction to provide a downward air flow. In warmer weather, this direction will provide a constant breeze, creating a wind chill effect for the room's occupants.

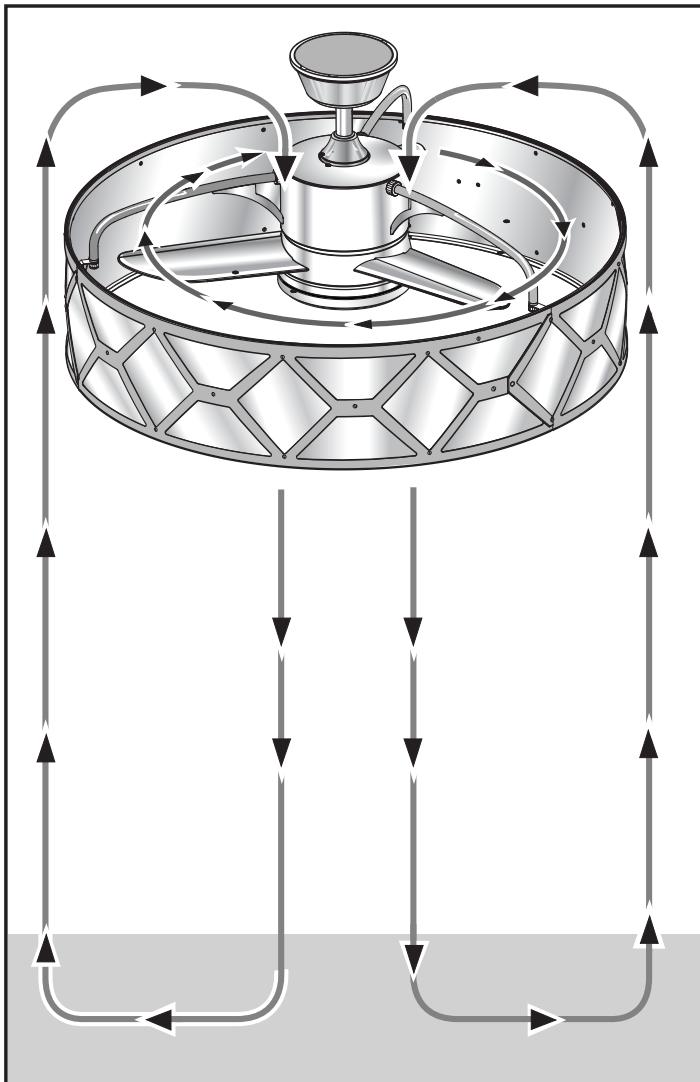

- In cooler weather, choose a counterclockwise blade direction to provide an upward direction of air travel. This will help circulate warm air off the ceiling and back down into the room.

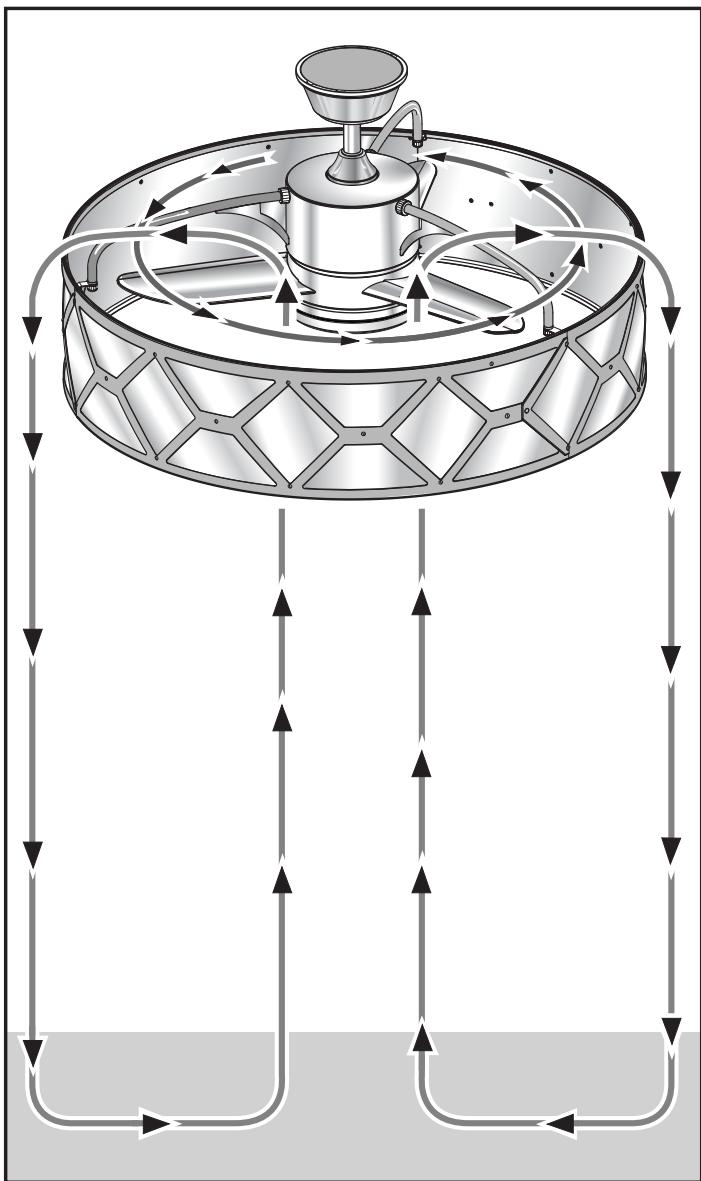


MAINTENANCE

GENERAL CARE AND CLEANING

- Due to the natural movement of a ceiling fan, connections can become loose over time. Check all the ceiling fan's connections (not including the electrical connections) at least twice a year.
- The fan has permanently lubricated sealed bearings, therefore no further lubrication is required.
- Clean your fan periodically to help maintain its new appearance over time. Use only a soft brush or lint-free cloth to avoid scratching the finish. The plating is sealed

with a lacquer to minimize discoloration or tarnishing. Do not use water when cleaning, as this could damage the motor or cause an electrical shock.

- **Clean the fan blades periodically using a soft dry cloth. Do not use water or other liquids to clean the fan blades.**
- **If any visible debris appears above the LED light lens, twist the light lens counterclockwise to remove. Discard any debris present and clean the cover as needed using a soft dry cloth, Replace the light lens and twist clockwise to secure.**

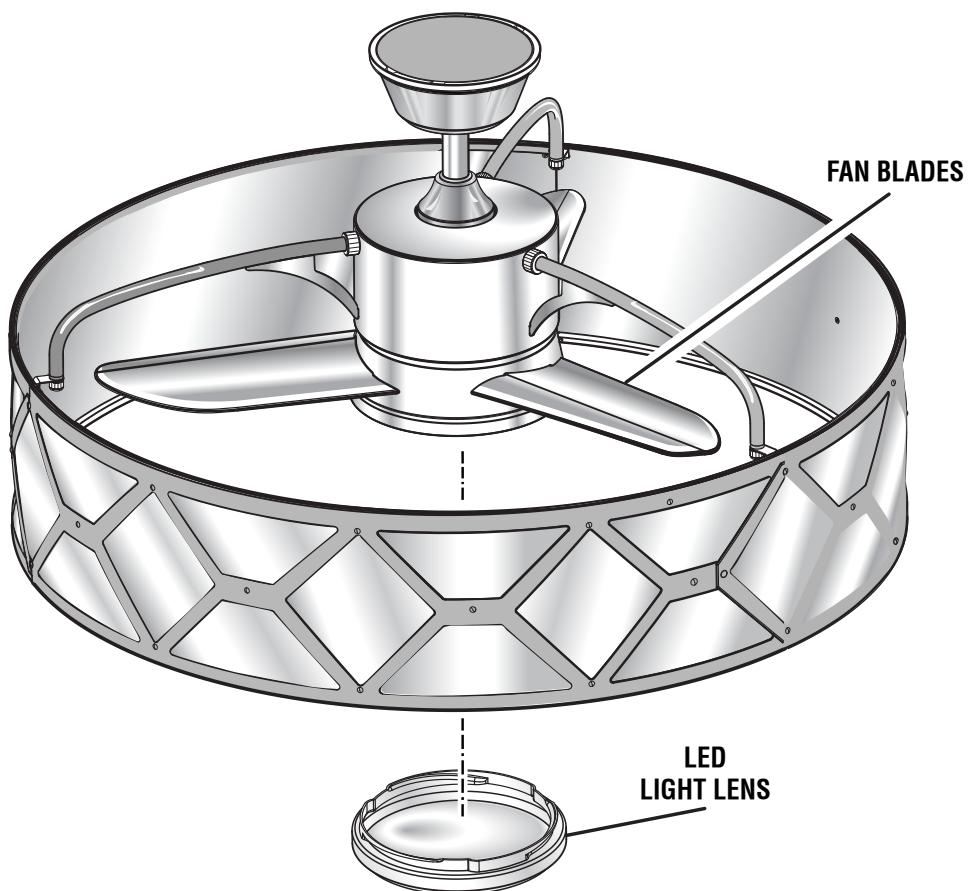

TROUBLESHOOTING

WARNING:

Turn off power to room and wall switch by removing fuses or turning off circuit breakers as needed before attempting any repairs to the ceiling fan or the electrical connections. Failure to do so can cause serious personal injury.

PROBLEM	POSSIBLE CAUSE
Fan will not start.	Wall switch is turned off. Turn wall switch on. Circuit breaker is tripped or fuse is blown. Reset circuit breaker or replace fuse. Ceiling fan wiring is incorrect. Check the ceiling fan's electrical connections. If you are unable to detect the problem, consult a qualified electrician.
Fan is noisy.	Some noise is natural during the break-in period of the fan. Allow a minimum 24 hours break-in period. Most noises associated with a new fan will be resolved during this time. Ceiling fan housing screws are loose. Make sure all housing screws are snugly tightened. Blade set screw is loose. Retighten the blade set screw.
Fan wobbles.	Pivot ball is not captured in slot on fan mounting bracket. Refer to the instructions under Hanging the Ceiling Fan on page 12 to be sure the ceiling fan is hung correctly. Outlet box is not securely fastened to the ceiling joists. Tighten the outlet box screws or use longer screws, if needed, to fasten securely. Blade weight is not balanced. Install the provided adhesive weights as needed to balance the blades.
Remote control is not working.	Wall switch is turned off. Turn wall switch on. The remote battery is dead. Replace the CR2032 button-cell battery in the remote control. Wall switch has solid-state speed controls. Do not use a wall switch that has variable speed control (i.e. a dimmer switch). Remote is not paired. To pair, turn the wall switch off, then back on. Within one minute of turning the switch on, press and hold simultaneously for approx. 5 seconds the fan (⟳) and light (💡) on/off buttons on the remote.

ACCESSORIES

Look for these accessories where you purchased this product or call 1-877-258-9740 to order:

- 12 in. Wiring Extension Cable 039858008120 ■ 48 in. Wiring Extension Cable..... 039858008480
 - 18 in. Wiring Extension Cable 039858008180 ■ 60 in. Wiring Extension Cable 039858008600
 - 24 in. Wiring Extension Cable 039858008240 ■ 72 in. Wiring Extension Cable..... 039858008720
 - 36 in. Wiring Extension Cable 039858008360 ■ Remote Control 009863001604
-

WARNING:

Current attachments and accessories available for use with this product are listed above. Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

WARRANTY

Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: For the original purchaser only, your Stile™ ceiling fan motor is warranted to be free of material and workmanship defects for the lifetime of the fan motor. All other ceiling fan parts are warranted to be free of material and workmanship defects for a period of one year.

HOW TO GET SERVICE: To obtain replacement parts or servicing under warranty, please contact a service representative at One World Technologies, Inc., P.O. Box 1288, Anderson, SC 29622, by calling 1-877-258-9740, or by logging on to www.TheStileLife.com. When you request warranty service, you must also present proof of purchase documentation, which includes the date of purchase (for example, a bill of sale). We will repair any faulty workmanship, and either repair or replace any defective part, at our option. We will do so without any charge to you.

WHAT'S NOT COVERED: This warranty applies only to the original purchaser at retail and may not be transferred. This warranty does not cover any malfunction, failure, or defects resulting from misuse, abuse, normal wear and tear, neglect, alteration, modification or repairs by other than Authorized Service Centers. This warranty does not cover any damage caused by improper installation or the use of parts not provided or approved by the manufacturer for use with this fan. A certain amount of "wobble" is normal and is not a defect. Due to varying climate conditions, this warranty does not cover changes in the finish from rusting, pitting, tarnishing, corrodung, or peeling. You should always protect the fan from varying weather conditions.

All costs of removal and reinstallation are the express responsibility of the purchaser. One World Technologies, Inc., makes no warranties, representations or promises as to the quality or performance of its products other than those specifically stated in this warranty.

ADDITIONAL LIMITATIONS: Any implied warranties granted under state law, including warranties of merchantability or fitness for a particular purpose, are limited to the terms stated above. One World Technologies, Inc. is not responsible for direct, indirect, or incidental damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CUSTOMER SERVICE INFORMATION:

For parts or service, or access to an Authorized Service Center, please call 1-877-258-9740 or visit us online at www.TheStileLife.com.

The model number and serial number of this ceiling fan is found on a label located on the top of the fan housing. Please record the serial number in the space provided below. When calling about warranty service or if ordering repair parts, always give the following information:

Model No. _____ **Serial No.** _____

INSTRUCTIONS IMPORTANTES CONCERNANT LA SÉCURITÉ

AVERTISSEMENT

Lire toutes les mises en garde et directives aux présentes. Tout manquement aux mises en garde et aux directives aux présentes peut résulter en un choc électrique, un incendie et (ou) des blessures graves.

LIRE ET CONSERVER CES DIRECTIVES

- Utiliser cet appareil uniquement de la manière prévue par le fabricant. Si vous avez des questions, veuillez communiquer avec le fabricant.
- Avant de commencer l'installation, lire et comprendre les directives et les renseignements sur la sécurité. Bien passer en revue tous les renseignements de montage et les dessins et s'assurer de comprendre toutes les exigences de montage.
- Avant de procéder à l'installation, à l'entretien et au nettoyage, mettre l'alimentation hors tension au panneau de service et verrouiller le dispositif de sectionnement afin de prévenir la mise sous tension de l'alimentation par inadvertance. Lorsqu'il est impossible de verrouiller le dispositif de sectionnement, apposer un dispositif de mise en garde visible, comme une étiquette, sur le panneau de service.
- Les travaux d'installation et de câblage électrique doivent être effectués par des personnes dûment qualifiées conformément à toutes les normes et à tous les codes applicables, notamment ceux relatifs aux constructions résistant au feu.
- L'installation et le câblage doivent être effectués conformément aux dispositions du code national de l'électricité, de la norme ANSI/NFPA 70 et de tous les codes locaux. Si vous n'êtes pas familier avec ces exigences ou êtes dans l'impossibilité de vous y conformer, faites installer le ventilateur de plafond par un électricien.
- Lorsque l'on coupe ou perce des trous dans un mur ou un plafond, ne pas endommager le câblage électrique et les autres dispositifs dissimulés.
- Si cet appareil doit être installé au-dessus d'une baignoire ou d'une douche, il doit convenir à cette utilisation et être relié à un disjoncteur de fuite à la terre (il faut absolument utiliser) – circuit de dérivation protégé.
- Ne pas plier les supports des pales pendant le nettoyage du ventilateur. Ne pas insérer de corps étrangers entre les pales en mouvement du ventilateur.
- Monter le ventilateur de plafond directement à un élément de structure ou à un boîtier de jonction métallique portant l'indication « Convient aux ventilateurs de 35 lb ou moins ». Pour le montage avec un boîtier de jonction, utiliser les vis de montage fournies avec la boîte de jonction.
- Lorsque l'on utilise un boîtier de jonction, s'assurer qu'il est fermement fixé à la structure du bâtiment et qu'il peut supporter le poids du ventilateur. La plupart des boîtiers de jonction couramment utilisés pour le soutien des luminaires ne sont acceptables pour les ventilateurs et devraient donc être remplacés. Ne pas utiliser un boîtier de jonction en plastique. Tout manquement à ces directives peut provoquer des blessures graves ou la mort.
- Ce ventilateur n'est pas conçu pour être utilisé avec des interrupteurs distincts pour contrôler les fonctions d'éclairage et de ventilation. Les deux fonctions sont contrôlées par la télécommande.
- Ne pas brancher ce ventilateur à un gradateur. Puisque toutes les fonctions d'éclairage et de ventilation sont contrôlées par la télécommande comprise avec le ventilateur, un branchement à un gradateur pourrait causer un fonctionnement imprévisible et endommager l'appareil.
- Afin de réduire les risques de blessure, installer le ventilateur de plafond de manière que la garde au sol des pales soit d'au moins de 7 pieds.
- S'assurer que l'alimentation est hors tension avant de commencer l'installation. Après avoir fait la connexion des fils, séparer ces derniers en plaçant le conducteur de mise à la terre du matériel d'un côté du boîtier de jonction et le conducteur non mis à la terre de l'autre côté du boîtier de jonction. Les épissures doivent être orientées vers le haut et poussées soigneusement dans le boîtier de jonction.
- Toujours mettre le ventilateur hors tension et attendre qu'il soit complètement arrêté avant d'inverser la direction des pales.
- Une fois l'installation terminée, s'assurer que tous les raccords sont fermement fixés pour prévenir la chute du ventilateur de plafond.
- **Conserver ces instructions.** Les consulter fréquemment et les utiliser pour instruire les autres utilisateurs éventuels. Si cet produit est prêté, il doit être accompagné de ces instructions, afin d'éviter un usage incorrect et d'éventuelles blessures.

SYMBOLES

Les termes de mise en garde suivants et leur signification ont pour but d'expliquer le degré de risques associé à l'utilisation de ce produit.

SYMBOLE	SIGNAL	SIGNIFICATION
	DANGER :	Indique une situation dangereuse qui, si elle n'est pas évitée, aura pour conséquences des blessures graves ou mortelles.
	AVERTISSEMENT :	Indique une situation dangereuse qui, si elle n'est pas évitée, pourrait entraîner des blessures graves ou mortelles.
	ATTENTION :	Indique une situation dangereuse qui, si elle n'est pas évitée, pourrait entraîner des blessures légères ou de gravité modérée.
	AVIS :	(Sans symbole d'alerte de sécurité) Indique les informations jugées importantes sans toutefois représenter un risque de blessure (ex. : messages concernant les dommages matériels).

Certains des symboles ci-dessous peuvent être utilisés sur l'outil. Veiller à les étudier et à apprendre leur signification. Une interprétation correcte de ces symboles permettra d'utiliser l'outil plus efficacement et de réduire les risques.

SYMBOLE	NOM	DÉSIGNATION / EXPLICATION
	Symbolle d'alerte de sécurité	Indique un risque de blessure potentiel.
	Lire le manuel d'utilisation	Pour réduire les risques de blessures, l'utilisateur doit lire et veiller à bien comprendre le manuel d'utilisation avant d'utiliser ce produit.
	Protection oculaire	Toujours porter une protection oculaire avec écrans latéraux certifiée conforme à la norme ANSI Z87.1.
	Garder hors de la portée des jeunes enfants	Jeter la pile bouton usagée immédiatement.
V	Volts	Tension
A	Ampères	Intensité
Hz	Hertz	Fréquence (cycles par seconde)
W	Watts	Alimentation
min	Minutes	Temps
~	Courant alternatif	Type de courant
n	Vitesse nominale	Vitesse de rotation maximum
.../min	Par minute	Tours, coups, vitesse périphérique, orbites, etc., par minute

CONTENU DE L'EMBALLAGE

⚠ AVERTISSEMENT :

Les articles dans cette section ne sont pas assemblés au produit par le fabricant et nécessitent d'être installés. Le fait d'utiliser un produit qui a été assemblé de façon inadéquate peut entraîner des blessures.

- Enlever toutes les pièces de l'emballage et s'assurer que toutes les pièces énoncées dans la présente section **Contenu de l'emballage** sont présentes.
- Examiner soigneusement l'outil pour s'assurer que rien n'a été brisé ou endommagé en cours de transport.
- Ne pas jeter les matériaux d'emballage avant d'avoir soigneusement examiné le produit et avoir vérifié qu'il fonctionne correctement.
- Si des pièces manquent ou sont endommagées, téléphoner au 1-877-258-9740.

⚠ AVERTISSEMENT :

Si des pièces manquent ou sont endommagées, ne pas utiliser ce outil avant qu'elles aient été remplacées. Le fait d'utiliser ce produit même s'il contient des pièces endommagées ou s'il lui manque des pièces peut entraîner des blessures graves.

PIÈCES ET ACCESSOIRES DU VENTILATEUR DE PLAFOND


Num.	Description	Quantité
1	Ensemble support de montage*	1
2	Ensemble bille d'articulation et tige	1
3	Monture*	1
4	Bague cache-vis de la monture*	1
5	Capuchon du boîtier de moteur	1
6	Support arms	3
7	Ensemble moteur	1
8	Blades	3
9	LED light panel	1
10	Light lens	1
11	Light shade panels	3
12	Télécommande	1
13	Pile bouton CR2032	1
14	Support mural de la télécommande	1
15	Récepteur de télécommande	1

*Aux fins d'emballage, l'ensemble support de montage, la monture et la bague cache-vis de la monture sont assemblés.

⚠ AVERTISSEMENT :


Ne pas essayer de modifier cet outil ou de créer des pièces ou accessoires non recommandés. De telles altérations ou modifications sont considérées comme un usage abusif et peuvent créer des conditions dangereuses, risquant d'entraîner des blessures graves.

NOTE : *For purposes of the illustrations in the rest of this manual, only the Lancaster ceiling fan is shown. The Lexington fan looks different but installs the same way.*

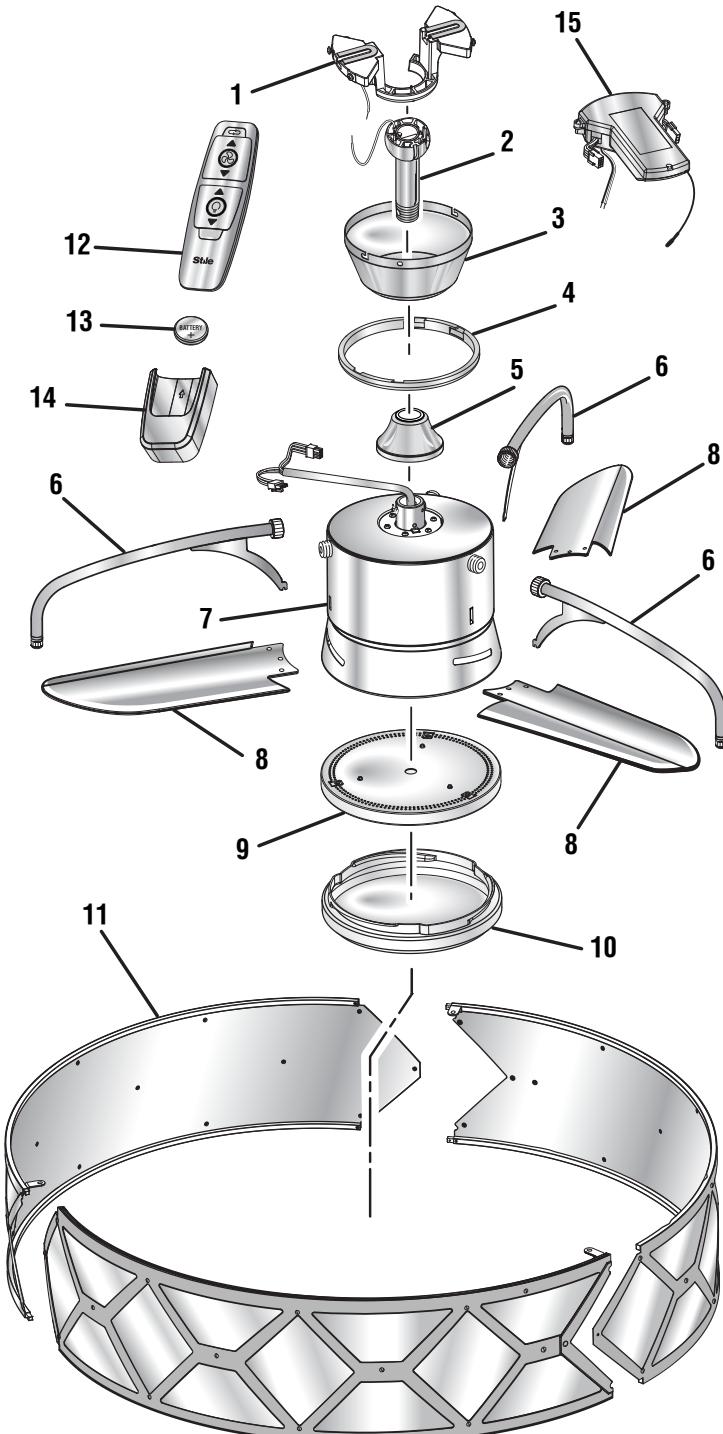


CONTENU DE L'EMBALLAGE

PIÈCES DE FIXATION DU VENTILATEUR DE PLAFOND

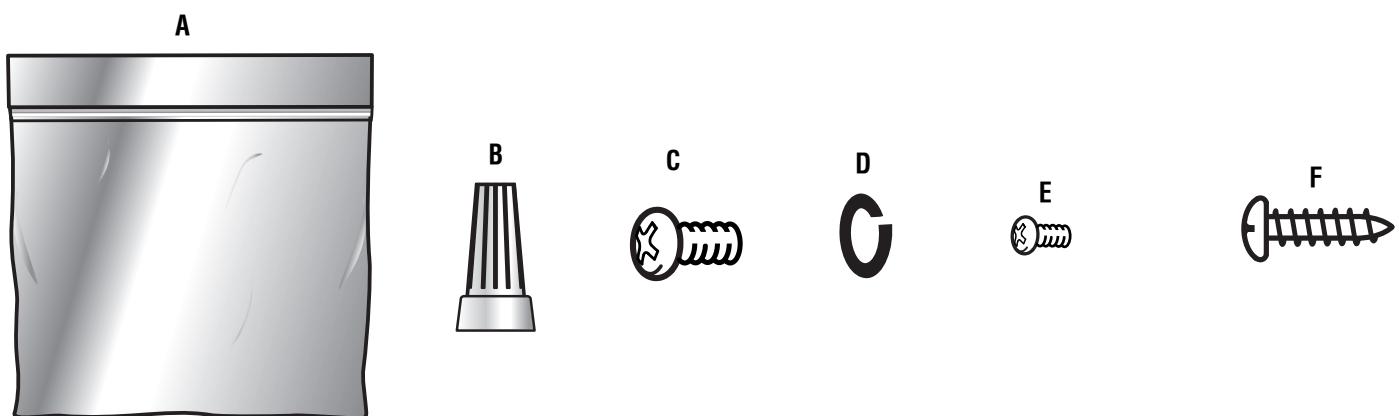

Num.	Description des pièces de fixation du matériel ci-joint	Quantité
A	Sac de pièces de fixation pour le Canada	1
B	Capuchons de connexion	4
C	Blade screws (M4)	9
D	Lock washers	9
E	Light shade screws (M2.5)	6
F	Vis de montage mural de la télécommande	2

OUTILS NÉCESSAIRES

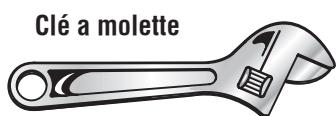

Clé à molette




Coupe-fils/pince à dénuder



Tournevis à tête cruciforme

Tournevis à lame plate

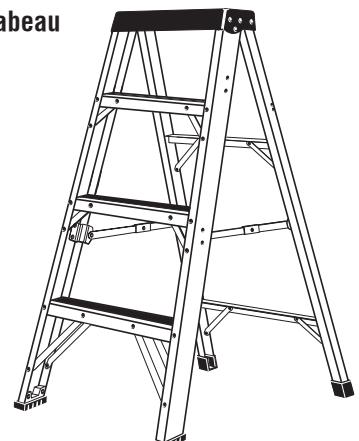

FICHE TECHNIQUE

Vitesses (RPM)	Élevée – 1 400/min Moyenne – 940/min Faible – 500/min	Entrée 120 V c.a. seulement, 60 Hz, 0,61 A max.
Débit d'air (pieds cubes à la minute)	Élevée – 1 437 pi ³ /min Moyenne – 830 pi ³ /min Faible – 445 pi ³ /min	Pile de la télécommande Pile bouton CR2032
LED Color Temperature	Warm White to Daylight (2700K-5000K)	Poids net environ 24 lb Dégagement avec le plafond 10,4 po Options de fixation au plafond Incliné, standard

INSTALLATION

AVANT DE COMMENCER

AVERTISSEMENT :

Pour réduire les risques d'incendie, de choc électrique ou de blessures, couper l'alimentation de la pièce et de l'interrupteur mural enlevant les fusibles ou en mettant les disjoncteurs hors tension au besoin avant de commencer l'installation.

■ Si la pièce dans laquelle vous installez le ventilateur n'est pas pourvue d'un boîtier de jonction métallique homologué UL, en installer un avant d'aller de l'avant. Assurez-vous que le boîtier est monté directement à la structure de l'édifice à l'aide des vis pour solives de plafond fournies dans la boîte.

■ Une fois le ventilateur installé, il doit y avoir au moins 7 pi de dégagement entre le bas du ventilateur de plafond et le plancher.


■ Les plafonds mesurant plus de 8 pi peuvent nécessiter l'utilisation d'une tige-rallonge plus longue pour obtenir les meilleurs résultats.

NOTE : Si on utilise une tige plus longue, un fil de rallonge sera également nécessaire. Voir la section Accessoires plus loin dans ce guide pour déterminer la bonne taille de fil de rallonge pour correspondre à votre tige, puis se rendre à la boutique où ce ventilateur a été acheté ou appeler le service à la clientèle pour se le procurer.

■ Les plafonds inclinés ne doivent pas présenter un angle supérieur à 30° par rapport à la monture horizontale.

AVERTISSEMENT :


Monter le ventilateur uniquement à un boîtier de jonction en métal convenant aux ventilateurs et n'utiliser que les vis de montage fournies avec le boîtier de jonction. Les boîtiers de jonction en plastique et les boîtiers de jonction utilisés couramment pour le soutien de luminaires peuvent ne pas convenir aux ventilateurs et il peut être nécessaire de les remplacer. Si vous n'êtes pas certain que votre boîtier de jonction est approprié ou qu'elle est la méthode appropriée pour le montage de votre ventilateur de plafond, communiquer avec un électricien compétent.

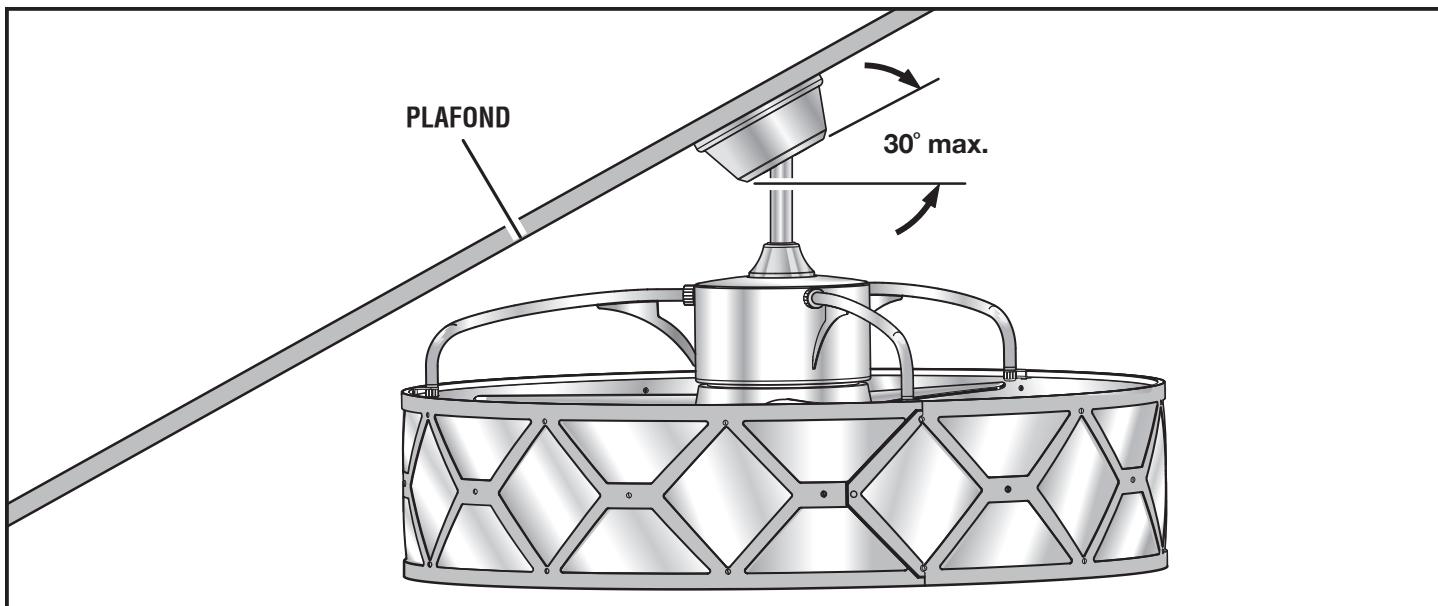


INSTALLATION

ASSEMBLING THE FAN


- Remove the center nut from the motor assembly. Leave the washer and stop nut on the shaft, and make sure the stop nut is bottomed out on the shaft.

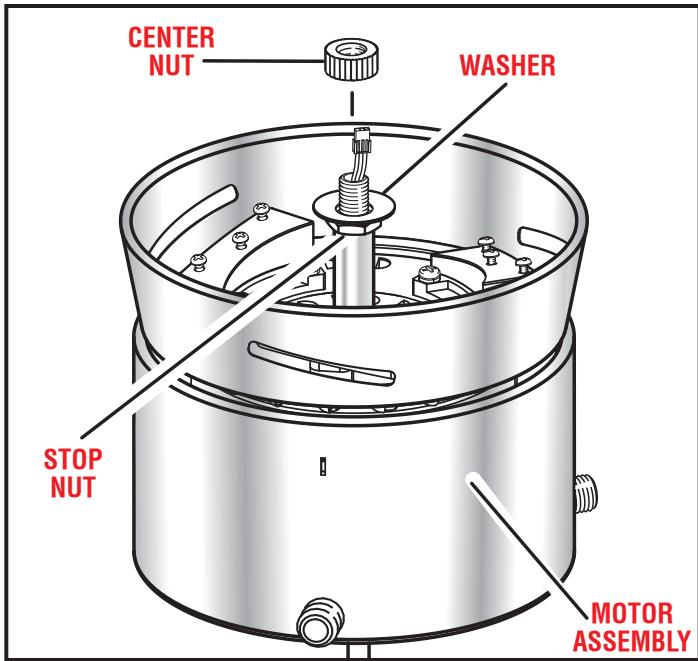

- With the bossed side of the blade facing the motor assembly, slide the blade through the outside of the motor housing and onto the blade mount so the bosses fully seat in the blade mounting holes.

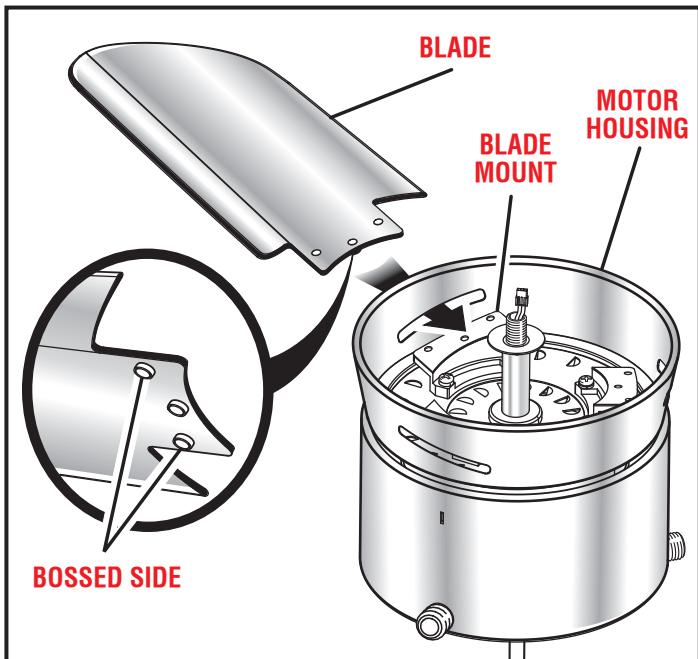

- Install the lock washers and blade screws and tighten to secure the blade in place.

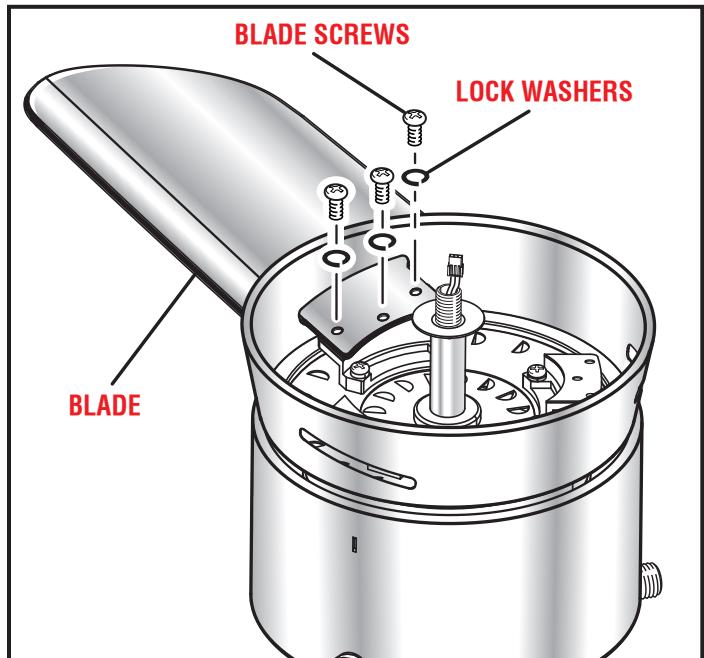

- Repeat the above steps to install the remaining two blades.
- Install the LED light panel as shown, then replace the center nut and tighten securely.

