


Antenna position

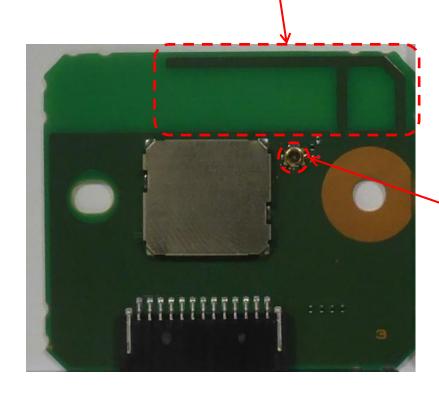

Antenna connector Note)Used for inspection only