Use's manual


- 1. Getting to know your Shogo
 - 1.1 What's included in Shogo
 - 1.2 Shogo overview
 - 1.3 Start up your Shogo
 - 1.4 Connecting to the Internet
 - 1.5 Register your Shogo
 - 1.6 Update Shogo content
- 2. Viewing pictures from Shogo
 - 2.1 Viewing pictures from memory card and USB-flash drives
 - 2.2 Viewing pictures from the Internet
- 3 Change Shogo settings
 - 3.1 Settings/ Network
 - 3.2 Settings/ Update
 - 3.3 Settings/ Language
 - 3.4 Settings/ Slideshow
 - 3.5 Settings/ Screen
 - 3.6 Settings/ Sound
 - 3.7 Settings/ Power Management
 - 3.8 Settings/ Date and time
 - 3.9 Settings/ Startup
 - 3.10 Setting/ Systems upgrade
 - 3.11 Settings/ Support
- 4 ShogoLive
 - 4.1 Adding new photo album
 - 4.2 Shogo dashboard
 - 4.3 Adding Shogo Authors
 - 4.4 Adding Shogo Friends
- 5 General specifications
- 6 Safety and maintenance

1. Getting to know your Shogo


1.1 What's included in Shogo Package



1.2 Shogo overview

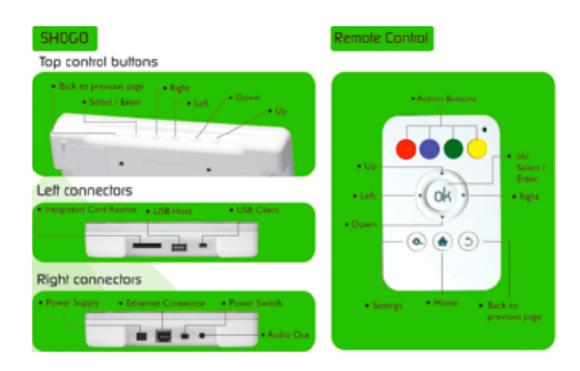


1.3 Start up your Shogo

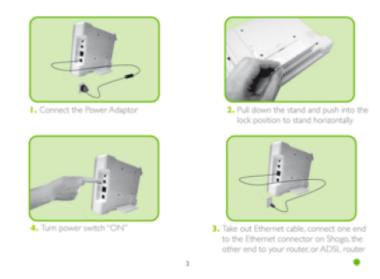

An initialization process will start after Power on, follow the steps and make changes on basic settings.

After Initialization, here you can see the Home Page of Shogo

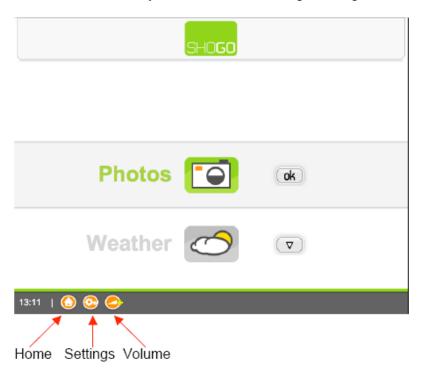

1.4 Connecting to the Internet



For first time user, it is recommended to use Ethernet connection. Your Ethernet should be automatically connected if you have connected the SHOGO to a router or ADSL router. You can also check if you have successfully connected with Ethernet by:

- Press "Settings" button on the Remote Control
- · Select Network, then press "ok"
- Select Ethernet Connection by pressing "Red Action" Button
- An IP Address will be shown as above, if there is no IP address shown, your connection is not successful. Please check if you have properly connected to the router with the Ethernet cable

Connecting to WiFi network

For **WiFi Connection**, select **WiFi connection** by pressing "Blue Action" Button, then your SHOGO will start scanning available WiFi networks.

Once a wireless network is detected, The network name will be shown, press "ok" to connect to it. If there is more than one network detected, choose your own network with the "up/down" button then press "ok".

You may also need to enter a password to access your wireless network,. To enter password, a virtual keyboard will be shown. Key in your password by choosing the letters on screen with the "arrow" keys of your remote control, confirm entry of each character by pressing "ok".



Entering of Password, press actions button of your remote

- Green to switch back and forth to capital letters if needed
- Yellow to switch to numbers keyboard
- "Red" to delete an entry

After entering the password, press "Blue Action" Button to connect to the wireless network.

Shogo will confirm successful connection to your WiFi network by showing - Wireless network setup completed.

Press "Home" on the remote control to continue.

1.5 Register your Shogo


To enjoy all features of Shogo, you must register your Shogo in www.myshogo.com and subscribe to our free ShogoLive Service, the content provisioning service for Shogo.

To register your Shogo:

- Take out the registration card, there is a serial number and a Network ID printed on it
- 2. Get a PC or Mac, open a web browser and go to www.myshogo.com.
- If you are first time user, sign in as "new user", create a myshogo.com ID and your own password, this allow you to log-in myshogo.com site next time with this user ID.



5. Type in the Network ID and serial number printed on the registration card



- Give a name to your Shogo, the Shogo name is important for you to add content and be a friend of other Shogo, which someone can invite you as Shogo Friend for sharing their photos with you.
- 7. Complete the registration process
- 8. Go to "Manage ShogoLive Content" to try uploading photos from Flickr, Picasa, SmugSmug and .Mac




1.6 Updating Shogo Content

After registered your Shogo, conduct a content update to download contents from ShogoLive into your Shogo. After the update, you will receive weather forecast channel, ShogoLive preloaded photos album and your newly created albums and preset internet radio stations from ShogoLive.

To update Shogo Content, select "Settings" on the Remote Control, then select **Update**. Press "Yellow Action" Button and you will receive all the new albums and digital content.

Go back Home, now, you can browse all the new albums on photos, your weather forecast and internet radio stations.

There is no need to do update after set up, as your Shogo will be updated automatically everyday.

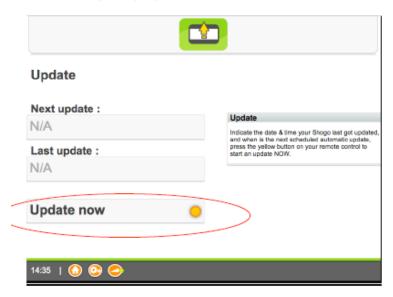

2. Viewing Pictures from Shogo

On Shogo Home, select "Photo", navigate the albums with "up/down" arrows. To preview photos inside the album, press "ok" and the "up/down" arrow to view each photos. Press "blue action" to play slideshow.

Your Shogo can view and play digital content from your local source, the memory card and USB flash drive or through the Internet with myshogo.com.

2.1 Viewing pictures from USB flash drives and Memory cards

- Insert your memory card to the Integrated Card Reader or your USB flash drive to the USB port
- 2. Move the up/down button of the remote to Memory Card or USB
- 3. Press "ok" to preview, or "blue action" button to play slide show directly

2.2 Viewing pictures from the Internet

After updating ShogoLive content from myshogo.com, all albums in ShogoLive will be automatically created, move up/down button to navigate the albums, press "ok" to preview, or "blue action" button to play slide show directly.

3. Change Shogo Settings

Press "settings" button on your remote control, you can change the following Shogo settings:

- Network
- Update
- Language
- Slideshow
- Screen
- Sound
- Power Management
- Date and Time
- Start up
- Systems Upgrade
- Support

3.1 Settings / Network

Select Network configuration

For your Shogo to access the internet, Do you want to configure a wireless connection with WiFi? Press the blue button, or a cable connection with Ethernet? Press the red button.

3.2 Settings/ Update

Indicate the date & time your Shogo last got updated, and when is the next scheduled automatic update, press the yellow button on your remote control to start an update NOW

During the Update process, do not power off your Shogo, as it could cause losing of your Shogo data.

3.3 Settings/ Language

You can change the language of all the menus and texts in the Shogo, just select your preferred language by pressing the up and down arrow button on your remote control and then press the OK button to confirm.

3.4 Settings/ Slide show

For slideshow viewing, press the blue button on your remote control to modify interval between images, press the red button to select transition effects and press the green button to select the display modes.

Interval

 Select the time interval in between pictures, from 3 seconds to 1 hour, press the up and down arrow keys on your remote control to select and press OK button to confirm.

Transition Effects

 Select transition effect in between pictures, left-to-right, fade and so on..., press the up and down arrow keys on your remote control to select then press the OK button to confirm

Display Mode

 Choose to either always see the entire picture on the screen (Full Size), or to maximize the size of the picture with the risk of cropping part of it (Cropped).

3.5 Settings/ Screen

Press the blue button on your remote control to modify the screen's orientation settings, or press the red button on your remote control to change the brightness settings

Orientation

Press the yellow button on your remote to let the Shogo decide with the Autorotate feature, or press the red button for Portrait or the blue button for Landscape as appropriate

3.6 Settings/ Sound

Adjust volume for MP3 musics and Internet Radio. Alternatively, you can also press the up/down arrow button of Remote control while playing MP3 or listening to Internet Radio

3.7 Settings/ Battery Management

Indicate the battery level of your Shogo if you have a model with battery and of the Shogo's remote control.

3.8 Settings/ Date and Time

Date and Time Format in the setting is:

1	Data	Month	Voor	Hour	Minuto
	Date	Month	Year	Hour	Minute

Press up/down arrow keys to adjust the entry, left/ right arrow keys to select the entry, press ok to confirm

3.9 Settings/ Startup

You can select different mode of starting up your Shogo. After switched on, it can be set up to start at the Home page, or start a slideshow immediately.

Select how you like to start your Shogo.

Blue – start up at the Home page

Green – start up at last album played

Red – start up on the first album and select the album

3.10 Settings/ System Upgrade

Indicate the date & time your Shogo system last got upgraded, to manually start a systems upgrade, press the yellow button on your remote to start the Shogo system upgrade now.

3.11 Settings/ Support

The Support setting screen provides you with technical information about your Shogo that might be helpful when you request assistance to the customer service hotline. Important information for you to get support from us includes:

- Shogo Name
- Serial Number
- Network ID

4. ShogoLive

ShogoLive is a subscription service that allows user to provide content, administer and manage your Shogo. You can set up your Shogo content by adding photo albums from photo portals, such as Flickr, Picasa, SmugSmug, .Mac; connect to internet radio stations, subscribe to RSS feeds. You also get a new sharing experience by inviting your friends to be a Shogo Author that provide content for your Shogo. In addition, you can send your album from your Shogo to your friends who also own Shogos, by making them as Shogo Friend. All these exciting services are offered in ShogoLive.

To subscribe to ShogoLive Service, you must register in myshogo.com and get the myshogo.com ID. Then register your Shogo, which will create a Shogo Name and start using ShogoLive service.




4.1 Adding new photo album

Adding new Photo Album from the Internet



Share what – allow administrator to select what Photo Portal they want to load photos from. By default, it will be set to share Flickr account, if you want to select other portals, click on the respective portal site name on the list.

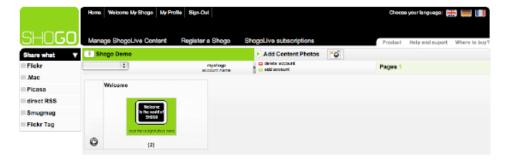

Use Flickr as an example, after you choose Flickr, a list of Flickr account will be available to choose from "select account". Choose the account and all the albums on this account will be shown, click "+" to add the album into ShogoLive.

Back to Manage ShogoLive, the new album will then be included, next time when your Shogo performs an update, the new album will be loaded into your Shogo.



4.2 Shogo dashboard



Shogo dashboard helps to monitor activities on your Shogo, it shows the number of content sources that ShogoLive has established, and the list of Shogo Authors and Shogo Friends, you will be able to add or delete Shogo Author and Shogo Friend inside the dashboard.



4.3 Adding Shogo Authors

Shogo Author is a person who has been invited by the Administrator to offer its own ShogoLive content, typically photo albums, to the Shogo.

To invite an author - Enter the author's myshogo ID, if he/she is already a myshogo.com user, or his/her email address. An invitation will be sent by the system. Once the author accepted the confirmation, his/her name will be listed in the Shogo Author list under Shogo dashboard.

By authorizing a Shogo Author, he/she will be asked to sign up myshogo.com, with his/her myshogo.com ID, he/she will be able to have restricted access to your ShogoLive service. The author can then add content to your Shogo, the next time you receive update content from ShogoLive, you will get his/her new albums automatically.

4.4 Adding Shogo Friends

Shogo Friend is another registered Shogo in myshogo.com. By creating a "Friendship" link between your Shogo and another Shogo, you will then be able to share content directly from Shogo to Shogo without a computer.

It means when you receive on your Shogo a photo album you like, you can immediately share it with a Shogo friend at the click of a button on the frame itself, just select the album and click "send to a Shogo friend" and then select which Shogo Friend from your list you want to send the album to, that's it!

To invite a Friend – enter the serial number of your friend's shogo, he/she will receive an Email to confirm the invitation, after that, his/her Shogo name will show up in the Shogo Friend list of Shogo dashboard.

To send your album to Shogo Friend - Browse your photos on your own Shogo, you can send your album to your Shogo Friend by pressing the "Yellow Action" button on your remote, there you have a list of Shogo Friend you can choose, select your Shogo Friend you want to send this album and press ok.

Shogo Specifications

Display

- 8" 800x600 pixels, 4:3 TFT LCD display
- 32,000 colors (16 bit)
- Auto rotate adjust for landscape and portrait viewing
- Touch screen (for touch screen model only)
- Display backlight: LED
- Contrast ratio: 400
- Effective viewing area: 162(w) x 1215(h) mm
- Lifetime, to 50% brightness: 20,000 hrs
- Brightness: 250cd/m2

Connectivity

- WiFi 802.11 B/G
- USB 1.1 host and slave ports
- Ethernet
- Stereo audio out

Storage Media

- Memory card types: Secure Digital Card (SD), Memory Stick (MS), Multimedia card (MMC). extreme Digital (XD), SHDC compatible
- Built-in memory capacity: 512Mb for non touch screen model and 1Gb for touch screen model

Regulatory approvals

CE, FCC, RoHS compliant

Dimensions

- 200x160x32mm
- Weight 0.78 kg

Remote control

- RF
- 23A battery

Safety and Maintenance

Do not disassemble this product, there is no user-serviceable parts inside. Do not expose your SHOGO to liquid or moisture or humidity Do not expose your SHOGO to extreme high or low temperature Do not expose your SHOGO to open flames or lit tobacco products Always treat your SHOGO with care and keep it in a clean and dust free place

Power Adaptor

Use only the power adaptor that came with your SHOGO
The power adaptor may become very warm during normal use. Always put
the power adaptor directly into a power outlet

Cleaning your SHOGO

When cleaning the outside of your SHOGO, first shut down your SHOGO, unplug the power adaptor. Then use a damp, soft, lint-free cloth to clean the SHOGO's exterior. Avoid getting moisture in any openings. Do not spray liquid directly on the SHOGO. Do not use aerosol sprays, solvents, or abrasives that might damage the finish.

Applicant Name: RealEase Limited Product Name: Digital Photo Frame

Model No.: SG 080, FCC ID: VTXSG08

THIS DEVICE COMPLIES WITH PART15 THE FCC RULES.
OPERATION IS THE SUBJECT TO THE FOLLOWING TWO CONDITION:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION

Caution

Keep dry. Precipitation, humidity, and liquids, contain minerals that will corrode electronic circuits.

Do not use or store in dusty, dirty areas.

Do not store in hot areas. High temperatures can shorten the life of electronic devices and warp or melt certain plastics.

Do not store in very cold areas. Moisture can form inside the case, which may damage electronic circuit boards.

Do not attempt to open the case. Non-expert handling of the device may damage the system.

Avoid dropping and strong impact.

Do not change or modification. It is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.