

•

Wi-Fi Internet Radio

IR001



Need Help? www.myine.com/help

MYINE®

Version 1.0. Software 18606-143

User Helper

Myine_Ira_UserGuide_outlines.ind1 1




11/29/08 2:54:48 PM








Mode: Currently this button is not used. May be added in future software updates

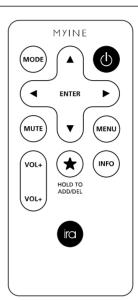

Mute: Because we all get phone calls now and again

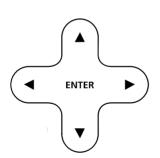

Directional Pad + Enter: These are your controls to navigate Ira's display



Volume: Some go from 0 to 10, Ira goes to 20. ⊚



Favorite (FAV) station list: When you hear a station you would like to save as a favorite, press and hold the star button ★

To show a list of your saved Favorite (FAV) stations, press the star button $\textcircled{\bigstar}$ on the remote control one time.

To delete a station from the Favorite (FAV) list, highlight the station and press and hold the star button. A maximum of 40 stations can be saved in the Favorite (FAV) list.



NOTE: the station will show show on the display when it is stored as a Favorite.



Menu: Brings up the main menu display for options



Info: Changes the information you see about what you are listening to on the display




Getting Started

NOTE: PLEASE READ SAFETY INSTRUCTIONS AND ALL WARNINGS BEFORE USING IRA.

STEP 1) Connect Ira to your Wireless-Internet (Wi-Fi) Connection


What You Need

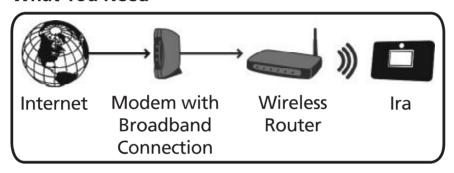

1.1) Plug Ira into a wall power outlet and Ira will automatically turn itself on and find available Wi-Fi Internet called "SSID"


You can also press: ★ "System settings"

→ "Network" → "Network wizzard"

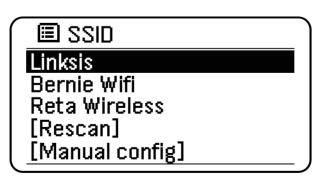

4

- 1.2) Choose your Wi-Fi Internet connection from the list that appears
- 1.3) If your Wi-Fi Internet connection requires a password, Ira will ask you to type the password in by using the remote and the keyboard on Ira's display. Make sure you use your password's correct capital or lowercase letters
- 1.4) Note: Ira will store your Wi-Fi password, but just in case write your password here:

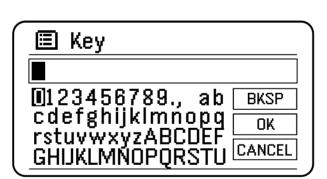

Need Help? www.myine.com/help



Getting Started

TIPS

- i. Your password is the same Wi-Fi password you use on a laptop or PC to connect to the Internet
- ii. Some Wi-Fi Internet networks hide their name for security reasons. If you can not see your Wi-Fi network in the list, you can manually enter in the Wi-Fi information by selecting "Manual config" in the SSID Menu
- iii. If Ira still does not connect and you received help setting up your wireless internet connection, you can ask this person to follow the Advanced Settings guidelines on the next page.

Set the time:

► "System settings" ➤ "Time/Date"

COOL TIP: Ira can show the time in standby mode by selecting:

► "System settings"

→ "Standby backlight" → "On"

STEP 2) Connect Ira to your speaker system

- 2.1) In the box Ira came in, you will find an RCA cable (Red/White) and an adapter. You can plug Ira into any aux input on a boombox, home stereo, or television. These inputs are usually marked with an "IN" or "INPUT", and may also be colored red and white
- 2.2) We recommend setting the volume level to 10 on Ira before turning on your speaker system




Uses 1/8" (3.5 mm) or RCA plug to connect to your speaker system.

STEP 3) Enjoy the Music You Love

3.1) Ira comes preloaded with thousands of free Internet radio stations. To listen to music, simply

select "Internet radio" and "Station List" to find a station or podcast

Station Display Options

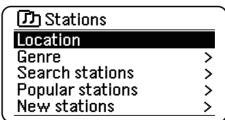








Favorite Stations ★

3.2) Favorite Stations (FAV)

- i. When you hear a station you would like to save as a favorite, press and hold the star button (**)
- ii. NOTE: the station will show on the display when it is stored as a Favorite
- iii. To show a list of your saved Favorite (FAV) stations press the star button $\textcircled{\bigstar}$ on the remote control one time
- iv. To delete a station from the Favorite (FAV) list, highlight the station and press and hold the star button (**)
- v. A maximum of 40 stations can be saved in the Favorite (FAV) list



- 1. Electro Radio
- 2. Boomer Radio-Vint .
- SGL Radio
- 4. Classic Rock 24/7
- 5. Digitally Imported

Internet Radio

- i. Last listened: Displays the 10 most recent stations listened to
- ii. Station list
 - 1. Stations: Live Internet radio from around the world.
 - a. Location
 - b. Genre
 - c. Search Stations
 - d. Popular Stations
 - e. New Stations
 - 2. Podcasts: Pre-recorded shows from around the world.
- iii. System settings

- 1. Network: Adjust your Wi-Fi Internet Settings.
 - a. Note: You can delete any Wi-Fi Setting by selecting "Network profile" then choosing which network settings you want to delete.
- 2. Time/Date
- 3. Standby Backlight
- 4. Factory Reset
- 5. Software Update: When new features are developed for your Ira, we will automatically add them through your Wi-Fi Internet connection. However you can manually "check now" for an update in this menu.
- 6. Info
- iv. Main menu





Advanced Settings

If you are having trouble with the automatic set up, this section has all of the questions you will need to ask the person or service that set up your wireless connection. The person may require your MAC address.

To find Ira's MAC address:

1. Press "Menu" on the remote



- 2. select "System Settings"
- 3. select "Network"
- 4. select "View Settings"





Write down your MAC Address from Ira:

Note that MAC addresses use only numbers 0-9 and only letters A, B, C, D, E, and F

Info you need about your home wireless Internet connection if you are having trouble with the automatic setup:

- 1. DHCP Enabled: YES NO ■
- 2. SSID (a.k.a. Network Name): _____
 - a. Note the SSID needs to have the correct upper or lower case letters
- 3. Authentication:
 - OPEN Pre-Shared Key WPA WPA2 ■
 - a. If Pre-Shared is it WPA? Yes NO ■
 - b. If WPA what type: TKIP AES ■
 - c. If WPA2 what type: TKIP AES ■

NOTE: Firewall Information: Check the following ports are open: UDP and TCP ports 80 and 123; DNS port 53.

Once you have this information you are ready to use Ira by going to:



- ➤ "System Settings" ➤ "Network"
- → "Manual Settings" → "View Settings"





Caution

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING:

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts are inside. Refer servicing to qualified personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.





IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Read all warnings.

- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit the apparatus.
- 10.) Only use attachments/accessories specified by the manufacturer.
- 11.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13.) This appliance should not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed near the apparatus.
- 14.) Do not overload wall outlet. Use only power source as indicated.
- 15.) Use replacement parts as specified by the manufacturer.
- 16.) Please do not use as a floatation device. ©
- 17.) No open flame sources, such as lighted candles, should be placed on or near the device.





Myine_Ira_UserGuide_outlines.ind13 13





- 18.) Place in a stable location so it will not fall, which could cause product damage or bodily harm.
- 19.) Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warranty

Myine Electronics, LLC ("Myine") Limited Consumer Warranty - United States of America

Myine warrants all Radio Products sold by Myine LLC (each "Product") to be free of defects in material and workmanship, subject to the following conditions:

The duration of Myine's warranty with respect to each Product is limited to one (1) year from the date of sale to the original consumer purchaser. No other express warranties are made with respect to any Product.

All implied warranties, including warranties of merchantability and fitness for a particular product are limited to the warranty period set forth above. This warranty is not transferable and applies only to the original consumer purchaser of the Product. Myine will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty.

Products may be repaired or replaced with new or refurbished items. This limited warranty does not cover defects in appearance, cosmetic or decorative items, including any non-operative parts. Under no circumstances will Myine be liable for any incidental or consequential damages under this warranty or any implied warranties. These remedies are the customer's exclusive remedies for breach of warranty. This limited warranty only extends to customers who purchase the Products in the United States.

Myine will not be responsible for damage resulting from any

- 1. deviation from Myine's operating instructions as printed in Myine's catalog or on any packaging, labels or other literature provided with a Product
- 2. installation of a Product in a manner which is inconsistent with Myine's written instructions
- 3. alteration or modification of a Product
- 4. misuse

14





 \bigoplus



- 5. neglect
- 6. abuse
- 7. accident
- 8. normal wear and tear
- 9. commercial use
- 10.improper storage
- 11. environmental conditions, including excessive temperature or humidity
- 12. service by any entity other than a Myine authorized repair facility
- 13. use of the Product in conjunction with any non-Myine branded accessory
- 14. other improper application, installation or operation of this Product, or
- 15. defects or malfunctions of which Myine is not advised within ten (10) days of the expiration of the limited warranty period.

How You Can Get Service



To obtain warranty service during the first thirty (30) days after the date of purchase, you must return the defective Product with the original receipt to the original place of purchase. To obtain warranty service during the first thirty (30) days for Products purchased specifically from www.myine.com you must contact the E-Store directly at the number provided on your invoice. For all Products for the remainder of the limited warranty period, you must contact Myine by phone at the customer service number listed at www.myine.com. If further clarification or additional information is required from Myine, you may call Myine at our customer service number listed at www.myine.com. If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid and place of purchase. Customers who fail to provide such proof of purchase will have the Product returned to them or will be charged for the repair/replacement of any Product. The customer is responsible for shipping the Product to an authorized Myine Warranty Facility.

How State Law Relates to the Warranty

Some states do not allow limitations on the duration of implied warranties, or the exclusion or the limitation of incidental or consequential damages. Thus, the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state. NO PERSON IS AUTHORIZED BY MYINE ELECTRONICS TO MODIFY OR ADD TO THIS LIMITED WARRANTY.

 \bigoplus





" FCC Compliance and Advisory Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation."

Canada Warranty

Myine warrants all Radio Products sold by Myine LLC (each "Product") to be free of defects in material and workmanship, subject to the following conditions:

The duration of Myine's warranty with respect to each Product is limited to one (1) year from the date of sale to the original consumer purchaser. No other express warranties are made with respect to any Product.

All implied warranties, including warranties of merchantability and fitness for a particular product are limited to the warranty period set forth above. This warranty is not transferable and applies only to the original consumer purchaser of the Product. Myine will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty.

This limited warranty does not cover defects in appearance, cosmetic or decorative items, including any non-operative parts. Under no circumstances will Myine be liable for any loss of revenue, loss of profits or failure to realize expected savings (collectively, "Economic Loss") under this warranty or any implied conditions or warranties. These remedies are the customer's exclusive remedies for breach of conditions or warranty. This limited warranty only extends to customers who purchase the Products in Canada.

Myine will not be responsible for damage resulting from any

- 1. deviation from Myine's operating instructions as printed in Myine's catalog or on any packaging, labels or other literature provided with a Product
- 2. installation of a Product in a manner which is inconsistent with Myine's written instructions
- 3. alteration or modification of a Product
- 4. misuse

- 5. neglect
- 6. abuse
- 7. accident
- 8. normal wear and tear
- 9. commercial use
- 10. improper storage
- 11. environmental conditions, including excessive temperature or humidity

16



 \bigoplus



- 12. service by any entity other than a Myine authorized repair facility
- 13. use of the Product in conjunction with any non-Myine branded accessory
- 14. other improper application, installation or operation of this Product, or
- 15. defects or malfunctions of which Myine is not advised within ten (10) days of the expiration of the limited warranty period.

How You Can Get Service

To obtain warranty service during the first thirty (30) days after the date of purchase, you must return the defective Product with the original receipt to the original place of purchase. To obtain warranty service during the first thirty (30) days for Products purchased specifically from www.myine.com you must contact the E-Store directly at the number provided on your invoice. For all Products for the remainder of the limited warranty period, you must contact Myine by phone at the customer service number listed at www.myine.com. If further clarification or additional information is required from Myine, you may call Myine at our customer service number listed at www.myine.com. If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid and place of purchase. Customers who fail to provide such proof of purchase will have the Product returned to them or will be charged for the repair/replacement of any Product. The customer is responsible for shipping the Product to an authorized Myine Warranty Facility.

How Provincial Law Relates to the Warranty: Some provinces do not allow limitations on the duration of implied conditions or warranties, or the exclusion or the limitation of Economic Loss. Thus, the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from province to province.

NO PERSON IS AUTHORIZED BY MYINE ELECTRONICS TO MODIFY OR ADD TO THIS LIMITED WARRANTY









IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments / accessories specified by the manufacturer.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 14) Do not overload wall outlet. Use only power source as indicated.
- 15) Use replacement parts as specified by the manufacturer.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

According to FCC Regulations, the distance from the antenna to the user body must be minimum 20cm when the terminal is printing state

