


#### **Appendix 5** www.tuv.com

Prüfbericht - Nr.: Test Report No.:

14022823 001

Seite 6 von 6 Page 6 of 6

### **User manual**

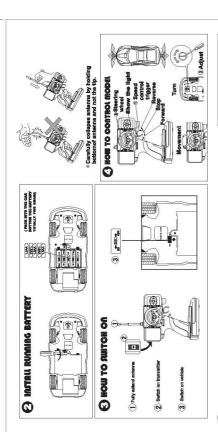

# CONTROL OF THE R/C CAR

The speed control trigger operates when pulled or pushed with a finger. Pulling the trigger towards you runs the model forward. pushing the trigger runs the 1 Speed control trigger


CAUTION


### G SPEED CONTROL TRIGGER SPEED LIMITER


Warning: Changes or modifications not expressly


Reorient or relocate the receiving antenna


## R/C VEHICLE • A PARENT OR SUPERVISING ABUIT SHOULD READ THE HANDING INSTRUCTIONS **TRANSMITTER**

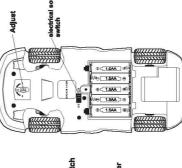

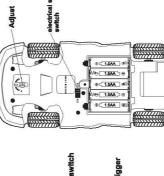

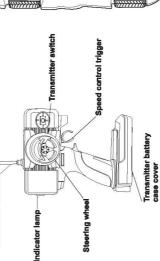

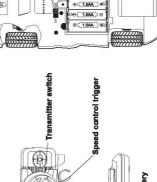

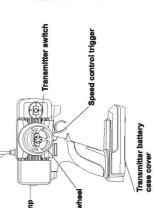

O INSTRAU TRANSMITTER BRITTERY

**ITEM NO.9023**