FIGURE 1 LCD TV (M/N: ELCHS192) COVER REMOVED



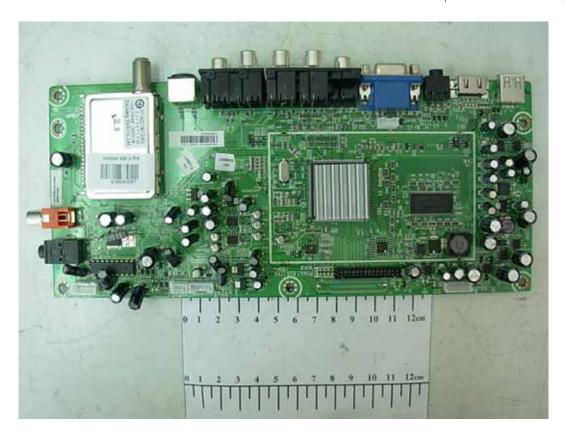


FIGURE 3 LCD TV (M/N: ELCHS192) MAIN BOARD (SOLDERED SIDE)

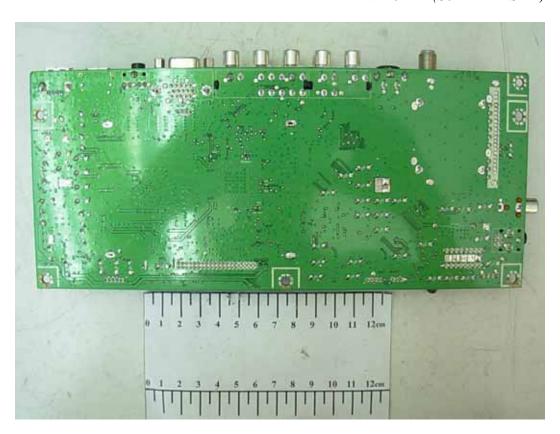


FIGURE 4 LCD TV (M/N: ELCHS192) LABEL ON TUNER



FIGURE 5 LCD TV (M/N: ELCHS192) CHIP 1 ON MAIN BOARD

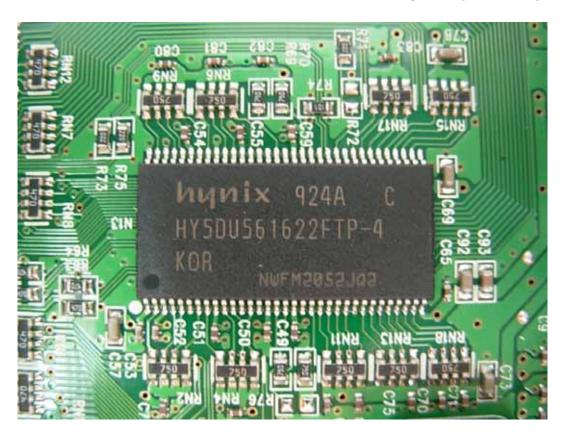
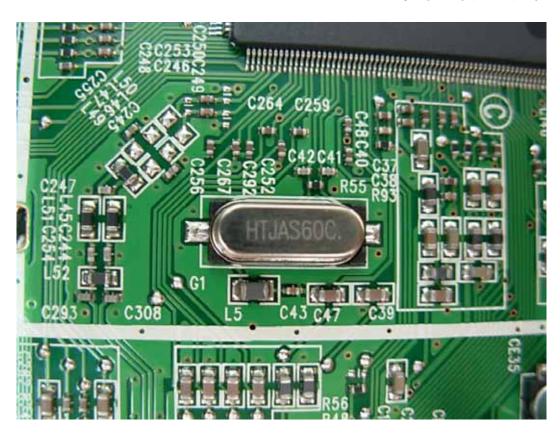




FIGURE 7 LCD TV (M/N: ELCHS192) CRYSTAL ON MAIN BOARD



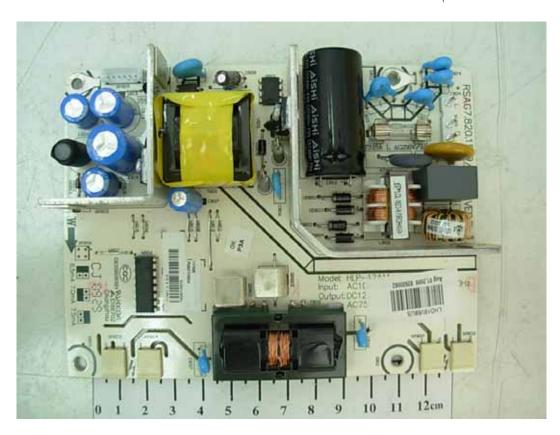
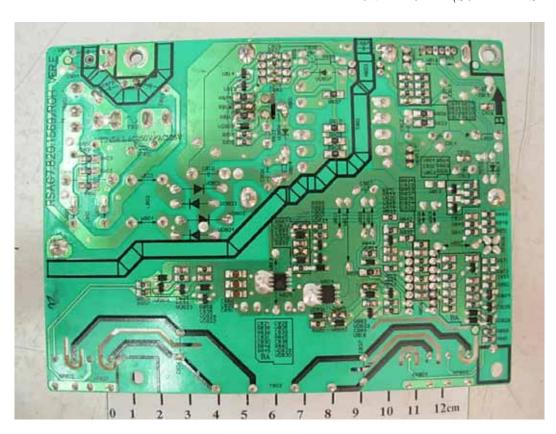


FIGURE 9 LCD TV (M/N: ELCHS192) POWER BOARD (SOLDERED SIDE)



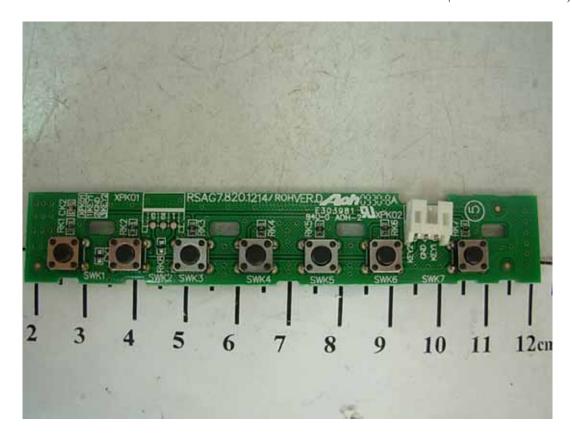
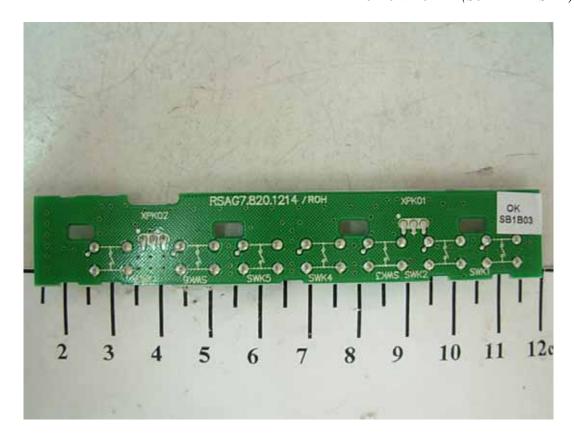


FIGURE 11 LCD TV (M/N: ELCHS192) BUTTON BOARD (SOLDERED SIDE)



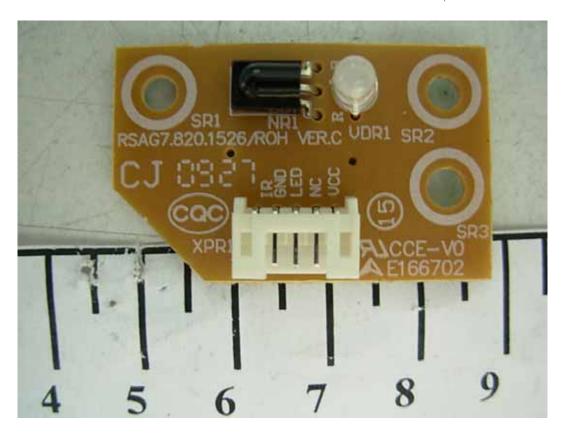
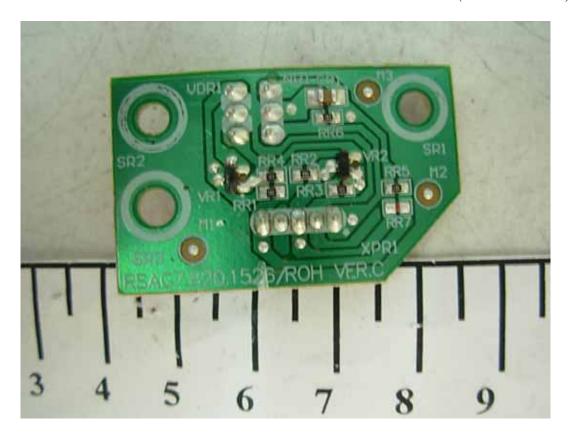


FIGURE 13 LCD TV (M/N: ELCHS192) LED BOARD (SOLDERED SIDE)



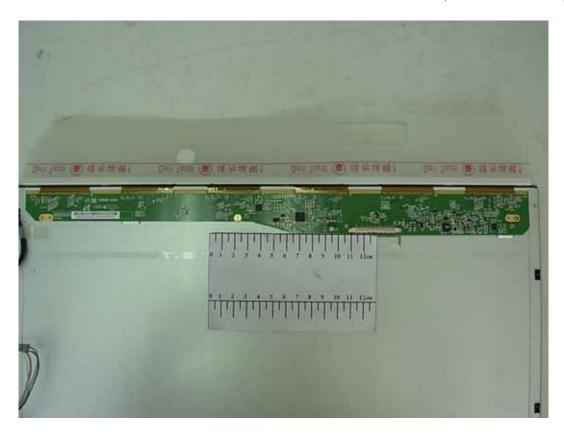


FIGURE 15 LCD TV (M/N: ELCHS192) PANEL CONTROL BOARD (SOLDERED SIDE)

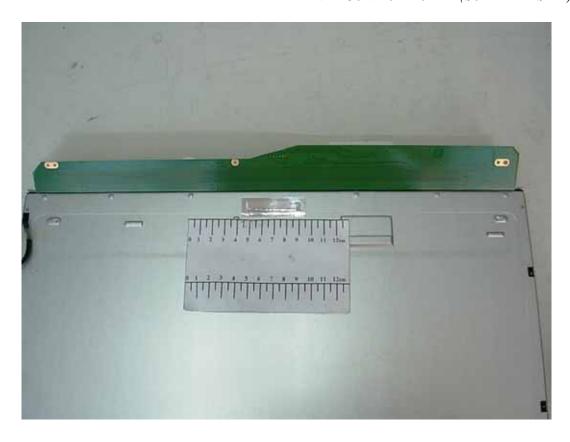


FIGURE 16 LCD TV (M/N: ELCHS192) LABEL ON PANEL



FIGURE 17 LCD TV (M/N: ELCHS192) DEBUG 1



FIGURE 18 LCD TV (M/N: ELCHS192) DEBUG 2



FIGURE 19 LCD TV (M/N: ELCHS192) DEBUG 3

