



USER'S GUIDE



DS-843 Bluetooth Speaker System for iPod + iPhone

For the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com**



Warnings and Precautions

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- AVERTISSEMENT: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- CAUTION: Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- WARNING: The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- WARNING: The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

- WARNING: Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- · WARNING: Shock hazard Do Not Open.
- AVIS: RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterias viejas y nuevas.
No mezcle baterias alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEI



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



lacksquare

Important Safety Instructions

- 1. Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.



Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Customer Support: 1-888-999-4215

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the follow:

(1) This device may not cause harmful interference,

and (2) This device must accept any including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by uncouth. Such modifications could void the user's authority to operate the equipment.

Additional Warnings

 The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

Battery shall not be exposed to excessive heat such as sunshine, fire
or the like

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or back of the apparatus.

 Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
 Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.





3

Bluetoooth Speaker System for iPod + iPhone

Features

- Made for iPod and iPhone
- Plays and charges docked iPod and iPhone
- Supports profile A2DP (Advanced Audio Distribution Profile)
- Wireless range: 33 feet
- · Rotating dock for iPod and iPhone
- iPod and iPhone authentication IC
- Composite video output
- 3.5mm audio input
- · Digital volume control
- Built-in speakers
- · Full-function remote
- Cloth speaker grill
- DC power input: requires an AC/DC power adapter (included)

Included

 Remote control: requires a CR2025 battery (pre-installed)

Magnetic spacers

- 3.5mm audio cable
- AC/DC power adapter







Table of Contents


Bluetoooth Speaker System Features Included	n for iPod + iPho	ne	• • • • • • • • • • • • • • • • • • • •	
Table of Contents		• • • • • • • • • • • • • • • • • • • •		
Introduction		• • • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • • •	
Setup Power Remote			••••••	8
iPod and iPhone Docking an iPod or iPho Rotating Dock Playing a Docked iPod o	ne			9
3.5mm Audio Input & Comp Using the 3.5mm Audio Using the Composite Vic	Input	put	•••••	10
Bluetooth Pairing a Bluetooth Devi Playing Audio Wirelessly Using the Speakerphone	ce			1 ¹
Company Information International Support Contact Information Compatibility Warranty				12





Green Initiative



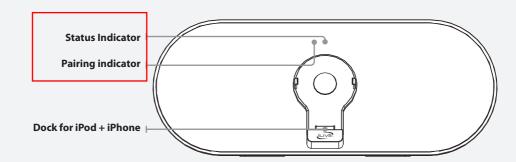

Power/Source Press to switch between iPod and iPhone, Line In and Bluetooth mode. Press and hold to turn the power off.


Talk/End/Play/Pause

Press to activate the speakerphone function pand accept or end calls.

Press to play or pause a docked iPod/iPhone or a connected Bluetooth device.

Volume


Press to adjust | the volume.

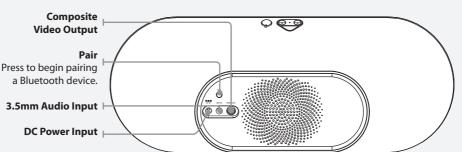

6





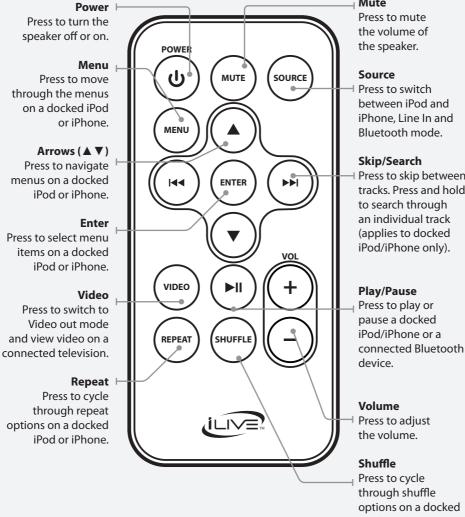

Mute

Press to skip between tracks. Press and hold

iPod or iPhone.

7

Customer Support: 1-888-999-4215

ISPB592-682-01-IB-0802.indd 7









Power

DC power input: requires an AC/DC power adapter (included)

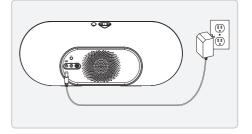

Remote

Remote control: requires a CR2025 battery (pre-installed)

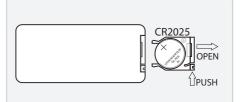

Status	Indicator	
iPod/iPhone Mode	Green light	
Bluetooth Mode	Blue light	
Line In Mode	White light	









iPod and iPhone

Docking an iPod or iPhone

- Use the included spacers as needed to fit your iPod or iPhone into the dock.
- Connect the iPod or iPhone to the connector inside the Dock for iPod and iPhone.
- 3. When the speaker is plugged in, using AC power, the docked iPod or iPhone will charge.

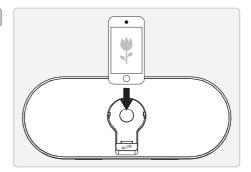

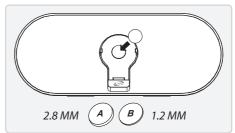



Rotating Dock

The dock will rotate 90° to the right or left.

Do not attempt to rotate the dock further than 90° to either side to avoid damaging the speaker.



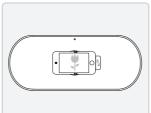

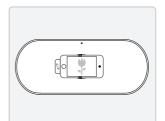

Playing a Docked iPod or iPhone

- 1. Follow the instructions for <u>Docking an iPod or iPhone</u>.
- 2. Press the **Source/Power** button to switch to iPod mode.
- 3. Press the **Play/Pause** button on the remote or on the docked iPod or iPhone to begin playing the docked iPod or iPhone.

Customer Support: 1-888-999-4215





3.5mm Audio Input & Composite Video Output

Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (included)

- Connect a 3.5mm audio cable to the 3.5MM Audio Input on the speaker and an audio output on an MP3 player or other audio source.
- Press the **Source/Power** button to switch to Line In mode.
- Use the native controls on the connected MP3 player or other audio source to play and control audio played through the speaker.

Using the Composite Video Output

Requires an RCA composite video cable (not included)

- Connect the RCA composite video cable to the Composite Video Output on the speaker and a composite video input on a television.
- Press the **Video** button on the remote to switch to video out mode.
 - Note: Some older model iPods may require you to adjust the **TV OUT** settings on the docked iPod to **OK**.
- Videos played from the docked iPod or iPhone will now play on the connected television.





Bluetooth

Pairing a Bluetooth Device

- Power on the unit by pressing the Power button.
- Press the **Source/Power** button to switch to Bluetooth mode.
- 3. Press the Pair button.
- The Pairing Indicator will flash blue quickly.
 - When pairing, remain within 3 feet of the unit.
- Using the native controls on your Bluetooth device, select the "ISBP592" in your Bluetooth settings to pair.
 - If your device requests a password, enter the default password "0000".
 - Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
- When successfully paired and connected, the **Pairing Indicator** will display a solid blue light and a beep will sound from the unit.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.

If your device should become unpaired, follow the above directions again.

Playing Audio Wirelessly

- Follow the instructions for <u>Pairing a</u> Bluetooth Device.
- Use the native controls on the connected Bluetooth Device to select a track.
- To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device or press the Play/Pause button.
- Audio played through the connected Bluetooth device will now be heard through the speakers.

Using the Speakerphone

- 1. Follow the instructions in <u>Pairing a</u> Bluetooth Device.
- 2. When a call is received, a ringtone will sound through the speakers.
- Press the Talk/End button to accept the call or accept the call with the native controls on the connected device.
- The incoming call received through the device will now be heard through the speakers.
- To end the call, press the Talk/End button or end the call using the native controls on the connected device.





Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.iLiveElectronics.com.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.iLiveElectronics. com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.iLiveElectronics.com.

Contact Information

Email Support: prodinfo@dpiinc.com Email Parts: partsinfo@dpiinc.com Phone Support: 1-888-999-4215 Website: www.iLiveElectronics.com

Compatibility

To get information on which iPod, iPhone, or iPad products are compatible with this product, go to: www.iLiveElectronics.com

Warranty

For Warranty Information and the most upto-date version of this User's Guide, go to: www.iLiveElectronics.com

Green Initiative



Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'
On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

In 2011 DPI, Inc. also began conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.

 $Copyright @\ 2012\ Digital\ Products\ International\ (DPI, Inc.)\ |\ All\ other\ trademarks\ appearing\ herein\ are\ the\ property\ of\ their\ respective\ owners. Specifications\ are\ subject\ to\ change\ without\ notice$