User Manual

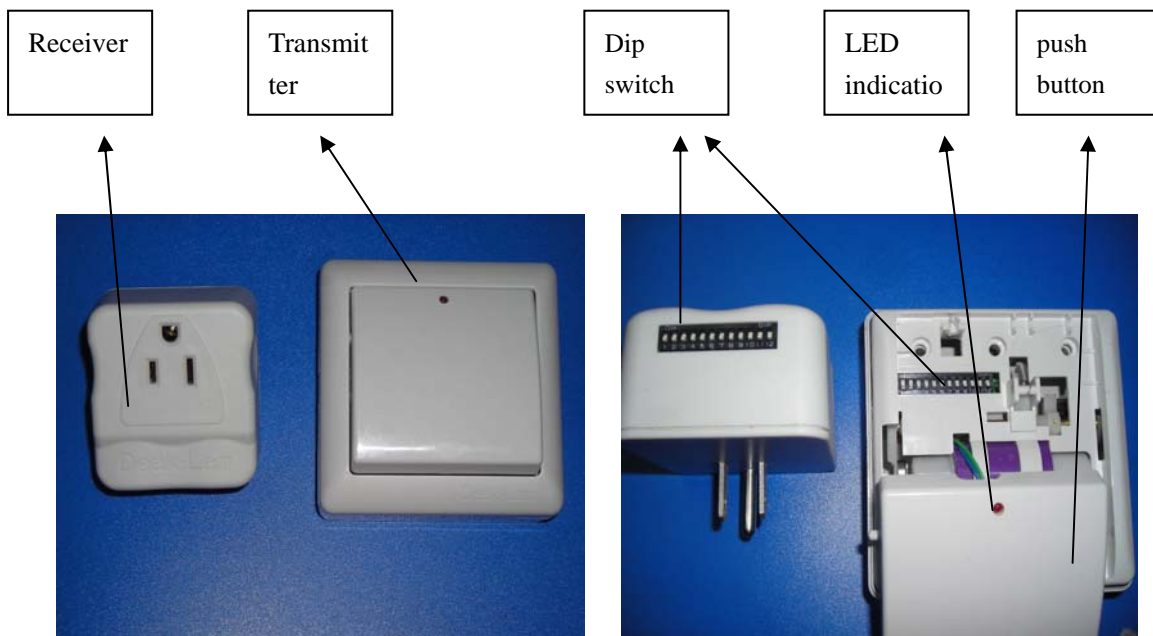| Receiver	Transmitter	Dip switch	LED indicatio	push button

1. Connecting the receiver with AC110V power, and then connecting the bulb to the receiver. Here the bulb is turnoff.
2. The bulb will turn bright by pressing the switch button down.
3. When the bulb is in bright state, there are two choices for your choose:

①. The bulb will be turnoff after one second by pressing the switch button one time in one second. If pressing the switch button two time series, the bulb will be into brightening state instead of turnoff. If pressing the switch button two time series again, the bulb will be turnoff.

②. In the bright state, the brightness could be adjusted by pressing the switch button two times series in one second. If you feel the brightness is suitable, please press the switch button one time and then the brightness will be fixed up. When fixed the brightness, the bulb will be turnoff if you press the switch button two times series; if you press the switch button one time, the bulb will turn right, and the brightness will fix at you setting last time.

4. Set up password.

To steady the receiver without outside interference, we recommend you to set up a password both for transmitter and receiver. And the password both of transmitter and receiver should be corresponding, so that the receiver could work. Fox example: the password of transmitter is 123, the password of receiver must be 123 as well.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.