Revision	Date	Description
Α	6/12/13	apt-x logo added to Bluetooth section.
		page 7 typo corrected "for" added
В	6/18/13	Page 11 & 25 updated Industry
		Canada licence copy.

## opolk

Date 16 January 2013 Drawing # HBP2755

File Name WoodbourneMN\_2755B.pdf

ScaleFull SizeDrawn ByDMBColorPMS 476

Cover prints PMS 476 Text prints: PMS 476

Cover Stock216 gsm (80#) Brown Kraft coverText Stock118 gsm (80#) Matte White text

Binding Saddlestitched
Process Offset lithography

Notes Titleblock DOES NOT PRINT

Artwork Digital file

Signature	Date
	Signature



5601 Metro Drive Baltimore, MD 21215 800-377-7655 www.**polkaudio**.com



# woodbourne

owner's manual manuel d'utilisation

## please take inventory


Please check to ensure you have everything in your Polk® Woodbourne wireless speaker system carton. Inside, you should find:

- Woodbourne wireless speaker system
- Remote control (batteries included)
- Power cord
- 3.5mm to 3.5mm analog cable
- Owner's manual (not shown)
- Online registration card (not shown)
- Product brochure (not shown)

**important note:** If anything is missing or damaged, or if your Polk Woodbourne wireless speaker system fails to operate, please notify your dealer immediately. We recommend keeping your original carton and packing materials in case you need to ship the unit in the future.

## customer service

Thank you for your Polk purchase. If you have a question or comment, please feel free to call us or email us. In North America and Canada, call Polk Customer Service 800-377-7655 (M-F, 9-5:30 EST) or via email polkcs@polkaudio.com. Outside the US, call 410-358-3600.

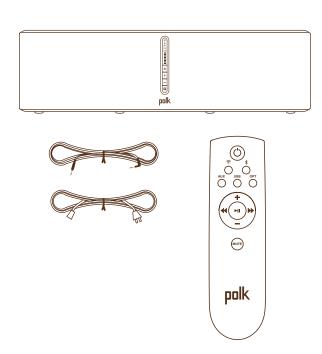

## about your woodbourne wireless speaker system

The Woodbourne is more than a wireless loudspeaker offering both AirPlay® and *Bluetooth*® with apt-X® connectivity. It is more than capable of being your primary speaker system not only for your music, but also for your TV.

Specifications	
driver complement	2 - 5 1/4" mineral filled polypropylene midwoofers with rubber surrounds, 2 - 1" silk dome tweeters
continuous power	180 W (70 W x 2 - midwoofers; 20 W x 2 - tweeters into 4 ohms $@ < 1\%$ THD+N)
wireless connectivity	AirPlay, Bluetooth with apt-X and AAC decoding
wired connectivity	Optical, 3.5 mm analog, USB "A" for iOS® devices
dimensions	24 1/8" W x 7" H x 6 7/8" D (6.97 cm L x 17.78 cm H x 17.46 cm P)
weight	17.5 lb (7.9 kg)
warranty	Drivers 5 years parts and labor (original purchaser) Electronics 1 year parts and labor (original purchaser)

### connectivity

The Woodbourne offers state-of-the-art connectivity both as a wireless and wired speaker system. These connections include:

- 1. AirPlay
- 2. Bluetooth with apt-X and AAC
- 3. USB for any iOS device\*

  \*Automatic battery charging for USB connected devices
- Optical (digital) cable for TV, DVD, Blu-ray<sup>®</sup> or gaming console
- 5. AUX stereo 3.5mm
- 6. Ethernet for directly connecting your Woodbourne to your network




## speaker controls

- 1. Power (♦)—turns on the Woodbourne
- 2. Volume up/down (+/-)-adjusts volume
- Source (♥)—changes which input source you are listening to
- LED indicators (from the top down: AirPlay, Bluetooth, OPT\*, AUX, USB, volume level)
   "Green LED means Dolby Digital is present.

#### remote control

- 5. Power ( O )—turns on the Woodbourne
- 6. Source buttons—changes which input source you are listening to
- Volume up/down (+/-)-adjusts volume Previous/next ( ←/ → )-select previous or next track Play/pause ( ►II )-plays or pauses track
- 8. Mute-mutes volume



## woodbourne setup options

The Woodbourne includes both AirPlay and *Bluetooth* wireless technologies that allow you to stream music from any compatible device.

## Bluetooth setup

#### connecting devices

To pair and connect your music player with the Woodbourne:



- Make sure your music player and Woodbourne are both powered on.
- 2. Make sure your music player has *Bluetooth* turned on. See your manual for instructions.
- Press the Bluetooth source button (\*) from the Woodbourne remote or press the source (♥) button on the Woodbourne until the Bluetooth source is selected (the Bluetooth symbol will pulse).
- Your Woodbourne will become listed on your music player and will be available to pair & connect. Select "polk woodbourne" on your player to initiate the connection process.

**note:** Some Android devices require a separate step after pairing has been completed.

- After a short delay (5 seconds), the two devices should now be connected. The Bluetooth source symbol will be a solid blue; indicating a connection has been made.
- 6. Play your music from your device!

## disconnecting devices

If your Woodbourne is in *Bluetooth* source and you press and hold the source button ( ♠) for 3 seconds, then any *Bluetooth* device that's connected will be disconnected automatically. The *Bluetooth* LED should flash 4 times within one second to indicate the *Bluetooth* device was disconnected. The Woodbourne will then become available for pairing and connecting.

## AirPlay. Getting Started.

AirPlay technology allows you to stream music from your PC (iTunes 10.2 or later) or iOS device (iOS 4.3 or later) to your Woodbourne speaker using your home or office network. To take advantage of this feature you need to first get your Woodbourne speaker connected to your network. This can be done by directly connecting your Woodbourne to your router with an Ethernet cable or by utilizing the built-in wireless module in the Woodbourne (see instructions on p5). Once your Woodbourne speaker is connected to the network you will see the AirPlay icon near your music player controls:



When you click or tap on this icon you will see a list of all available AirPlay speakers that you can use. Click or tap on the one you want and your music will be sent to that speaker. If you would like, you can change the name of your Woodbourne as it appears in the list (see instructions on p5).


## AirPlay setup

With AirPlay you have several options from which to choose for setting up your Woodbourne:


What do you want to do?	Then use this:
If you want to use AirPlay from your iOS device and don't want to change the name of your Woodbourne or perform a firmware update.	Wi-Fi login sharing page 5
If you want to use AirPlay from your iOS device and you want to change the name, and/or update firmware.	Polk's mobile app page 6
If you want to use AirPlay	Web pages

#### AirPlay setup using Wi-Fi login sharing

 Connect your iOS device to the Woodbourne's USB input using the standard sync cable that came with your device.



- Make sure that your device is already connected to the same wireless network that you want your speaker to connect to.
- With your speaker powered on, and in USB source, press and hold the source button (♥) for approximately 3 seconds.



- 4. When you receive a pop-up alert on your iOS device, you can release the button.
- Tap on the ALLOW button on the iOS device to share the Wi-Fi credentials with the Woodbourne speaker.
- 6. The speaker will now connect to the wireless network. The Wi-Fi logo (令) on the Woodbourne should flash and then turn solid for two seconds before fading away.

## AirPlay setup using the Polk mobile app

The Polk Woodbourne mobile app is easy to use. It will walk you through each simple step needed to name, connect and update your Woodbourne.



The Polk Woodbourne mobile app is available in the Apple app store.

With the Woodbourne powered on and in USB source mode, connect your iOS device to the USB input using the standard sync cable that came with your device. Then launch the app and follow the instructions.







#### AirPlay setup using web pages

If you only intend to use AirPlay from a Mac or PC, follow the instructions found at: www.polkaudio.com/products/woodbourne

The setup pages will enable you to name your Woodbourne, connect your Woodbourne and update Woodbourne firmware when updates become available. Before you begin, collect your router's information (network name and password).

## updating woodbourne firmware

From time to time, we may release a firmware update for your Woodbourne. These updates fix minor bugs or add new features. We recommend you download a firmware update when we offer them. You can check www.polkaudio.com/products/woodbourne for firmware updates.

Better yet, if you use the Polk Woodbourne mobile app, you'll be notified automatically of any firmware updates when they become available.

If you have questions about firmware updates, please call customer service at: 800-377-7655 (M-F, 9-5:30 EST) or via email polkcs@polkaudio.com.

## cleaning and care

Your Woodbourne top cap is finished in real natural wood veneer. Clean the top periodically with a soft cloth and furniture polish to remove dust and fingerprints.

**note:** Do not use any petroleum based cleaners or solvents on the Woodbourne.

## troubleshooting

 How do I hook up the Woodbourne to my home network?

You can hook up to your home network by using Wi-Fi login sharing, the Polk Woodbourne mobile app or through web pages.

Refer to the instructions that begin on page 5 of this manual.

2. Not sure what network I'm on.

The Woodbourne's AirPlay LED will be solid blue, indicating the speaker is connected to a Wi-Fi network. Unfortunately, you won't be able to tell which network you're connected to if there are other wireless networks in your immediate vicinity. If you hear the music you want to play, you're connected to your network.

- Audio sometimes drops out when in AirPlay. If that should happen, here's a list of possible remedies:
  - Make sure the distances between your Woodbourne, your network router and the device you're streaming music from are all within recommended broadcast distances.

- Keep other electronic devices and appliances a reasonable distance from the Woodbourne and your router to reduce the chance of interference.
- Other Wireless Local Area Networks (WLAN) in your immediate vicinity could interfere as well.
- Make sure that other devices are not trying to stream to the same Woodbourne.
- Make sure that your Wi-Fi router is configured with the recommended settings for the best performance.
- Try another channel for your router.
- Refer to your router's owners manual for solutions to interference and other issues.
- It takes a few seconds before I hear music streamed by AirPlay.

Here are some things to check that could speed things up.

- Place your network router closer to the Woodbourne.
- Look for any wireless network interference
- Use an Ethernet cable to connect your Woodbourne directly to your network.

## 5. Woodbourne isn't connecting to my

#### Wi-Fi network.

Your Woodbourne may not connect to your Wi-Fi network for any number of reasons.

- Make sure your Woodbourne is powered on.
- Restart your Woodbourne.
- Restart your network router.
- Maybe your router has a new firmware update available.

## 6. DTS decoding isn't working.

Only Dolby Digital decoding is supported through the optical connection. DTS is not supported. The green LED indicates that a Dolby Digital signal is present and streaming over the optical input.

## 7. The Woodbourne does not power on.

Ensure you have plugged the power cord into a live wall outlet.

## important safety instructions

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

- Read Instructions. All the safety and operating instructions should be read before the system is operated.
- Retain Instructions. The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings. All warnings on the appliances and in the operating instructions should be adhered to.
- Follow Instructions. All operating and use instructions should be followed.
- Cleaning. Unplug the appliance from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Attachments. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Water and Moisture. Do not use these appliances near water for example, near a bath tub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- 8. Accessories. Do not place these appliances on an unstable cart, stand, tripod, bracket, or table. The audio/video products may fall, causing serious injury to a child or adult, and serious damage to the products. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the appliances. Any mounting of the appliances should follow the manufacturer's instructions, and should use mounting accessories recommended by the manufacturer.
- 9. Ventilation. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the appliances and to protect them from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the products on a bed, sofa,

- rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 10. Power Sources. This product should be operated only from the type of power source indicated on the marking labels. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
- 11. Grounding or Polarization. This product is equipped with polarized alternating-current line plugs (plugs having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 12. Power Cord Protection. Power-supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliances.
- 13. Lightning. For added protection for this audio/video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14. Power Lines. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

- 15. Overloading. Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 16. Object and Liquid Entry. Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on this audio/ video product.
- 17. Servicing. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 18. Damage Requiring Service. Unplug this product from wall outlets and refer servicing to qualified service personnel under the following conditions:
  - a. When the power supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or the cabinet has been damaged.
  - f. When the product exhibits a distinct change in performance this indicates a need for service.
- 19. Replacement Parts. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that the parts have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.



**CAUTION:** Danger of EXPLOSION if battery is incorrectly replaced. Replace only with the same or equivalent type.



WARNING: Do not expose batteries or battery pack to excessive heat such as sunshine, fire or the like.

- 20. Safety Check. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 21. Carts and Stands. The device should be used only with a cart or stand that is recommended by the manufacturer. Device and cart combination. should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the device and cart combination to overturn. Use caution when moving the cart/device combination to avoid injury from tip-over.
- 22. This product is not intended for use outdoors.

The CAUTION marks shown here are located on the back of your woodbourne™ wireless speaker system



**CAUTION:** To prevent electric shock, match the wide blade of the plug to the wide slot; insert fully.



CAUTION: No naked flame sources, such as candles, should be placed on the apparatus.

#### operation

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- This device may not cause interference, and
- This device must accept any interference, including interference that may cause undesired operation of the device.

#### class b emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference—Causing Equipment Regulations.

note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

- The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## product disposal

Certain international, national and/or local laws and/or regulations may apply regarding the disposal of this product. For further detailed information, please contact the retailer where you purchased this product or the Polk Audio Importer/Distributor in your country. A listing of Polk Audio Importer/Distributors can be found on the Polk website www.polkaudio.com or by contacting Polk Audio at: 5601 Metro Drive, Baltimore, Maryland 21215, USA. Phone: +1-410-358-3600; in California: 1-800-377-7655.

## limited five year warranty

Polk Audio, Inc., warrants to the original retail purchaser only. This warranty will terminate automatically prior to its stated expiration if the original retail purchaser sells or transfers the product to any other party.

Polk Audio, Inc., warrants, to the original retail purchaser only, that the LOUDSPEAKER(S), PASSIVE CROSSOVER COMPONENT(S) and ENCLOSURE on this Polk Audio Loudspeaker Product will be free from defects in material and workmanship for a period of five (5) years from the date of original retail purchase from a Polk Audio Authorized Dealer.

Furthermore, Polk Audio, Inc., warrants, to the original retail purchaser only, that any AMPLIFIER OR OTHER ELECTRONIC COMPONENT that may be included in this Polk Audio Loudspeaker Product will be free from defects in material and workmanship for a period of one (1) years from the date of original retail purchase from a Polk Audio Authorized Dealer.

To allow Polk Audio to offer the best possible warranty service, please register your new product online at: www.polkaudio.com/registration or call Polk customer service 800-377-7655 in the USA and Canada (outside the USA: 410-358-3600) within ten (10) days of the date of original purchase. Be sure to keep your original purchase receipt.

Defective Products must be shipped, together with proof of purchase, prepaid insured to the Polk Audio Authorized Dealer from whom you purchased the Product, or to the Factory at 1 Viper Way, Vista, California 92081. Products must be shipped in the original shipping container or its equivalent; in any case the risk of loss or damage in transit is to be borne by you. If upon examination at the Factory or Polk Audio Authorized Dealer it is determined that the unit was defective in materials or workmanship at any time during this Warranty period, Polk Audio or the Polk Audio Authorized Dealer will, at its option, repair or replace this Product at no additional charge, except as set forth below. All replaced parts and Products become the property of Polk Audio. Products replaced or repaired under this warranty will be returned to you, within a reasonable time, freight prepaid.

This warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, cosmetic appearance of cabinetry not directly attributable to defect in materials or workmanship, or service, repair, or modification of the Product which has not been authorized or approved

by Polk Audio. This warranty shall terminate if the Serial number on the Product has been removed, tampered with or defaced.

This warranty is in lieu of all other expressed Warranties. If this Product is defective in materials or workmanship as warranted above, your sole remedy shall be repair or replacement as provided above. In no event will Polk Audio, Inc. be liable to you for any incidental or consequential damages arising out of the use or inability to use the Product, even if Polk Audio, Inc. or a Polk Audio Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply to you.

All implied warranties on this Product are limited to the duration of this expressed Warranty. Some states do not allow limitation on how long an implied Warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you also may have other rights which vary from state to state.

This Warranty applies only to Products purchased in Canada, the United States of America, its possessions, and U.S. and NATO armed forces exchanges and audio clubs.

The Warranty terms and conditions applicable to Products purchased in other countries are available from the Polk Audio Authorized Distributors in such countries. Polk Audio is a DEI Holdings, Inc. Company. Polk Audio and Polk are registered trademarks of Polk Audio, Inc. Woodbourne is a trademark of Polk Audio Inc.

AirPlay, iPad, iPhone, and iPod are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

AirPlay works with iPhone, iPad, and iPod touch with iOS 4.3.3 or later, Mac with OS X Mountain Lion, and Mac and PC with iTunes 10.2.2 or later. Made for iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPad (4th generation), iPad mini, iPad (3rd generation), iPad 2, iPad, iPod touch (1st throught 5th generation), iPod nano (4th through 7th generation).

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license. Other trademarks and trade names are those of their respective owners.

The "aptX® software is copyright CSR plc or its group companies. All rights reserved. The aptX® mark and the aptX logo are trademarks of CSR plc or one of its group companies and may be registered in one or more jurisdictions."

Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

## faites i'inventaire

Assurez-vous que la boîte du système de haut-parleur sans fil Polk® Woodbourne contient tous les items listés ci-dessous :

- Système de haut-parleur sans fil Woodbourne
- Télécommande (pile comprise)
- · Cordon d'alimentation
- Câble analogique 3,5 mm à 3,5 mm
- Manuel d'utilisation (non illustré)
- Carte d'enregistrement en ligne (non illustrée)
- Brochure de produits Polk (non illustrée)

**note importante:** S'il manque des pièces, si vous découvrez des avaries ou si votre système de hautparleur sans fil Polk Woodbourne ne fonctionne pas, contactez immédiatement votre détaillant. Conservez la boîte et l'emballage — ils assureront la protection du produit en cas de transit éventuel.

## service à la clientèle

Merci d'avoir choisi Polk. Si vous avez des questions ou des commentaires, n'hésitez pas à communiquer avec nous à polkcs@polkaudio.com – ou par téléphone au 800-377-7655 (L-V, 9 h-17:30 h HE, Canada et É.-U. seul.) ; à l'extérieur des É.-U. et du Canada, composez le 410-358-3600.



## le système de haut-parleur sans fil woodbourne

Le Woodbourne est plus qu'un simple haut-parleur sans fil qui peut se connecter aussi bien par AirPlay® que par Bluetooth® avec apt-X®. Il peut aisément vous servir de système de son principal non seulement pour votre musique et aussi pour votre télé.

Spécifications	
transducteurs	2 — 5 1/4" méd-graves en polypropylène à charge minérale avec suspension en caoutchouc, 2 – tweeters 1" à dôme de soie
puissance continue	180 W (70 W x 2 — méd-graves; 20 W x 2 — tweeters en 4 ohms @ < 1% THD+N)
connectivité sans fil	AirPlay, Bluetooth avec apt-X et AAC decoding
connectivité avec fil	Optique, 3,5 mm analogique, USB "A" pour dispositifs iOS®
dimensions	24 1/8" W x 7" H x 6 7/8" D (6,97 cm L x 17,78 cm H x 17,46 cm P)
poids	17.5 lb (7,9 kg)
garantie	Transducteurs: 5 ans, pièces et main d'œuvre (acheteur original). Composants électroniques: 1 an, pièces et main d'œuvre (acheteur original).

#### connectivité

Le Woodbourne permet une connectivité de pointe autant comme système sans fil que câblé, comprenant :

- 1. AirPlay
- 2. Bluetooth avec apt-X et AAC decoding
- USB Entrée pour tout dispositif iOS\*
   \*Recharge automatique de dispositifs connectés par USB.
- Optical entrée optique (numérique) pour Télé, DVD, Blu-ray® ou console de jeux
- 5. AUX Entrée stéréo 3,5 mm
- Ethernet pour connecter votre Woodbourne directement à votre réseau.



### contrôles du haut-parleur

- 1. 🗘 allume/éteint le Woodbourne
- 2. +/- règle le volume
- O bouton qui sélectionne la source d'entrée.
- 4. Voyants DEL de haut en bas : AirPlay, Bluetooth, OPT\*, AUX, USB, volume)


  \*La DEL verte indique un signal Dolby Digital.

#### télécommande

- 5. 🔾 allume/éteint le Woodbourne
- AUX/USB/OPT ces boutons sélectionnent la source d'entrée.
- 7. +/-- règle le volume

  4/→- piste précédente/suivante

  1 lecture/pause d'une piste
- 8. Mute fonction sourdine

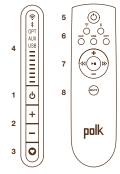

## options de configuration

Le Woodbourne est doté des technologies sans fil AirPlay et Bluetooth permettant la lecture en continu depuis n'importe quel dispositif compatible.

## configuration Bluetooth

#### connexion de dispositif

Pour apparier et connecter votre lecteur de musique au Woodbourne :



- Assurez-vous que votre lecteur et votre Woodbourne sont allumés.
- Assurez-vous que la fonction Bluetooth de votre lecteur est activée. Consultez votre manuel.
- Appuyez sur le bouton Bluetooth du Woodbourne ou de sa télécommande (\*) jusqu'à ce que le symbole Bluetooth clignote.
- 4. Le Woodbourne s'affichera sur la liste de votrelecteur et sera prêt à s'apparier et à se connecter. Sélectionnez "polk woodbourne" sur votre lecteur pour lancer la connexion.

note: certains dispositifs Android nécessitent une étape supplémentaire après l'appariement.

- Après environ 5 secondes, les deux dispositifs devraient être connectés. Le symbole *Bluetooth* luira en bleu pour indiquer que la connexion est faite.
- 6. Jouez la musique de votre dispositif.

## Déconnexion du dispositif

Si votre Woodbourne est en mode de source *Bluetooth*, appuyez sur le bouton de source ( • ) pour 3 secondes et tout dispositif *Bluetooth* se déconnectera automati-quement. La DEL *Bluetooth* clignotera rapidement 4 fois pour indiquer que le dispositif *Bluetooth* est déconnecté. La DEL clignotera alors normalement pour indiquer que le Woodbourne est en mode de détection.


## configuration AirPlay

Il y a plusieurs façons de configurer votre Woodbourne pour utiliser AirPlay :


Que voulez-vous faire ?	Alors voyez :
Utiliser AirPlay depuis votre dispositif iOS sans changer le nom de votre Woodbourne ou mettre votre logiciel à jour?	Wi-Fi login sharing page 19
Utiliser AirPlay depuis votre dispositif iOS et changer le nom de votre Woodbourne ou mettre à jour votre logiciel?	Polk mobile app page 20
Utiliser AirPlay depuis votre Mac/PC seulement ?	Pages Web page 21

#### configuration AirPlay utilisant Wi-Fi login sharing

 Connectez votre dispositif iOS à l'entrée USB du Woodbourne utilisant le câble de synchronisation de votre dispositif.



- Assurez-vous que votre dispositif est déjà connecté au réseau sans fil auquel vous voulez connecter votre haut-parleur.
- Avec le Woodbourne sous tension et en mode USB, appuyez sur le bouton (♥) pour 3 secondes.



- 4. Lorsque votre dispositif iOS affiche une alerte contextuelle, relâchez le bouton.
- Touchez le bouton ALLOW sur vos appareils iOS pour partager votre identité Wi-Fi avec le Woodbourne.
- Le Woodbourne se connectera au réseau Wi-Fi. Le logo Wi-Fi (?) du Woodbourne clignotera puis luira pour 2 secondes avant de s'estomper.

#### configuration AirPlay avec la Polk Woodourne mobile app

La Polk mobile app est facile à utiliser. Vous n'avez qu'à suivre les étapes nécessaires pour nommer, connecter et mettre à jour votre Woodbourne.



La Polk Woodbourne mobile app est disponible au Apple® App Store.

Avec le Woodbourne sous tension et en mode USB, connectez votre dispositif iOS à l'entrée USB utilisant le câble de synchronisation de votre dispositif, puis lancer l'app et suivez les instructions.







#### configuration AirPlay avec sur le web

Si vous voulez utiliser Airplay depuis un Mac ou un PC, suivez les instructions sur le site Web : www.polkaudio.com/products/woodbourne

Les pages de configuration vous permettront de nommer votre Woodbourne et de mettre à jour son logiciel de façon ponctuelle. Avant de commencer, repérez les données de votre routeur (nom du réseau et mot de passe).

## mise à jour du logiciel Woodbourne

Nous diffusons de temps à autre des mises à jour du logiciel Woodbourne. Elles corrigent des bogues mineurs et ajoutent de nouvelles fonctionnalités. Nous vous recommandons de vérifier leur disponibilité et de les télécharger du site : www.polkaudio.com/products/woodbourne

Mieux encore, si vous utilisez la Polk mobile app, vous serez automatiquement informé des nouvelles mises à jour du logiciel.

Si vous avez des questions au sujet des mises à jour du logiciel, contactez le Service à la clientèle au 800-377-7655 (L–V, 9–17h30 HE) ou par courriel : polkcs@polkaudio.com.

## nettoyage et entretien

Le dessus de votre Woodbourne est plaqué de bois naturel. Nettoyez-le seulement avec un chiffon doux et du poli à meuble.

**note:** N'utilisez jamais de nettoyant à base de pétrole ou de solvant.

## dépannage

 Comment connecter le Woodbourne à mon réseau domestique ?

Vous pouvez vous connecter à votre réseau en utilisant Wi-Fi login sharing ou la Polk mobile app, ou, si vous désirez utiliser Airplay depuis votre Mac ou PC, les pages Web.

Consultez les instructions débutant à la page 19 de ce manuel.

- 2. Sur quel réseau suis-je connecté ? La DEL AirPlay du Woodbourne LED luit en bleu lorsque vous êtes connecté à un réseau Wi-Fi. Cependant, vous ne pourrez pas savoir sur quel réseau vous êtes connecté lorsqu'il y a d'autresréseaux Wi-Fi à proximité. Si vous entendez votremusique, vous êtes connecté au bon réseau.
- 3. En mode AirPlay, le son coupe parfois. En ce cas, voici une liste de solutions possibles :
  - Assurez-vous que votre Woodbourne, votre routeur et le dispositif qui diffuse la musique en continu sont tous à l'intérieur des distances dediffusion/réception recommandées.
  - Gardez tout autre dispositif ou appareil électronique à distance raisonnable pour éviter les risques d'interférence.

- D'autres réseaux sans fil (WLAN) à proximité pourraient aussi créer de l'interférence.
- Assurez-vous que d'autres dispositifs ne sontpas connectés au même Woodbourne.
- Assurez-vous que votre routeur Wi-Fi est configuré correctement.
- Essayez de changer le canal de votre routeur.
- Consultez le manuel de votre routeur pour trouver des solutions à l'interférence ou à d'autres problèmes.
- 4. Avec Airplay, quelques secondes s'écoulent avant d'entendre la musique en continu. Voici quelques solutions qui pourraient accélérer le processus :
  - Placez votre routeur Wi-Fi plus proche de votre Woodbourne.
  - Cherchez de l'interférence pouvant affecter le réseau.
  - Utilisez un câble Ethernet pour connecter votre Woodbourne directement à votre réseau.

#### Le Woodbourne ne se connecte pas à mon réseau Wi-Fi.

Il y a plusieurs facteurs qui pourraient empêcher votre Woodbourne de se connecter au réseau :

- Assurez-vous que le Woodbourne est allumé.
- Redémarrez votre Woodbourne.
- Redémarrez votre routeur Wi-Fi.
- Une mise à jour de logiciel est peut-être disponible pour votre routeur.

#### 6. Le décodage DTS ne fonctionne pas.

Seul le décodage Dolby Digital est compatible par connexion optique. Le DTS n'est pas compatible. La DEL verte indique la présence d'un signal Dolby Digital diffusant en continu par l'entrée optique.

### 7. Le Woodbourne ne s'allume pas.

Assurez-vous que le cordon du Woodbourne est bien branché dans une prise de courant active.

## consignes de sécurité importantes

Ce produit a été conçu et fabriqué pour répondre à de strictes normes de qualité et de sécurité. Veuillez cependant porter attention aux consignes de sécurité suivantes se rapportant à soninstallation et à son utilisation.

- Lisez toutes les consignes de sécurité et d'utilisation avant d'utiliser cet appareil.
- Conservez les consignes de sécurité et d'opération pour référence future.
- Observez les consignes contenues dans le manuel d'utilisation et affichées sur le produit.
- 4. Suivez toutes les instructions d'opération et d'utilisation.
- Nettoyage: Débranchez l'appareil avant de le nettoyer.
   N'utilisez jamais de nettoyants liquides ou en aérosol.
   Utilisez un chiffon humide.
- Accessoires: N'utilisez jamais d'accessoires non recommandés par le fabricant. Ils pourraient provoquer un risque de danger.
- Eau et humidité: N'utilisez jamais cet appareil près d'une source d'eau ou d'humidité — par exemple près d'une baignoire, d'un évier, d'un lavabo ou dans un sous-sol humide ou près d'une piscine ou autre source d'eau.
- 8. Accessoires: Ne placez jamais ce produit audiovisuel sur un charriot, socle, meuble ou support instable. Le produit pourrait tomber, s'endommager ou blesser grièvement un enfant ou un adulte. N'utilisez qu'un charriot, socle, meuble ou support spécifié par le fabricant ou vendu avec le produit. Toute installation du produit doit se faire selon les directives du fabricant et en utilisant des accessoires recommandés par le fabricant.
- 9. Aération: Les ouvertures et les fentes situées sur le boîtier préviennent la surchauffe et assurent la fiabilité du produit et ne doivent jamais être couvertes ou obstruées. Elles ne doivent jamais être obstruées en plaçant le produit sur un lit, un sofa, un tapis ou autre surface similaire. Ce produit ne doit

- jamais être installé sur/ou à proximité d'un radiateur ou d'un registre de chaleur. Ce produit ne doit pas être installé dans un meuble, une bibliothèque ou un bâti à moins d'en assurer l'aération adéquate ou d'observer les directives du fabricant.
- 10. Alimentation: Ce produit ne doit être utilisé qu'avec le type d'alimentation spécifié sur l'étiquette apposée au produit. Si vous ne connaissez pas le type d'alimentation utilisé dans votre région, communiquez avec le revendeur du produit ou avec votre fournisseur local d'électricité.
- 11. Mise à la terre et polarisation: Ce produit est muni d'une fiche d'alimentation CA polarisée (une des deux broches est plus large que l'autre). Cette fiche ne peut être insérée dans la prise de courant que d'une seule façon. C'est un dispositif de sécurité. Si vous ne parvenez pas à bien insérer la fiche dans la prise de courant, renversez-la. Si vous ne parvenez toujours pas à insérer la fiche dans la prise de courant, faites remplacer la prise obsolète par un électricien. Ne contournez jamais le dispositif de sécurité de mise à la terre de la fiche polarisée.
- 12. Protection du cordon d'alimentation : Les cordons d'alimentation doivent être disposés hors des zones passantes où ils risquent d'être écrasés, pincés ou endommagés, particulièrement à proximité des prises de courant, des blocs multiprises et de la sortie de l'appareil.
- 13. Foudre et surtension: Pour assurer la protection de ce produit contre la foudre, ou contre la surtension lorsqu'il n'est pas utilisé pour de longues périodes, débranchez son cordon d'alimentation de la prise de courant et déconnectez le système de câble ou d'antenne.
- 14. Lignes électriques: Une antenne extérieure ne doit jamais être installée à proximité de lignes électriques aériennes ou d'autres dispositifs électriques ou d'éclairage sur lesquels elle pourrait tomber. Lors de l'installation d'une antenne extérieure, il est impératif de vous assurer que cette dernière ne pourra jamais entrer en contact avec de tels dispositifs ou lignes électriques. Il pourrait y avoir danger de mort.

- 15. Surcharge: Ne surchargez jamais les prises de courant, les rallonges ou les blocs multiprises : cela pourrait provoquer un risque d'incendie ou de choc électrique.
- 16. Objets et liquides : N'insérez jamais d'objets dans les ouvertures de ce produit. Ils pourraient entrer en contact avec des points de voltage dangereux ou provoquer des courts-circuits: cela pourrait provoquer un risque d'incendie ou de choc électrique. Ne renversez jamais de liquides sur le produit.
- 17. Service : Ne tentez jamais de réparer ce produit vous-même car ouvrir son boîtier ou en retirer le couvercle pourrait vous exposer à des voltages dangereux ou à d'autres dangers. Confiez tout service à un technicien qualifié.
- 18. Dommages et service : Débranchez l'appareil de la prise CA et contactez un réparateur qualifié lorsque :
  - a. le cordon d'alimentation a été endommagé;
  - b. un objet ou du liquide s'est introduit dans le produit:
  - c. le produit a été exposé à la pluie ou à de l'eau;
  - d. le produit ne fonctionne pas normalement selon les instructions du fabricant. Réglez uniquement les contrôles spécifiés dans le manuel d'utilisation car le réglage inapproprié de certains autres contrôles pourrait endommager le produit et requérir l'intervention d'un réparateur qualifié pour le remettre en ordre:
  - e. le produit a subi une chute ou son boîtier a été endommagé:
  - f. le produit ne semble pas fonctionner normalement. ce qui indique la nécessité de service.
- 19. Pièces de rechange : Lorsque des pièces de rechange sont requises, assurez-vous que le technicien de service utilise des pièces de rechange spécifiées par le fabricant ou des pièces avant les mêmes caractéristiques que les pièces d'origine. Des substitutions non autorisées risquent de provoquer un incendie, des chocs électriques ou d'autres dangers.



MISE EN GARDE: Il y a danger d'EXPLOSION si la pile n'est remplacée correctement. Ne remplacez la pile qu'avec une pile équivalente ou de même type.



**AVERTISSEMENT:** N'exposez pas les piles ou les blocs-piles à une source de chaleur excessive comme le soleil. le feu ou autre source calorifique.

- 20. Contrôle de sécurité : Après chaque contrôle technique ou réparation de cet appareil, demandez au technicien d'effectuer un contrôle pour assurer que l'appareil est en bon état de fonctionnement.
- 21. Chariots et socles : Les appareils doivent être utilisés uniquement avec des chariots ou des socles recommandés par le fabricant. Un appareil sur chariot doit être déplacé avec soin. Des arrêts soudains, une poussée excessive ou une surface inégale pourraient provoquer le renversement du chariot avec risque de blessures.
- 22. Ce produit n'est pas conçu pour utilisation extérieur.

Les sigles de MISE EN GARDE illustrés ici sont situés à l'arrière de votre système de haut-parleur sans fil woodbourne™



MISE EN GARDE: pour prévenir les chocs électriques, insérez la broche large de la fiche dans la fente large de la prise.



MISE EN GARDE: Aucune source de flamme, comme une chandelle, ne doit être placée sur l'appareil.

## opération

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio Exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) Ce dispositif ne doit causer aucune interférence délétère.
- Ce dispositif doit accepter toute interférence reçue, incluant les interférences qui pourraient compromettre son fonctionnement

#### limites des émissions de classe B

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

note: Ce dispositif a été testé et déclaré conforme au chapitre 15 des règlements de la FCC en ce qui a trait aux limites d'interférences générées par un appareil numérique de classe B. Ces limites ont été établies pour assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Ce dispositif génère, utilise et peut irradier des radiofréquences et, s'il n'est pas installé et utilisé conformément aux instructions, pourrait causer de l'interférence nuisible aux radiocommunications. Toutefois, il n'y a aucune garantie que de l'interférence ne sera pas présente en certains types d'installation.

Si ce dispositif génère de l'interférence nuisible à la réception radio ou télévision — ce qui peut être déterminé en allumant et éteignant le dispositif — l'utilisateur peut tenter d'éliminer l'interférence par un ou plusieurs des moyens suivants : réorienter ou déplacer l'antenne de réception; accroître la distance entre le dispositif et le récepteur; brancher le dispositif à une prise de courant reliée à un circuit distinct de celui auquel est branché le récepteur; consulter le revendeur ou un technicien qualifié pour obtenir de l'aide.

 L'antenne (ou les antennes) utilisée pour cet émetteur doit être installée en vue d'assurer une distance d'au moins 20 cm de

- toutes personnes et ne doit pas être colocalisée ou ne pas fonctionner en concomitance avec toute autre antenne ou appareil émetteur.
- Tout changement ou toute modification qui n'a pas été expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur d'opérer cet équipement.

## récupération du produit

Certaines lois ou certains règlements internationaux, nationaux ou régionaux pourraient s'appliquer à la récupération de ce produit. Pour plus d'information, communiquez avec le revendeur de ce produit ou avec l'importateur/distributeur Polk Audio dans votre pays. Vous trouverez la liste des importateurs/ distributeurs des produits Polk Audio sur le site www. polkaudio.com ou en contactant Polk



## garantie limitée de 5 ans

La garantie de Polk Audio, Inc., n'estvalide que pour l'acheteur au détail original. La garantie sera automatiquement annulée avantsa date d'expiration spécifiée si l'acheteur originalvend ou transfère le produit à tout autre parti.

Polk Audio, Inc., garantit - à l'acheteur au détail originalseulement - que le ou les HAUT-PARLEUR(S), COMPOSANTE(S) DE FILTRE PASSIF et CAISSON(S)

de ce produit Polk Audio seront exempts de tout défaut attribuable aux pièces d'origine et à lamain d'oeuvre pour une période de cinq (5) ans à partir de la date de l'achat au détail originalchez un revendeur agréé Polk Audio.

En outre, Polk Audio, Inc., garantit - à l'acheteur au détail originalseulement - que TOUT AMPLIFICATEUR OU TOUT AUTRE COMPOSANTE ÉLEC-TRONIQUE qui pourrait faire partie ce produit Polk Audio sera exempt de tout défaut attribuable aux pièces d'origine et à lamain d'oeuvre pour une période de un (1) ans à partir de la date de l'achat au détail originalchez un revendeur agréé Polk Audio.

Pour permettre à Polk Audio de vous offrir lemeilleurservice de garantie possible, veuillez enregistrer votre nouveau produit en ligne à l'adresse web www.polkaudio.com/registration - ou contactezle Service à la Clientèle de Polk au 800-377-7655 aux États-Unis et au Canada (à l'extérieur des É.U.:410-358-3600) dansles dix(10) jourssuivant la date de l'achat original. Assurez-vous de conservervotrereçu d'achat original.

Les produits défectueux doivent être expédiés, avec une preuve d'achat, francs de port et assurés, au revendeur agree Polk Audio de quivous avez acheté le produit, ou à l'usine Polk Audio, 1 Viper Way, Vista CA 92081 Les produits doivent être expédiés dansleurcarton d'expédition original ou dans un contenant équivalent. Le propriétaire doit assumer tout risque de perte ou de dommage en transit.

Si, suite à l'examen du produit à l'usine Polk ou chezlemarchand agréé Polk Audio, il est déterminé que la défectuosité est imputable auxmatériaux d'origine ou à lamain d'oeuvre au cours de la période de la garantie spécifiée, Polk Audio ou le revendeur Polk Audio, à sa guise, réparera ou remplacera le produitsansfrais additionnels etselon lesconditions décritesci-dessous.

Toute pièce ou produit remplacé devient la propriété de Polk Audio. Les produitsréparés ou remplacés sousla garantie vousseront expédiésfrancs de port dans un délai raisonnable.

Cette garantie n'inclut pasle service ou les pièces nécessaires à la réparation des dommages provoqués par accident, désastre, abus, négligence, mode d'expédition ou emballage inadéquat, utilisation commerciale, tensionssupérieures aumaximumprescrit pour l'unité, aspectvisuel dumeuble non directement attribuable à un défaut de pièces d'origine ou demain d'oeuvre, ou par le service, la réparation, ou toutemodification du produit qui n'a pas été autorisé ou approuvé par Polk Audio. Cette garantie sera annulée si le numéro de série sur le produit a été enlevé, altéré ou falsifié.

Cette garantie prend préséance sur toutes autres garanties énoncées. Si la défectuosité de ce produit est imputable aux pièces d'origine ou à lamain d'oeuvre selon lesconditions de la garantie expriméesci-dessus, votre seul recourtsera la réparation ou le remplacementselon lesconditions décritesci-dessus.

Dans aucun cas Polk Audio, Inc. pourra-t-elle être tenue responsable pour tout dommage accessoire ou indirectcause par l'utilisation ou par l'incapacité d'utilisation du produit, même si Polk Audio, Inc. ou un revendeur agréé Polk Audio, a été avisé de la possibilité de tel dommage, ou pour toute réclamation par tout autre parti.

Certains états ne permettant pasl'exclusion ou la limitation des dommagesindirects, leslimitations et exclusions expriméesci-dessus pourraient ne pass'appliquer dansvotre cas.

Toutes les garantiestacitessurce produitsont limitées à la durée de la garantie énoncée. Certains états ne permettant pasla limitation de la durée d'une garantie tacite, leslimitationsci-dessus pourraient ne pass'appliquer dansvotre cas. Cette garantie vous accorde des droitslégauxspécifiques; vous pourriez également avoir d'autres droits qui pourraientvarier d'état en état

Cette garantie s'applique seulement aux produits achetés au Canada, aux États-Unis d'Amérique et ses possessions, et danslesclubs audio et d'échange desforces armées des É.U. et de l'OTAN.Les modalités et lesconditions de garantie applicables aux produits achetés dans d'autres payssont disponibleschezles distributeurs agréés Polk Audio établis dansces pays.

Polk Audio est une compagnie de la DEI holdings Inc.; Polk Audio et Polk sont des marques de commerce déposées de Polk Audio, Inc.; Woodbourne est une marque de commerce de Polk Audio, Inc.

AirPlay, iPad, iPhone et iPod sont des marques de commerce de Apple inc. enregistrées aux É.-U. et en d'autres pays. Les logos Made for iPod, Made for iPhone et Made for iPad signifient qu'un accessoire électronique a été spécifiquement conçu pour se connecter respectivement au iPod, iPhone ou iPad et que le développeur certifie qu'il rencontre les standards de performance d'Apple. Apple ne peut être tenue responsable de l'opération de cet appareil ou de sa conformité aux standards de sécurité et de réglementation. Veuillez noter que l'utilisation de cet appareil avec un iPod, iPhone ou iPad pourrait affecter la performance sans fil.

AirPlay fonctionne avec iPhone, iPad, et iPod touch avec iOS 4.3.3 ou plus récent, Mac avec OS X Mountain Lion, et Mac et PC avec iTunes 10.2.2 ou plus récent. Made for iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone, iPad (4e génération), iPad mini, iPad (3e génération), iPad 2, iPad, iPod touch (1re à 5e 5 th génération), iPod nano (4e à 7e génération).

La marque de mot Bluetooth® et ses logos sont des marques de commerce déposées détenues par Bluetooth SIG, Inc. et tout usage de ces marques par Polk est sous licence. Les autres marques de commerce et appellationscommerciales appartiennent aux sociétés qui en sont respectivement détentrices.

Le logiciel aptX® est protégé par les droits d'auteur de la CSR plc ou d'une de son groupe d'entreprises. Tous droits réservés. La marque aptX® et le logo aptX sont des marques de commerce de la CSR plc ou d'une de son groupe d'entreprises et pourraient être enregistrées dans un ou plusieurs pays.

Fabriqué sous licence de Dolby Laboratories. Dolby et le symbole Double-D sont des marques de commerce déposées de Dolby Laboratories.