## 1 Annex A – Test setup

## 1.1 List of Pictures


Picture 1: EUT test setup radiated emission test 9 kHz – 30 MHz (front view)2
Picture 2: EUT test setup radiated emission test 9 kHz – 30 MHz (rear view)2
Picture 3: EUT test setup radiated emission test 30 MHz – 1 GHz (front view)3
Picture 4: EUT test setup radiated emission test 30 MHz MHz – 1 GHz (rear view)3
Picture 5: EUT test setup conducted emission test (front view)4
Picture 6: EUT test setup conducted emission test (rear view)4
Picture 7: EUT Position 15
Picture 8: EUT Position 25
Picture 9: EUT Position 36
Picture 10: RFID tag 125 kHz top side6
Picture 11: RFID tag 125 kHz bottom side7
Picture 12: Wiring RS-485 interface7
Picture 13: RS-485 to USB adapter – top side8
Picture 14: RS-485 to USB adapter – bottom side8
Picture 15: Wiring RS-232 interface9
Picture 16: RS-232 to USB adapter – top side9
Picture 17: RS-232 to USB adapter – bottom side10
Picture 18: USB cable10



Elatec GmbH RFID reader / writer TWN4 Palon Compact




Picture 1: EUT test setup radiated emission test 9 kHz – 30 MHz (front view)

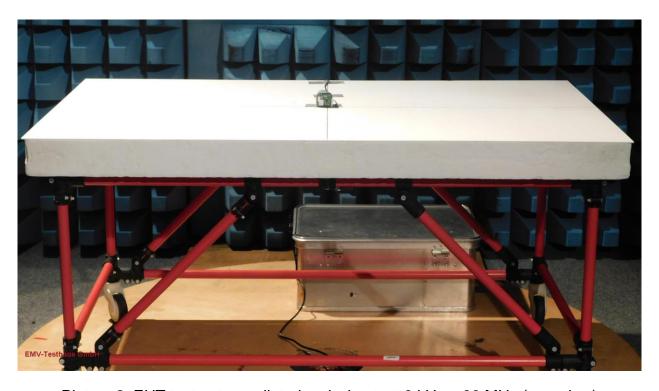

Picture 2: EUT test setup radiated emission test 9 kHz – 30 MHz (rear view)



Elatec GmbH RFID reader / writer TWN4 Palon Compact

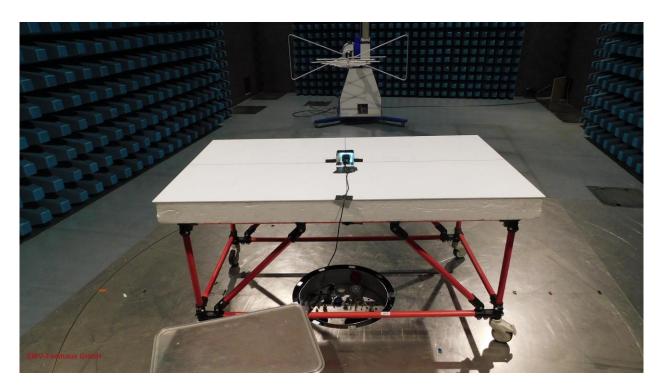


Picture 3: EUT test setup radiated emission test 30 MHz – 1 GHz (front view)



Picture 4: EUT test setup radiated emission test 30 MHz MHz – 1 GHz (rear view)



Elatec GmbH RFID reader / writer TWN4 Palon Compact

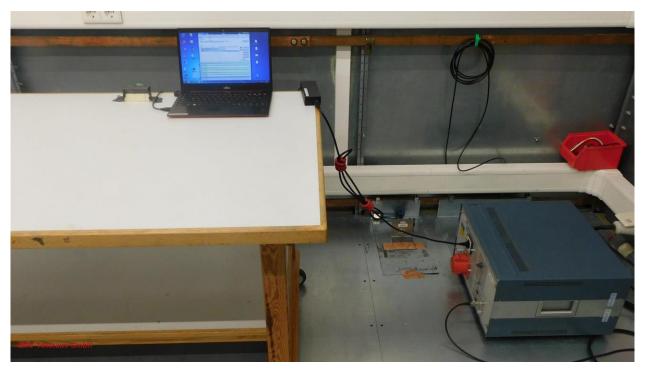


Picture 5: EUT test setup conducted emission test (front view)




Picture 6: EUT test setup conducted emission test (rear view)



Elatec GmbH RFID reader / writer TWN4 Palon Compact

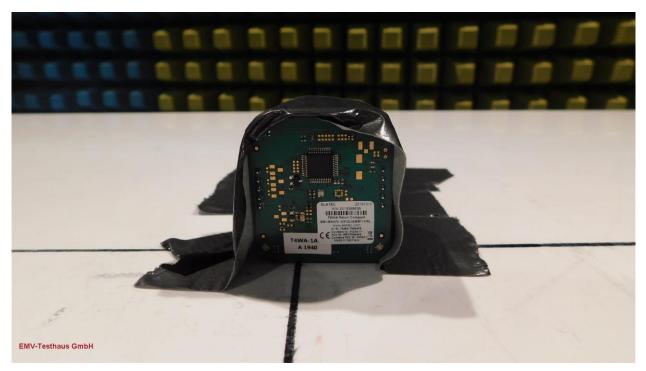

Picture 7: EUT Position 1

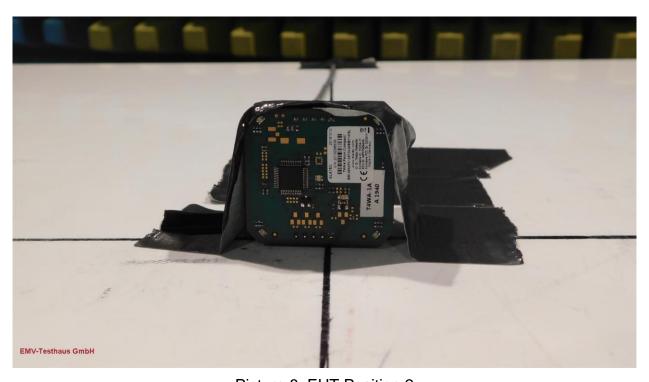


Picture 8: EUT Position 2



Elatec GmbH RFID reader / writer TWN4 Palon Compact

190174-AU01+W01 Annex A

Page 5 of 10

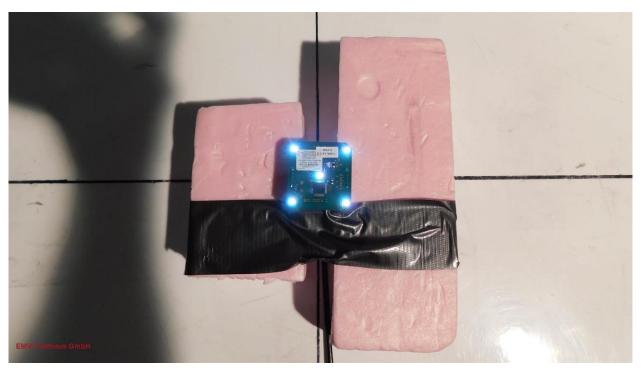

Picture 9: EUT Position 3



Picture 10: RFID tag 125 kHz top side



Elatec GmbH RFID reader / writer TWN4 Palon Compact




Picture 11: RFID tag 125 kHz bottom side



Picture 12: Wiring RS-485 interface



Elatec GmbH RFID reader / writer TWN4 Palon Compact

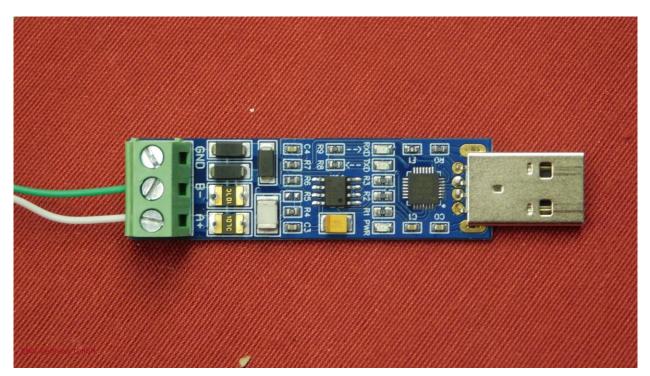

Picture 13: RS-485 to USB adapter - top side



Picture 14: RS-485 to USB adapter - bottom side



Elatec GmbH RFID reader / writer TWN4 Palon Compact

190174-AU01+W01 Annex A

Page 8 of 10



Picture 15: Wiring RS-232 interface



Picture 16: RS-232 to USB adapter - top side



Elatec GmbH RFID reader / writer TWN4 Palon Compact



Picture 17: RS-232 to USB adapter - bottom side



Picture 18: USB cable



Elatec GmbH RFID reader / writer TWN4 Palon Compact