Using Your SoundCLIP

Power On/Off



■Blue lights blink

Blue lights turn of



Pairing

[Note] The SoundCLIP is set to be in Bluetooth pairing mode automatically when turned on for the first time. Put your mobile phone in pairing mode prior to turning on your SoundCLIP. The instructions that follow are for placing the SoundCLIP into pairing mode manually



. Slide up the power button while holding down the Multi-function Button in po

2. You will hear two beeps while the blue lights blink

3. Refer to your mobile phone manual's Bluetooth Phone section and choose "Compatible Devices". The mobile phone's menu may differ by component. After reading the manual and mobile phone menu components, execute the stereo

5. When prompted for a Pin Code, type '0000', then Pairing is completed.

Pair with a Bluetooth MP3 Player (Stereo Dongle) and Phone

[Note] The SoundCLIP enables you to remain connected to your mobile phone and listen to music from a separate MP3 player with Bluetooth capability (stereo dongle) using Bluetooth's Mulitpoint capability.

1. Connect the SoundCLIP to your MP3 player (dongle)

- a) With the SoundCLIP power off, slide up the power button while pressing
- down the Multi-function Button.
 b) You will hear two beeps from the SoundCLIP while the blue lights blink. c) Refer to the MP3 Player (Dongle) manual and change the mode to Pairing
- (dongle). e) If prompted by the MP3 player, when the Pin Code screen appears, insert '0000'. Pairing is completed., Note: The Pin Code step may not be required
- for some dongles. 2. Re-Connect your mobile phone to your SoundCLIP. It is recommended that you pair your mobile phone with the SoundCLIP first by following the pairing instructions above. Find your "Compatible Devices" menu screen on your mobile phone and select the SoundClip and connect to it.

 3. The two products are now connected in synchronization.
- Important: If pairing is successful, blue LED blinks twice every five seconds, otherwise blue LED blinks once every five seconds

How to Play Music

Play Music	
Mode	Description
Play/ Pause	Press Multi-function Button + Volume Up or Down simultaneously
Stop	Press Multi-function Button + Volume Up or Down simultaneously for 2 seconds
Skip to prev. song	Hold down Volume Down for 2 seconds
Skip to next song	Hold down Volume Up for 2 seconds
Fast Rewind	Hold down Volume Down for longer than 3 seconds
Fast forward	Hold down Volume Up for longer than 3 seconds
Volume Control	Press Volume Up or Down button

Using the Phone

Making Call

-		
Mode	Description	
Sending/Receiving/Ending Calls	Press Multi-function Button lightly once.	
Switch to Speaker phone or vice versa	Hold down Multi-function Button for 2 seconds during call	
Redialing the previous number	On standby mode, press Multi-function Button lightly	
Returning the call received	On standby mode, press Volume Up + Down	
Voice Dialing	On standby mode, hold down Multi-function Button for 2 seconds	
Rejecting Call	During incoming call, hold down Multi-function Button for 2 seconds	
Mute On Microphone	Hold down Volume Up or Down for 2 seconds during call	
Mute Off Microphone	Hold down Volume Up or Down lightly.	

How to answer a Call while listening to music

- \blacksquare The music will stop automatically and the SoundCLIP will ring with the incoming call.
- Press once and release the Multi-function Button to answer the call. • When the call ends, the music resumes automatically.

How to reject a Call while listening to music

■ Press and Hold the Multi-function Button for more than 2 seconds. *If you are using a normal audio dongle, Play/ Stop/ Fast Forward/ Fast Rewind function may be limited.

How to change rings tones

While the SoundCLIP is power on in standby mode, hold down Volume button (Up or Down) for 3 seconds to hear a beep followed by a ring tone. Depending on your preference, you can choose from $% \left(1\right) =\left(1\right) \left(1\right) \left$ different ring tones by pressing Volume button (Up or Down). The last ring tone you hear will be set as your ring tone.

[Note] A phone with built-in ring tone support may not support a selected ring

How to set a receiving call to the $TTS_{(Text-To-Speech)}$ mode


The SoundCLIP comes with the TTS mode enabled. To cancel the TTS mode, hold down the Multi-function Button for 3 seconds and you will hear a high pitch sound. To enable the TTS mode, hold down the Multi-function Button for 3 seconds until you hear a high pitch sound.

Call Checking

- a) How to check last received call using TTS mode Keep pressing Volume Up and Down button for 2 seconds
- b) Missed Call Reminder Function
- When there is a missed call, a high pitch reminder tone rings every 10 seconds. To cancel the reminder sound function, press Multi-function Button or Volume (Up or Down) button.

How to use earphone

For additional flexibility, you can plug a mono or stereo earphone into the product's connection socket. After connection, the internal speakers will automatically mute.

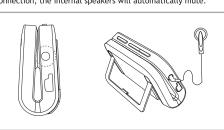

Safety and General Information

- 1. Please follow instructions below after reading this guide book 2. Dropping the product may cause malfunction and damage the product.
- 3. Avoid exposure to liquid. Do not use product immediately upon exposure as it may cause electrical shock.
- 4. Locating the product in the vicinity of a heater or other $% \left\{ 1\right\} =\left\{ 1\right$ heating object may lower battery life and cause malfunction or
- 5. Do not disassemble the product (especially the battery) as it may cause explosion.
- $\boldsymbol{6}.$ Do not place a heavy object on top of the product. 7. Use only approved and supplied charger.
- 8. Keep the power off during lightning .

▲ Caution: ELECTRIC SHOCK HAZARD

Be careful when you handle batteries. Mistreatment of batteries may cause chemical combustion or fire.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not ause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio or TV interference, caused by unauthorized modifications to this equipment. Such modifications could void user's authority to operate the

This product is CE marked according to the provision of the R&TTE Directive (99/5/EC). Here by MOVON Corporation declares that this product is in compliance with the essential requirements and other relevance provisions of Directive 1999/5/EC. For further information, please visit www.movon.co.kr

Please note that this product uses radio frequency bands not harmonized within EU. Within the EU this product is intended to be $\,$ used in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom and within EFTA in Iceland, Norway and Switzerland.

Bluetooth is a trademark owned by the Bluetooth SIG., Inc.

The condition of this warranty and our responsibilities under this

warranty are as follows:
Supplier's warranty is non-transferable. And this warranty is limited

- * You must be able to prove the date of original purchase of the unit
- with a dated receipt. * The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by
- unauthorized third party. $\ensuremath{^{*}}$ The responsibility of supplier's products shall be limited to the
- Specifically exempt from any warranty are limited life consumable components subject to normal wear and tear such as batteries,
- decorates and other accessories. A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized
- repair, modification or disassemble. Modification and repair of the unit should be done by authorized and qualified service personnel, center or returned to the
- manufacturer. This warranty gives you specific legal rights, and you may also
- have other rights which vary under local laws.

10