1 Annex C – documentation

1.1 List of Pictures

Picture 1: Front panel– top side	2
Picture 2: Front panel – bottom side	
Picture 3: Keyboard foil – top side	3
Picture 4: Keyboard foil – bottom side	3
Picture 5: Flexboard foil – top side	4
Picture 6: Flexboard foil – bottom side	4
Picture 7: Antenna board – top side	5
Picture 8: Antenna board – bottom side	5
Picture 9: Status illumination pcb – top side	6
Picture 10: Status illumination pcb – bottom side	6
Picture 11: Back panel – top side	7
Picture 12: Back panel – bottom side	7
Picture 13: Main pcb – top side	8
Picture 14: Main pcb – bottom side	8
Picture 15: Magnetic card reader – front view	9
Picture 16: Magnetic card reader – rear view	9





Picture 1: Front panel- top side




Picture 2: Front panel – bottom side




Desko GmbH Keyboard with RFID NEPTUN chrom

181053-AU01+W01 Annex C

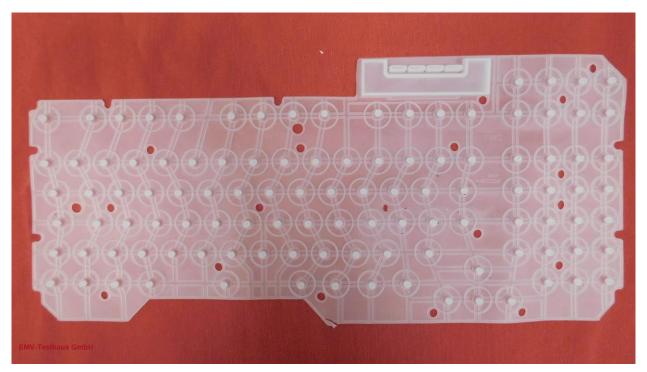

Picture 3: Keyboard foil - top side

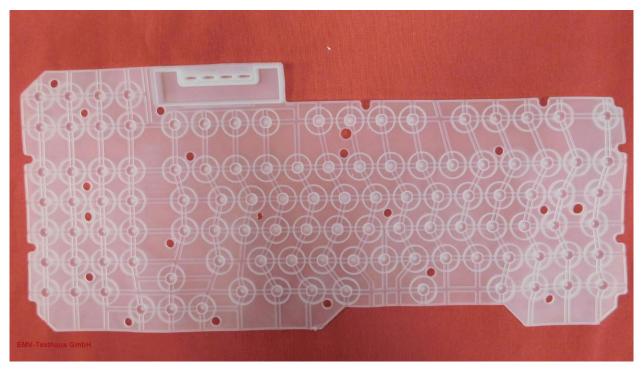


Picture 4: Keyboard foil - bottom side




Desko GmbH Keyboard with RFID NEPTUN chrom

181053-AU01+W01 Annex C

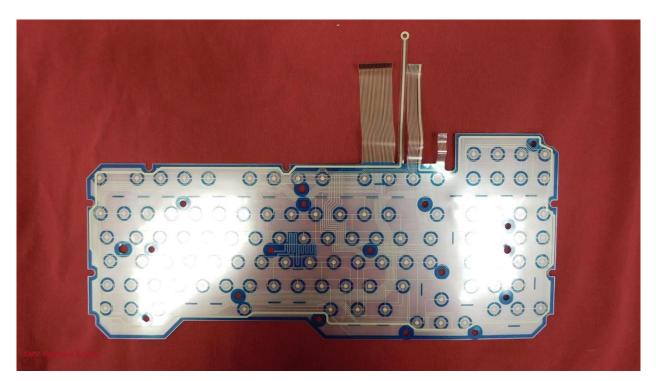


Picture 5: Flexboard foil – top side

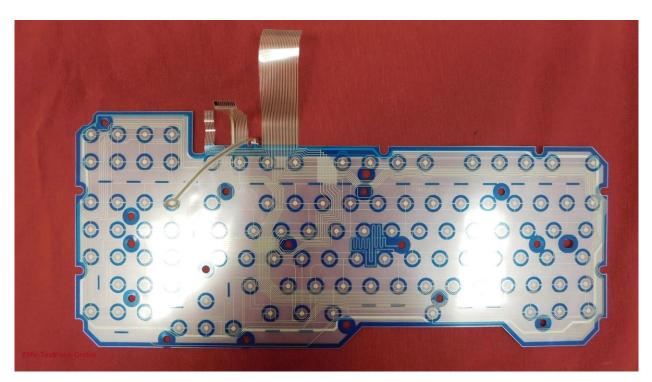


Picture 6: Flexboard foil - bottom side



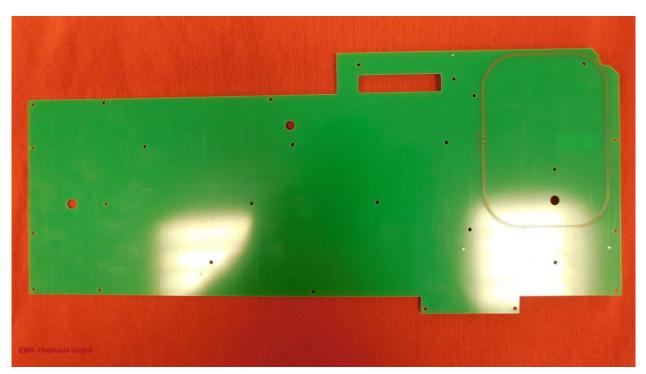

Picture 7: Antenna board - top side

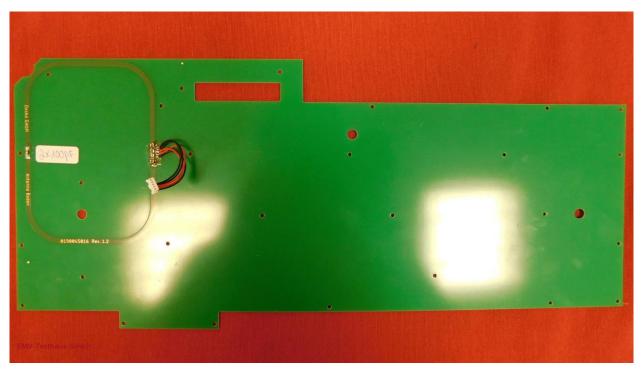


Picture 8: Antenna board – bottom side




Desko GmbH Keyboard with RFID NEPTUN chrom

181053-AU01+W01 Annex C

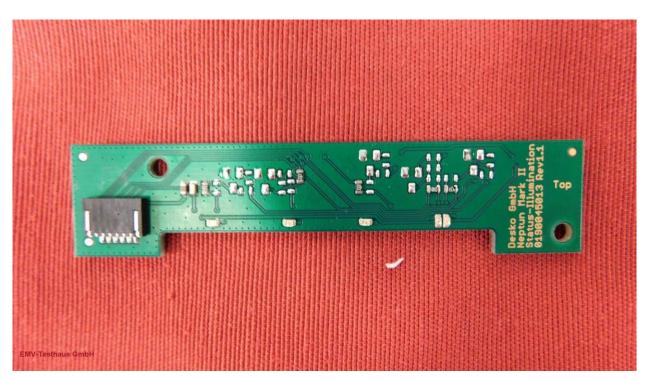

Picture 9: Status illumination pcb - top side

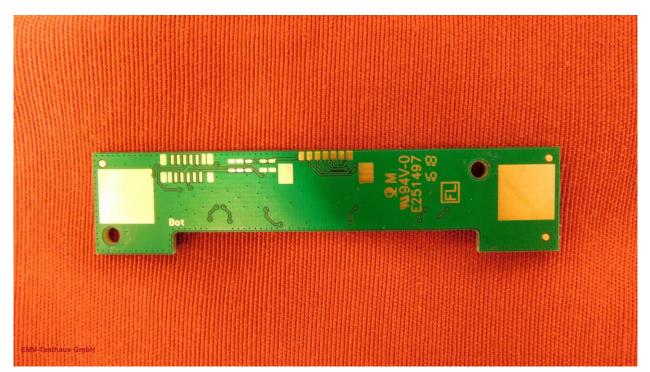

Picture 10: Status illumination pcb - bottom side




Desko GmbH Keyboard with RFID NEPTUN chrom

181053-AU01+W01 Annex C

Page 6 of 9



Picture 11: Back panel – top side

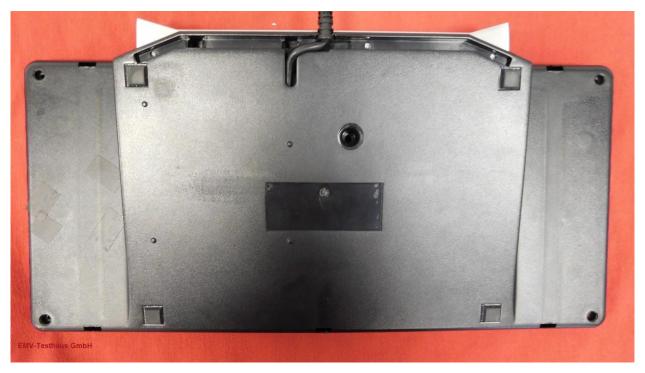


Picture 12: Back panel - bottom side






Picture 13: Main pcb - top side

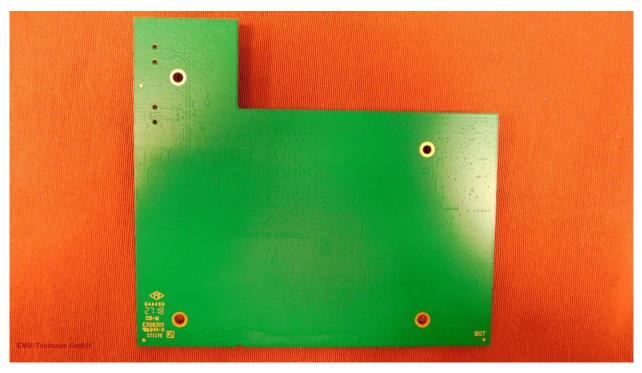

Picture 14: Main pcb – bottom side



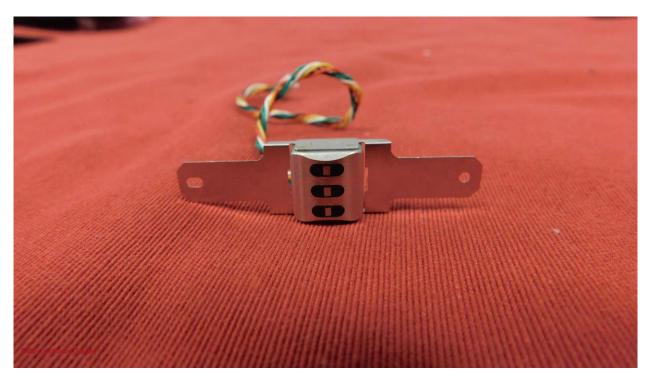

Picture 15: Magnetic card reader – front view



Picture 16: Magnetic card reader - rear view

