

INTRUCTION FOR TOUCH DIMMER

FCC ID: WZA-FC-505

Model: FC-504、FC-505、FC-505-2H、FC-505-3、FC-507

Features:

1. Convenient control for accent lights.

2. No fumbling for a switch, just touch the pad!

3. Get 3 level touch dimmer from your accent lighting systems

4. Touch pad may be places in any convenient location.

5. Example:attach under cabinet, set on counter, on shelf .etc.

6. Touch pad fits any decor.

7. Installs in seconds, No wiring required!

Specifications:


120V 60Hz

Low Voltage Halogen(12V)

Or incandescent(120V) Lights Only

For indoor Use Only

Low voltage accent lights

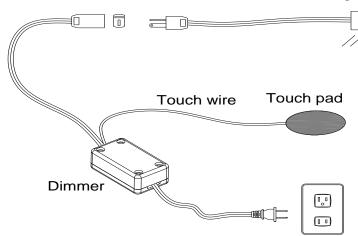

Touch pad can be mounted to any nonconductive surface, mount under a corner of the upper cabinet, set on a counter surface or stick to the side of the cabinet.

The touch pad can be also be cut off and the wire tied to any metallic surface tie the touch wire to a cabinet hinge, door knob or any suitable object.

Plug dimmer wire into any convenient wall outlet

INSTALLATION:

Do not use this dimmer with another dimmer in the same circuit

- 1. Plug accent light into the dimmer module.
- 2. Plug dimmer wire into wall outlet .
- 3. Place the pad in any convenient location.
- Just touch the pad to advance the light to the next position.
 1 st touch is 10% light,2 nd is 50%, the 3 rd touch is 100%
 Light and the 4 th touch is off .





INTRUCTION FOR TOUCH DIMMER

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to the equipment. Such modificatior coule void the user's authority to operate the equipment.

This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30MHz.

