**EUT – Cover off View** 




**EUT – Battery Removed off View** 




**EUT – Disassembled View** 




**EUT – Main Board with Shielded Cover Components View** 

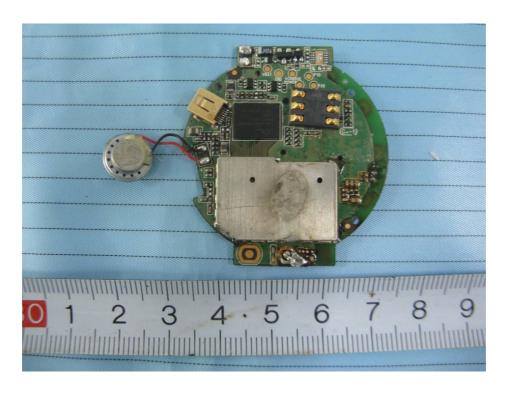


**EUT – Main Board without Shielded-Cover Components View** 

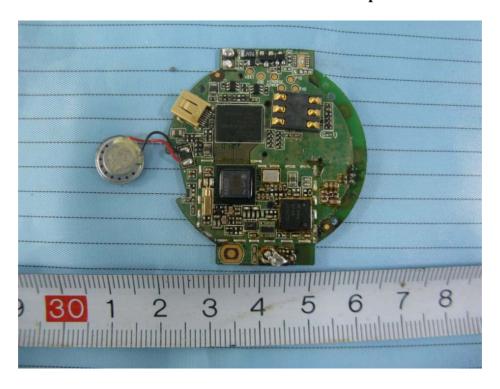

**EUT – Main Board Circuit View** 

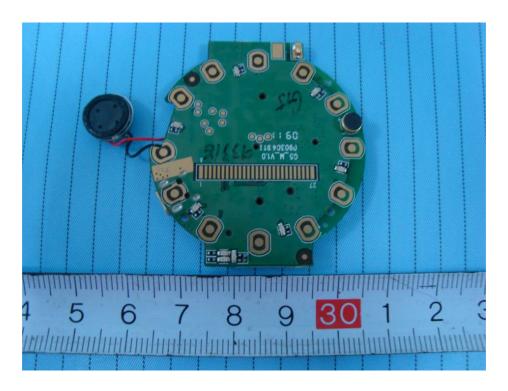

**EUT – Antenna LocationView** 

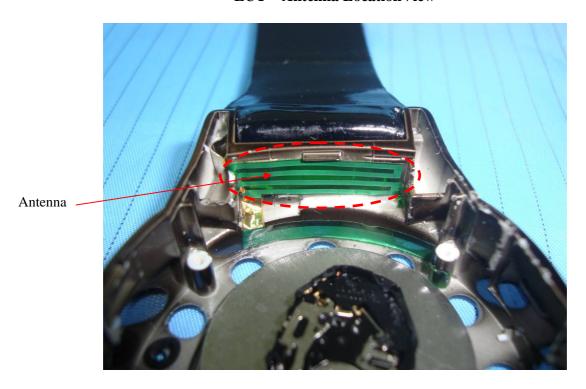

EUT – Antenna View



EUT – Battery View

