
OPERATING INSTRUCTIONS


BATTERY INFORMATION


The operation requires 4 x AA 1.5V alkaline batteries for car and 1 x 9V battery for transmitter.

- 1. Carefully remove items from package.
- 2. Unscrew the battery compartment cover on the car and insert 4 x AA batteries, please note the correct polarity (+/-).
- 3. Screw the battery compartment cover on the car.
- 4. Unscrew the battery compartment cover on the transmitter and insert 1 x 9V battery, please note the correct polarity (+/-).
- 5. Screw the battery compartment cover on the transmitter.


BATTERY DIAGRAM

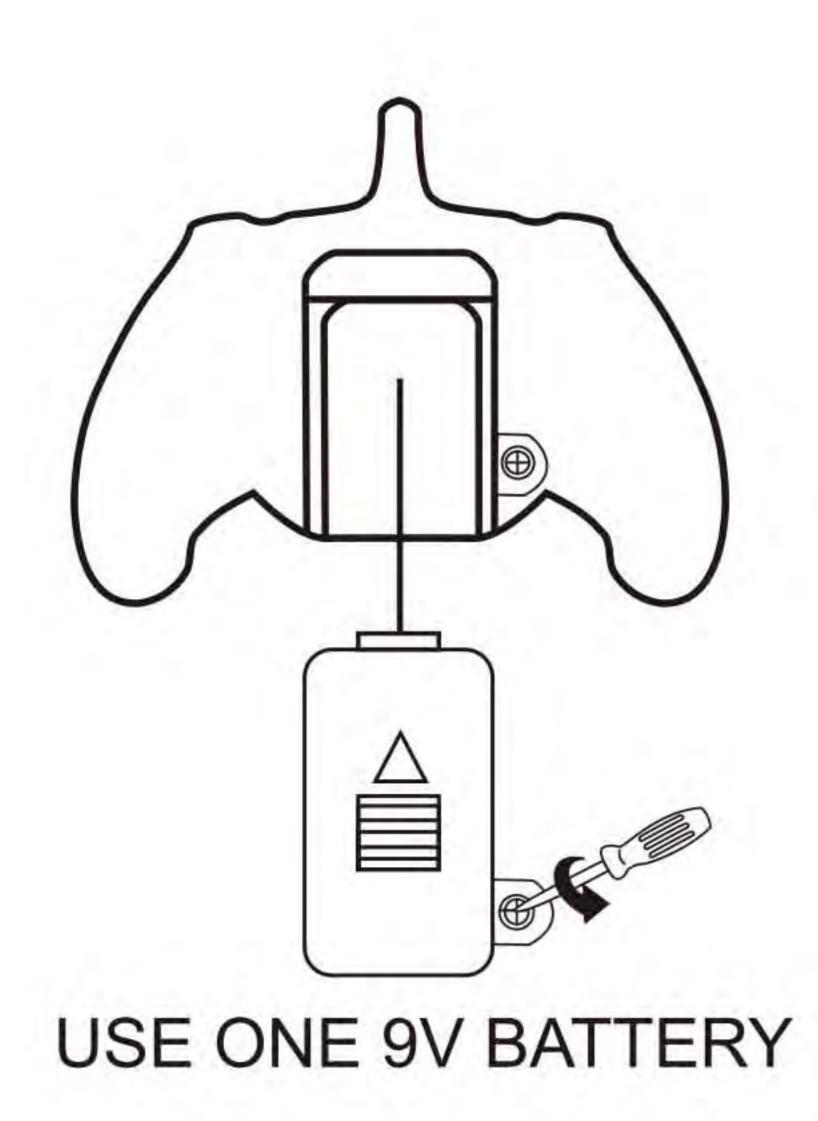

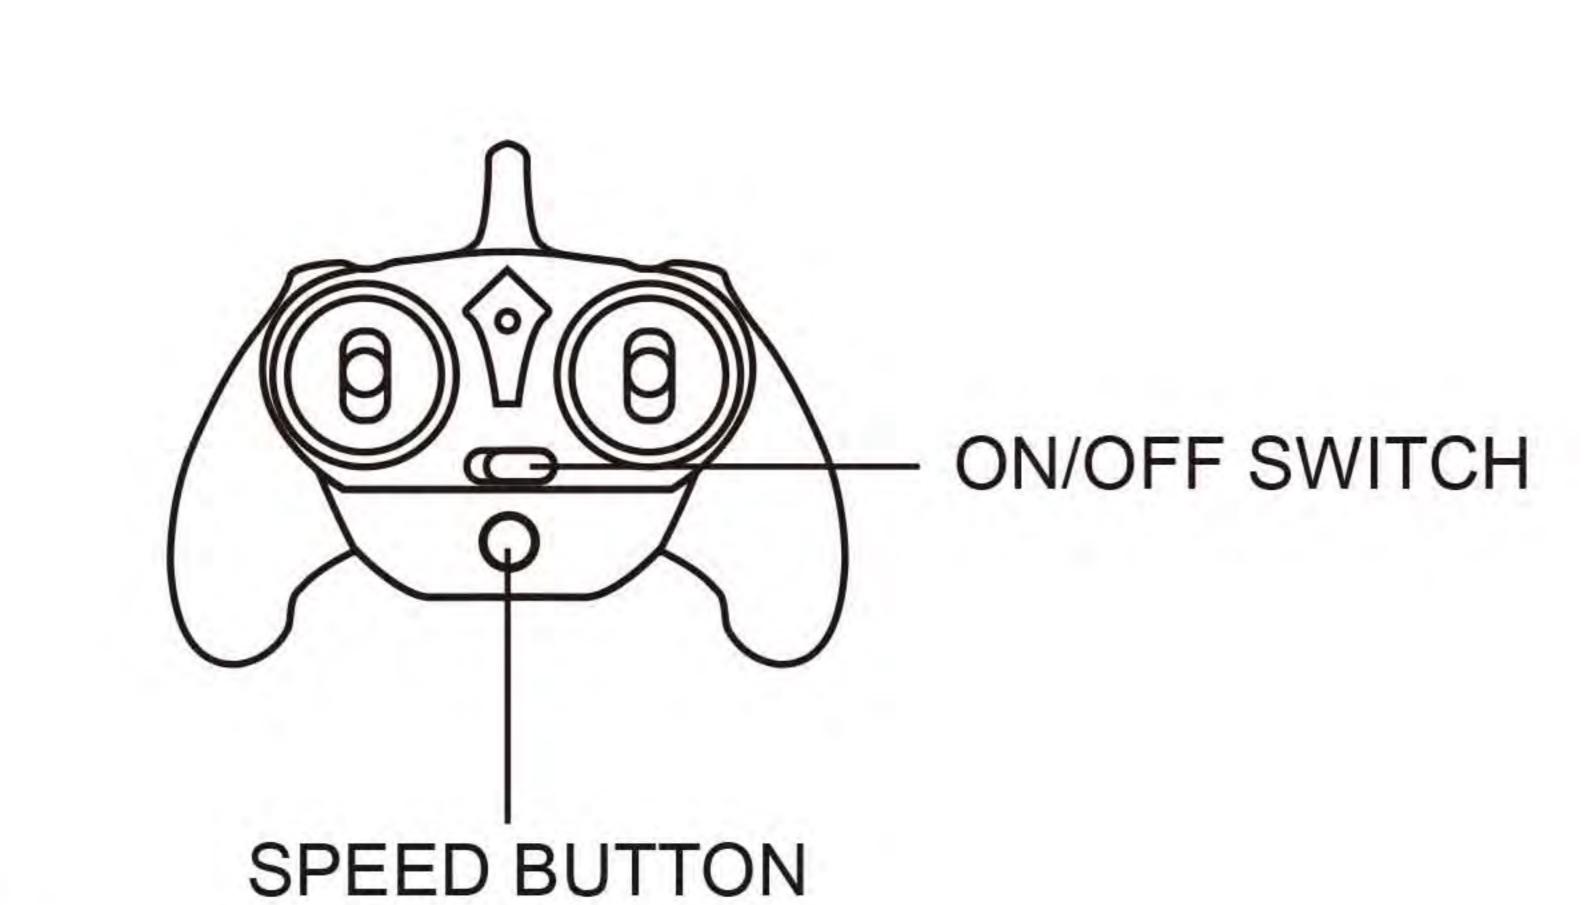


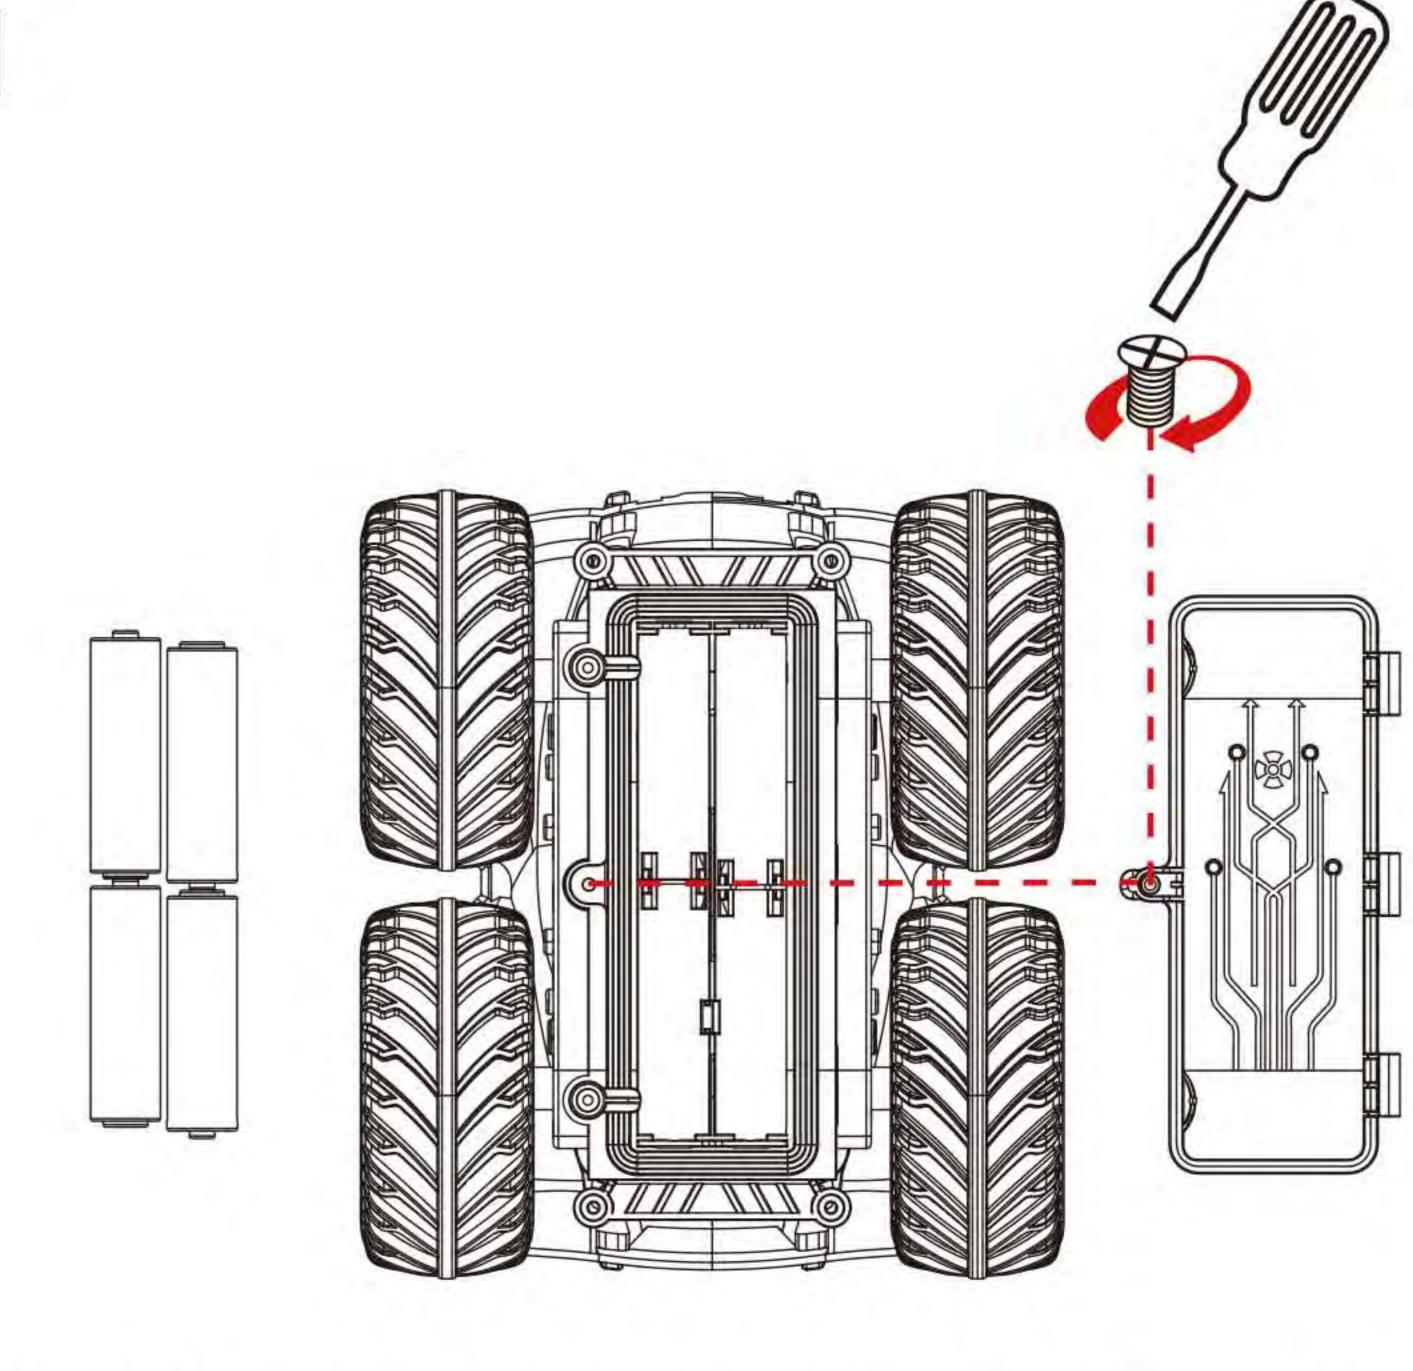



(RECOMMEND USING ALKALINE BATTERIES FOR BEST PERFORMANCE)

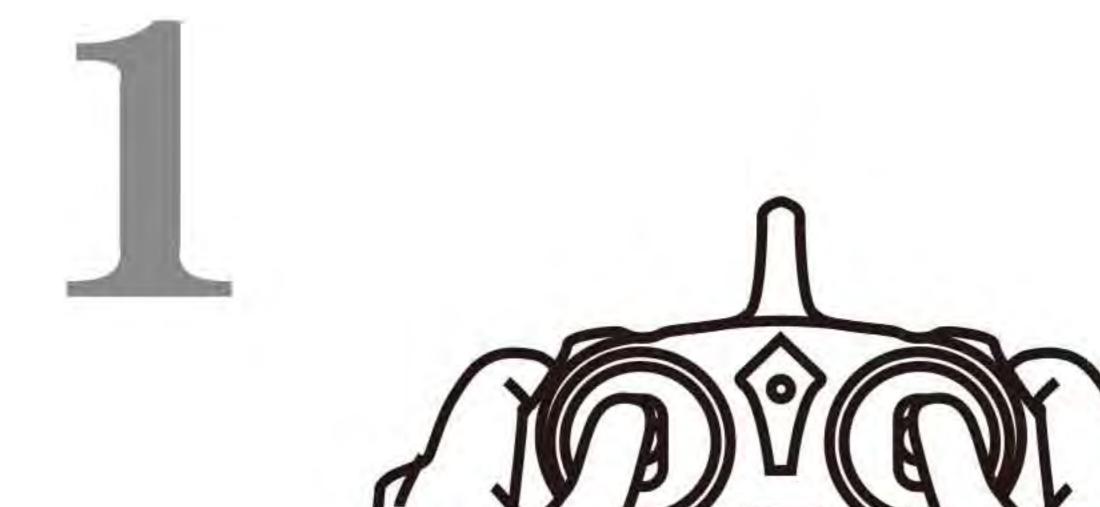




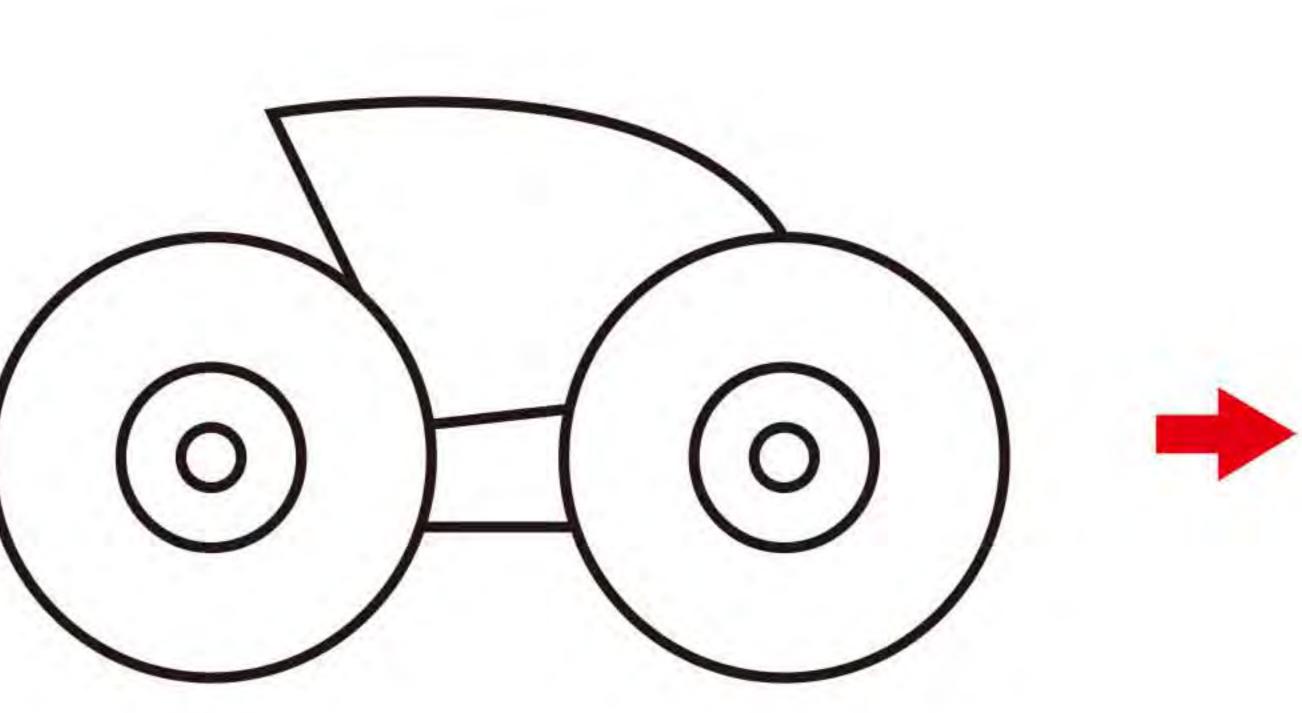


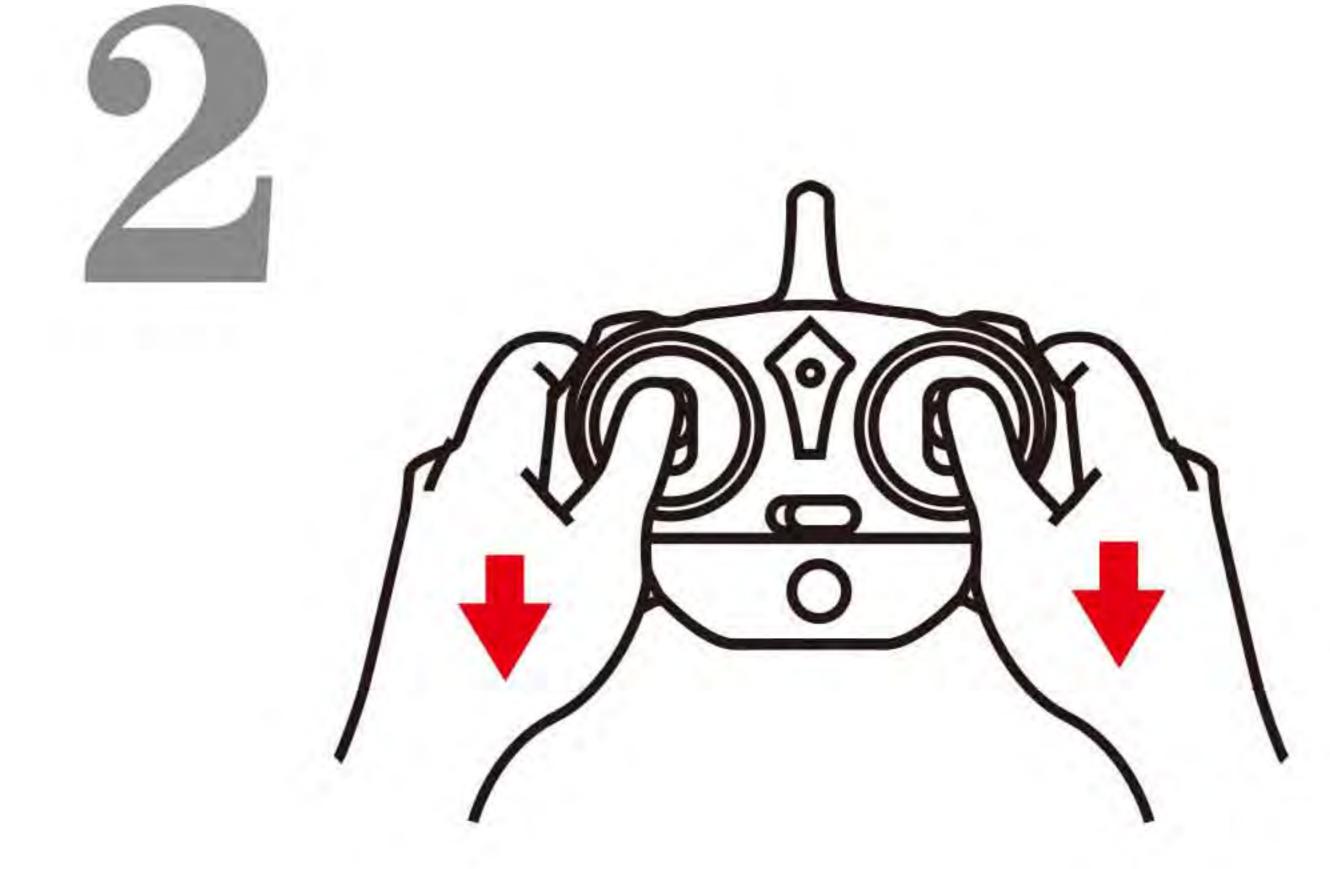


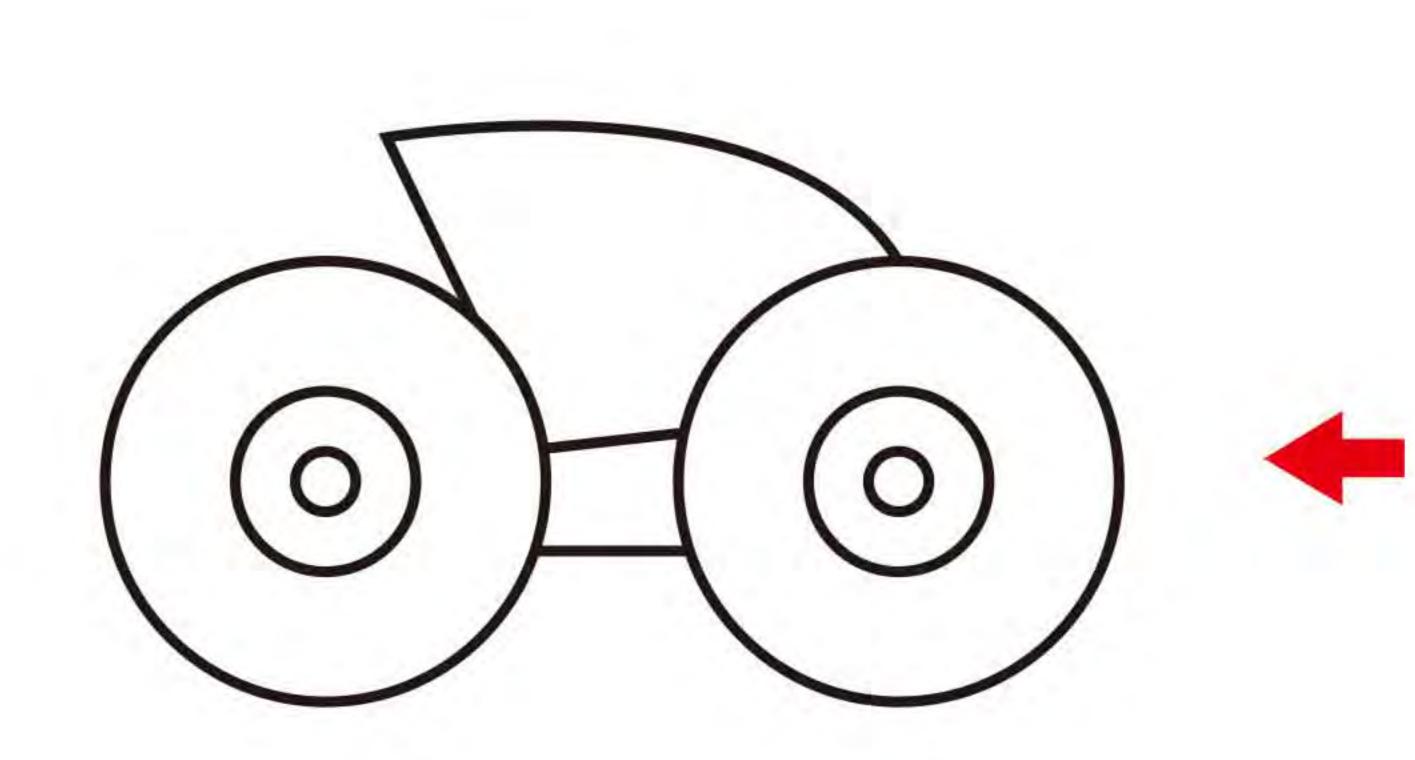


Function on water, press the speed button to a low speed: Push both joysticks forward: Forward; Pull both joysticks backward: Reverse.

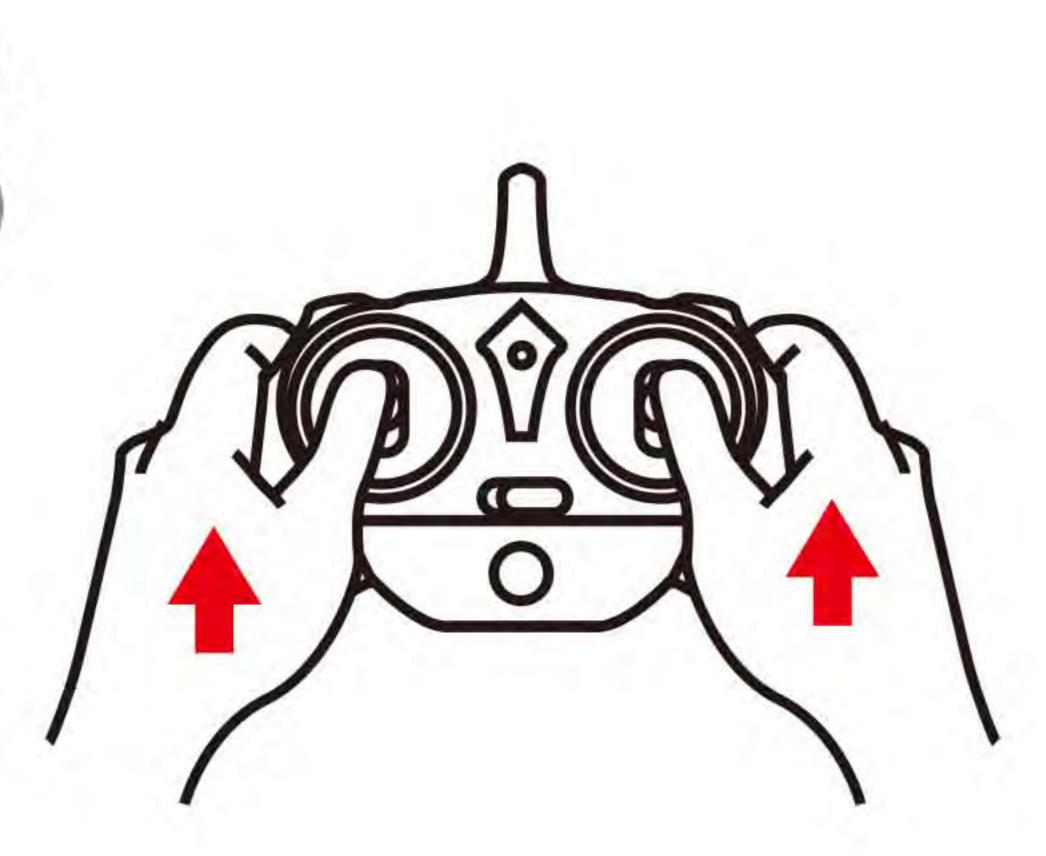

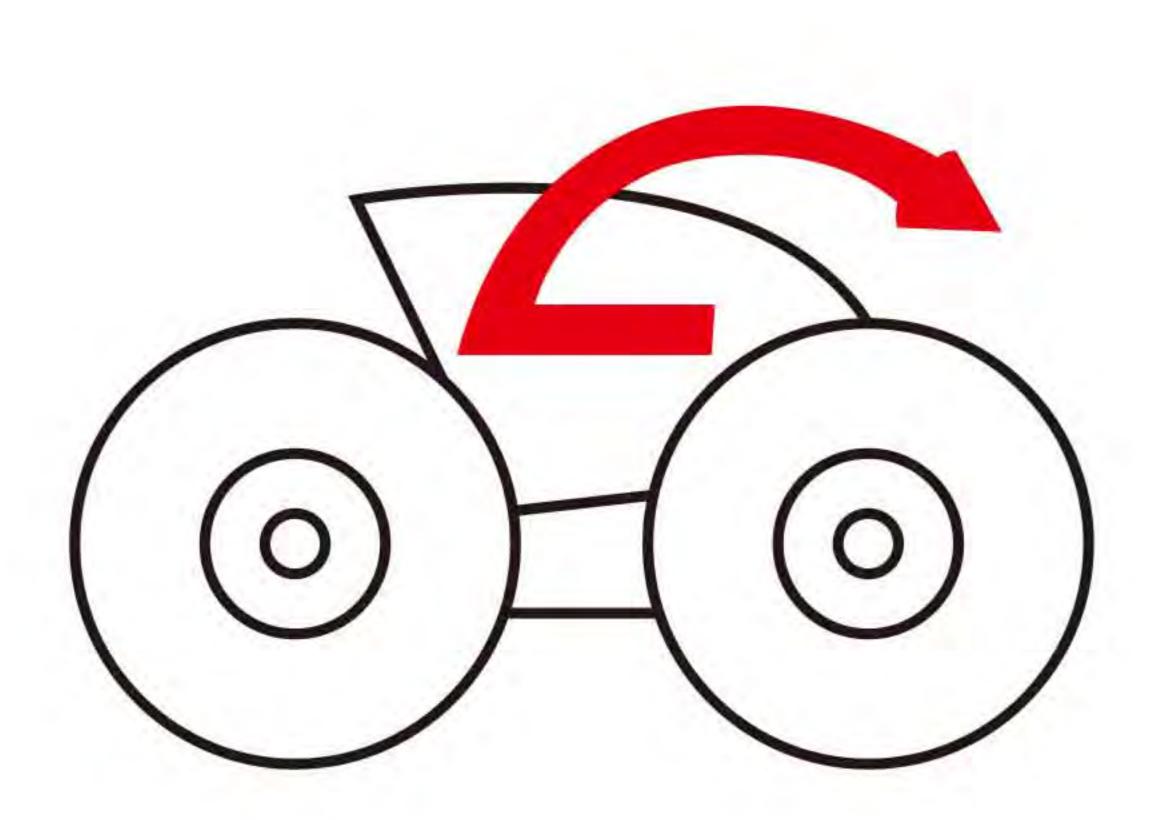


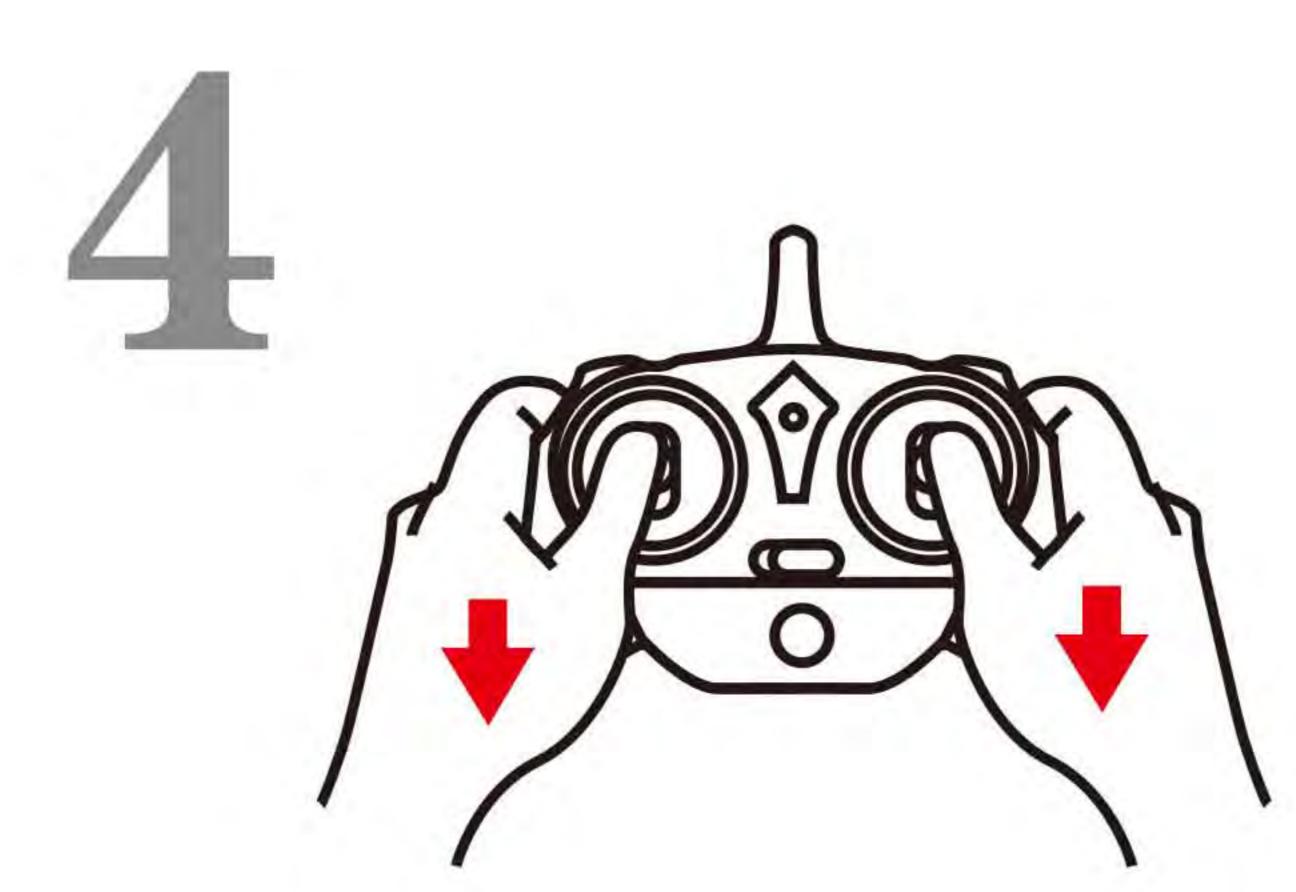


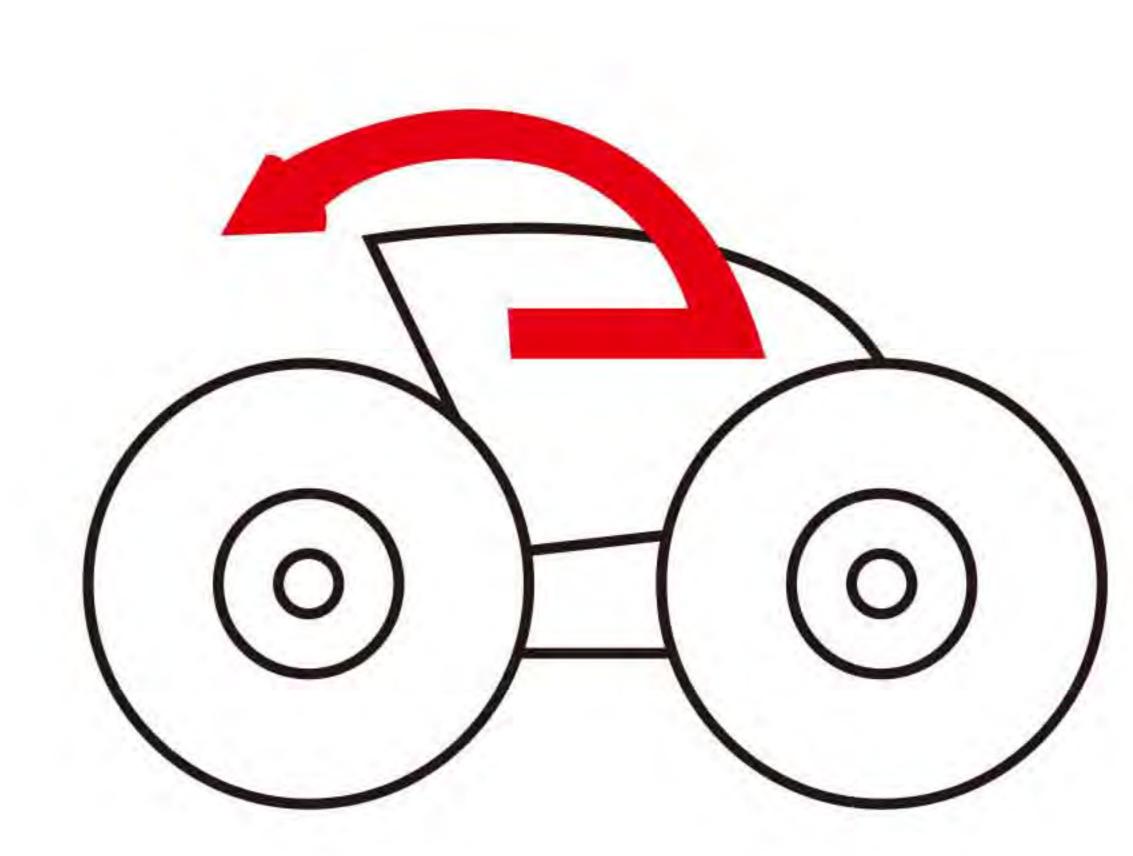



Function on water, press the speed button to a high speed:

Push both joysticks forward: Forward 360 flip; Pull both joysticks backward: Backward 360 flip.

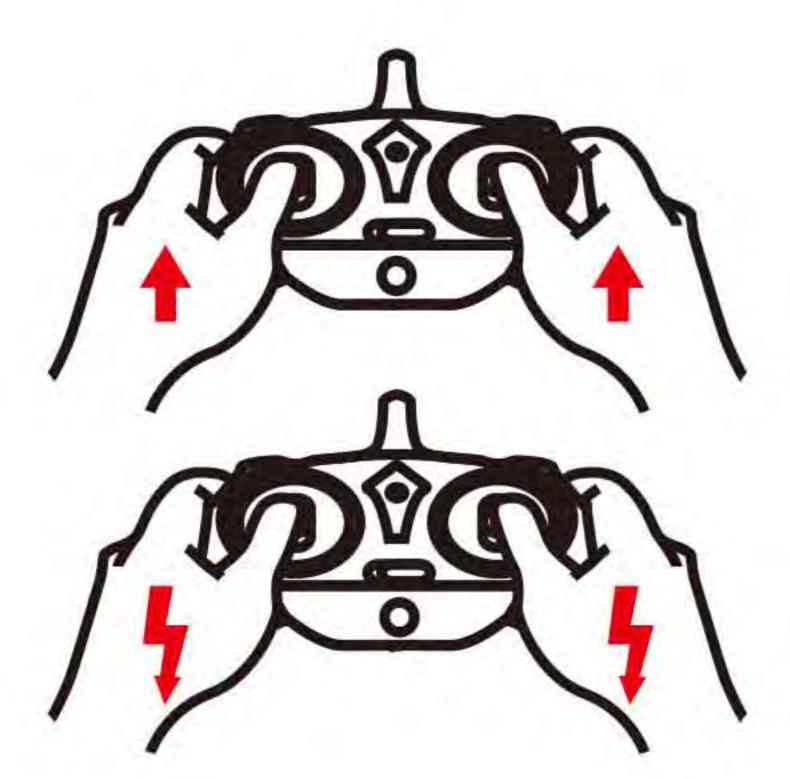

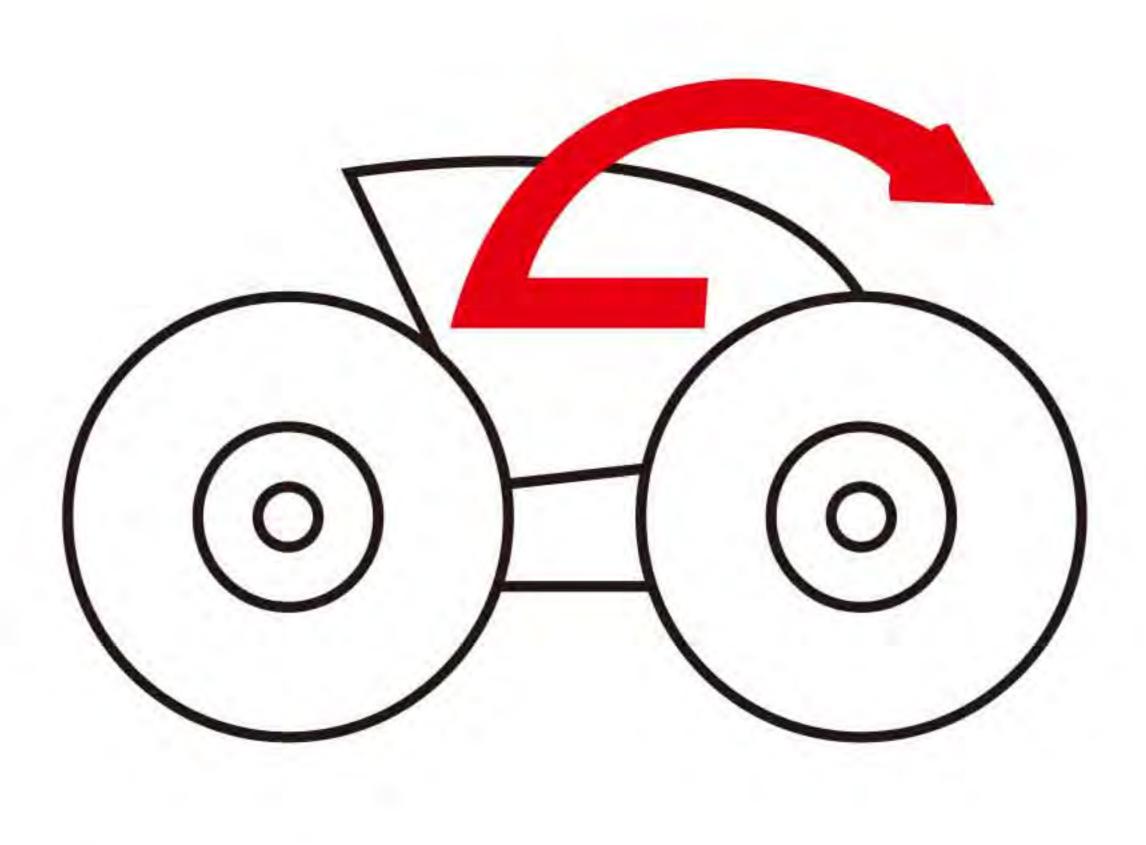


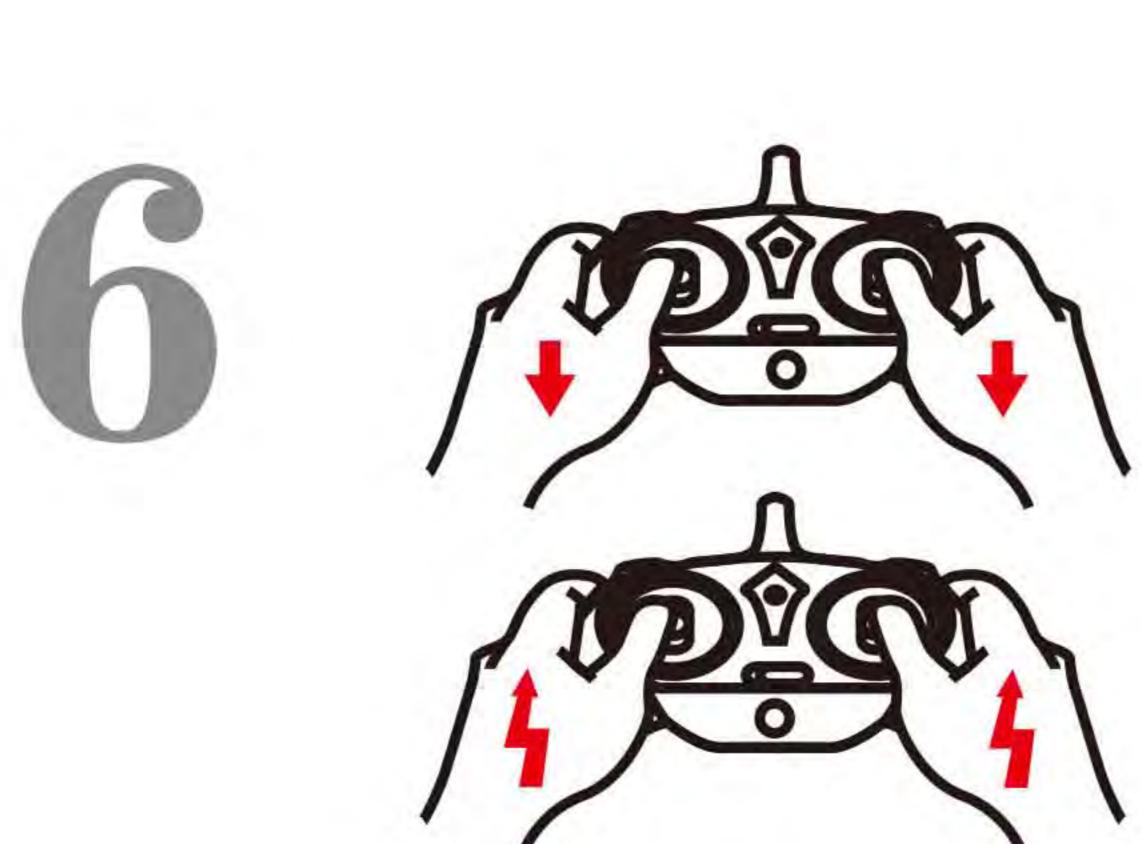


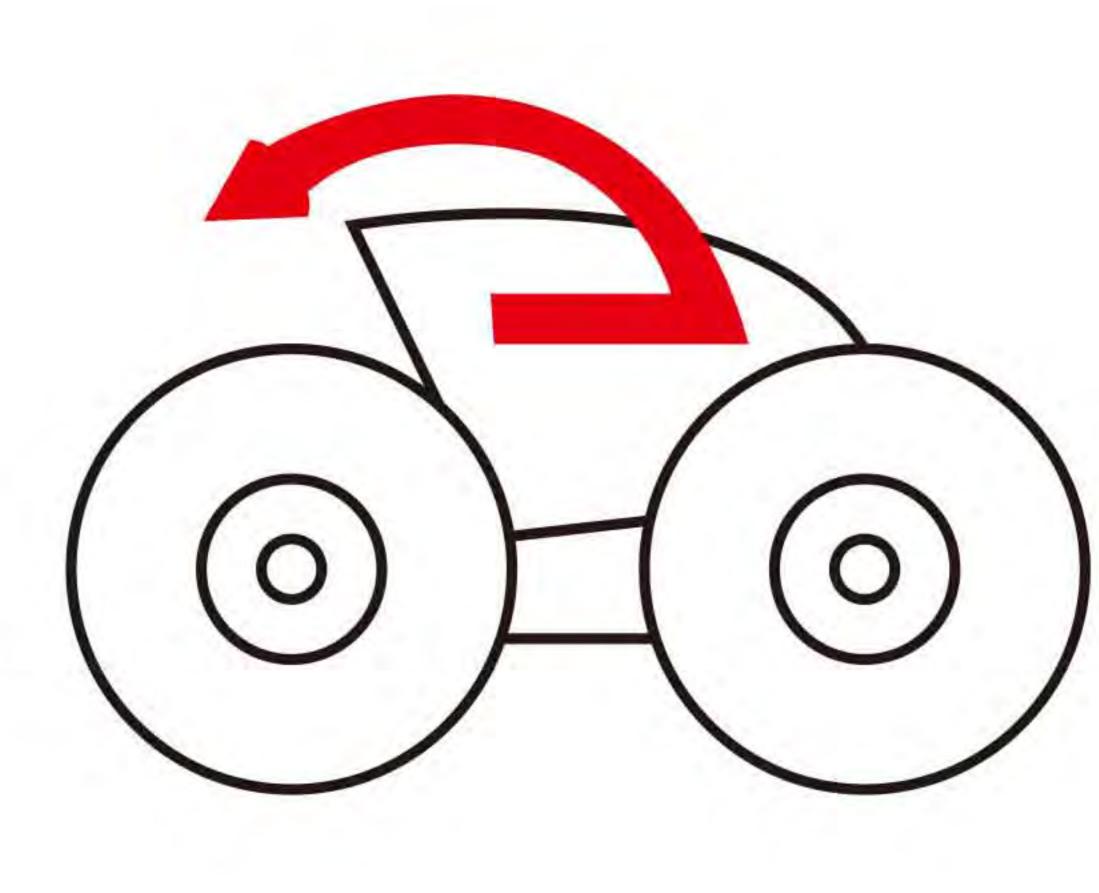



Function on land:

Push both joysticks forward and suddenly pull backward: Forward 360 flip; Pull both joysticks backward and suddenly push forward: Backward 360 flip.

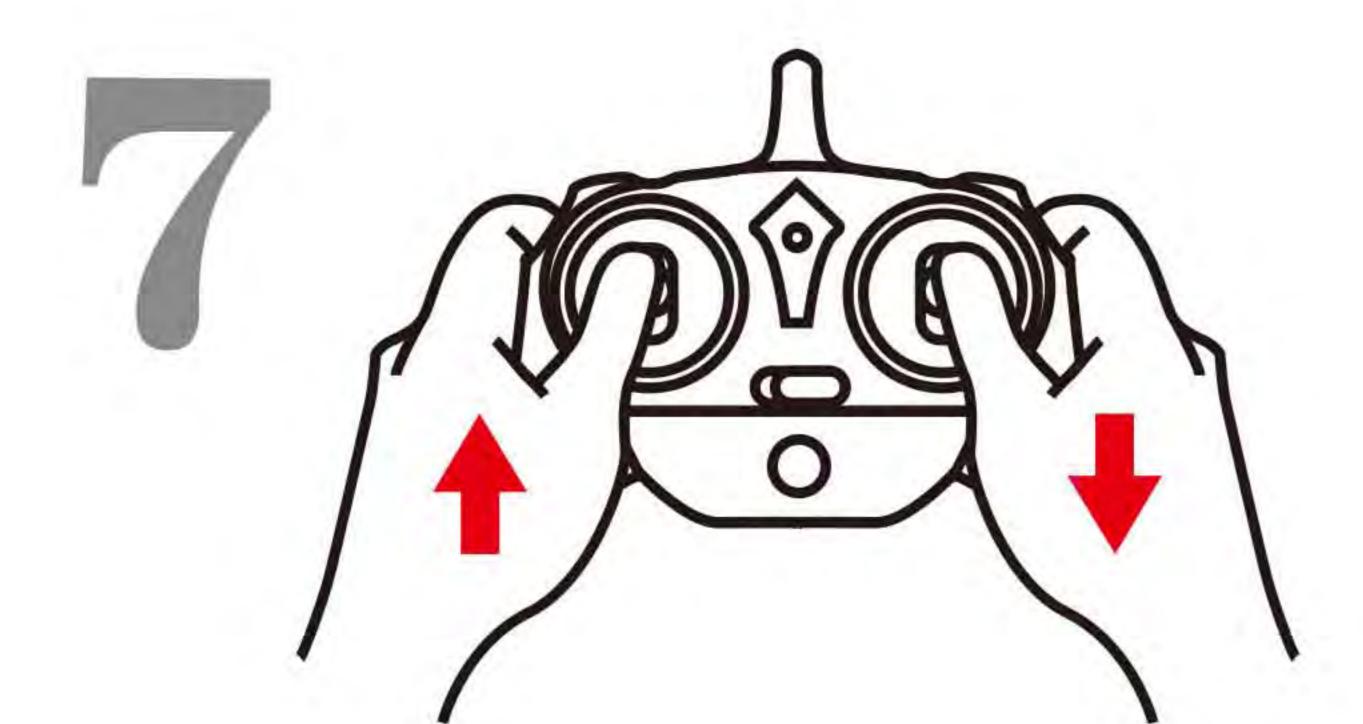

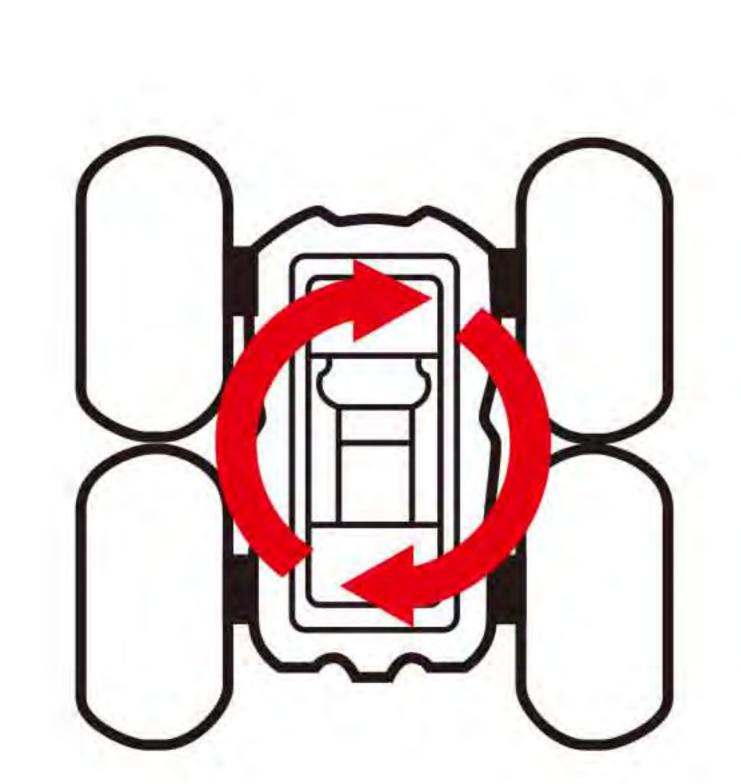

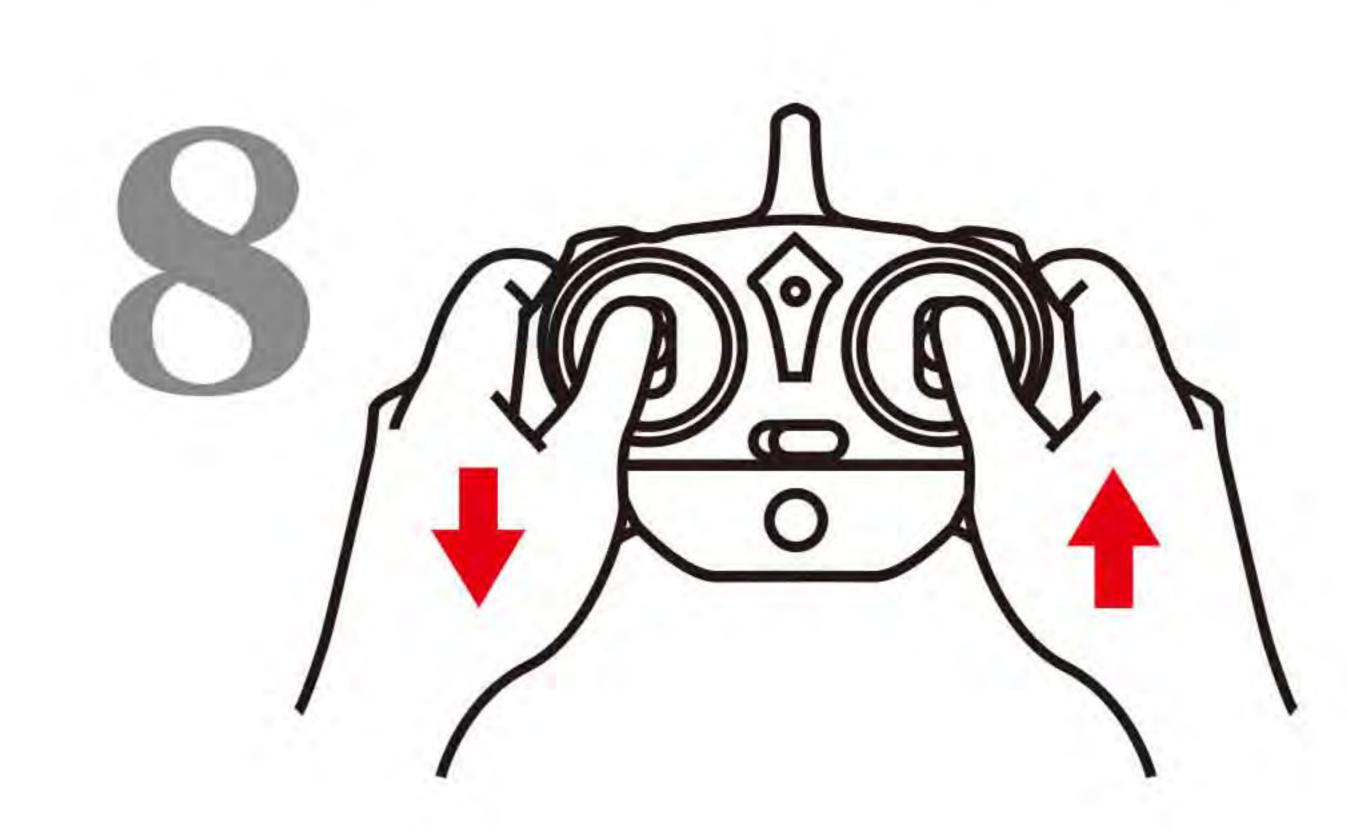

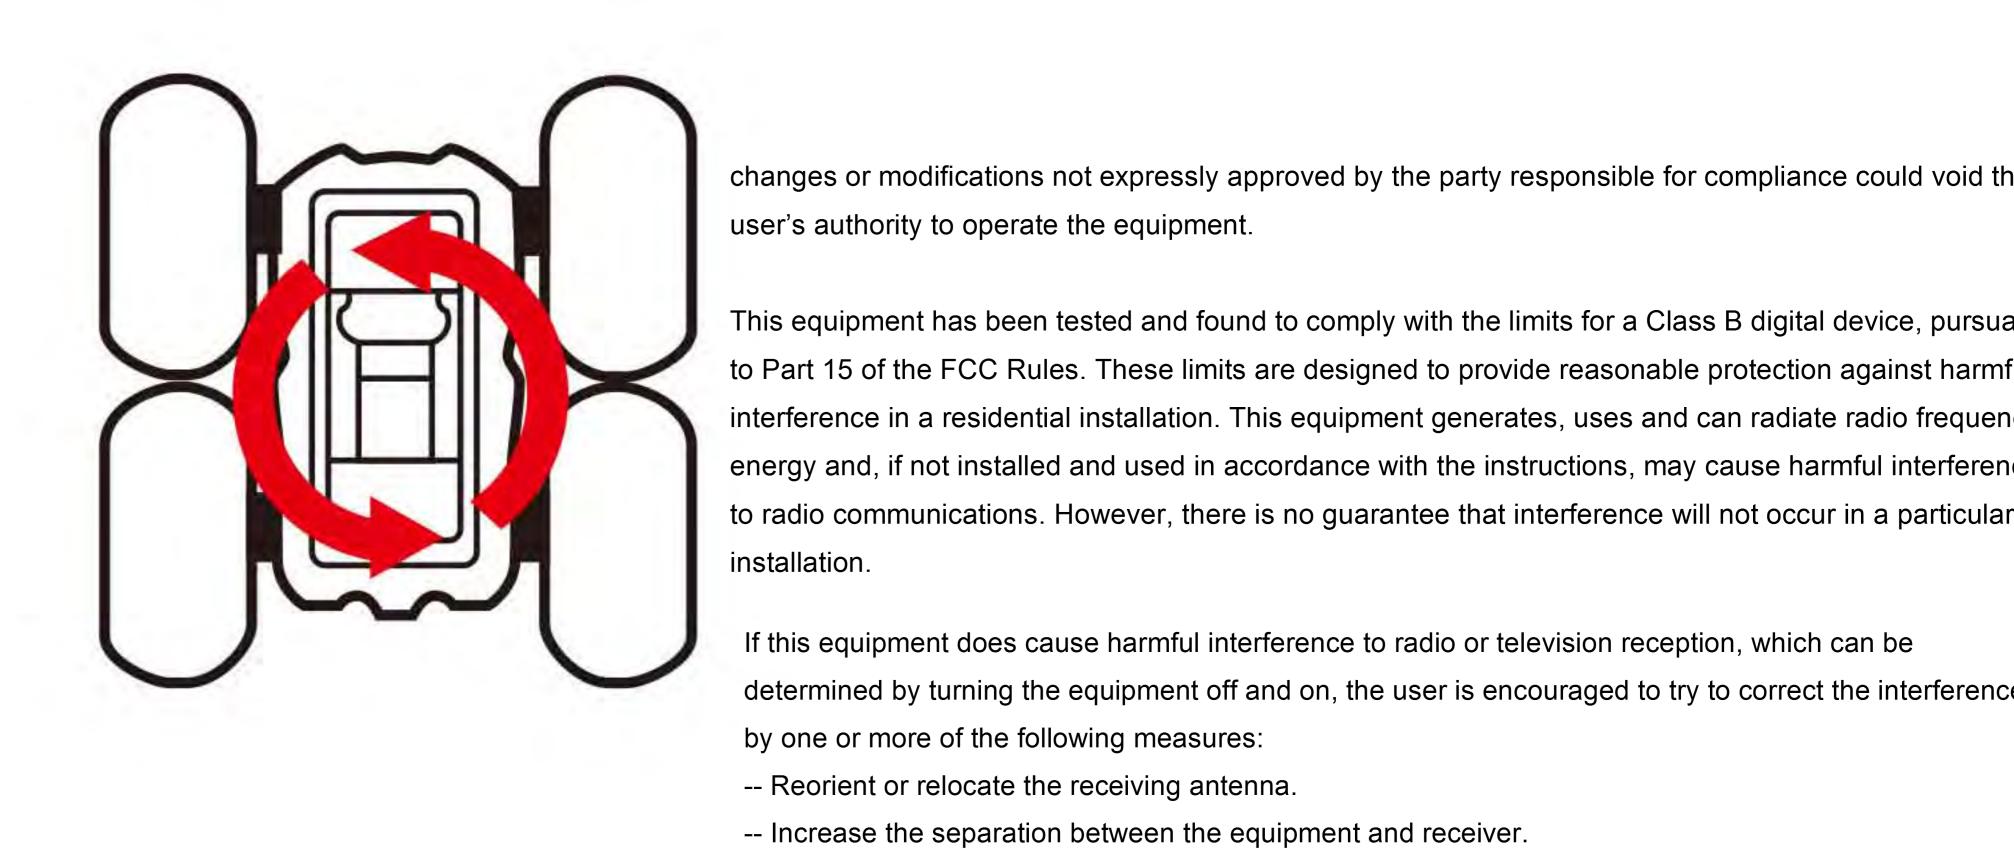

Consult the dealer or an experienced radio/TV technician for help.

Function on both land and water:
Direct both joysticks in opposite directions: Spin (clockwise / anticlockwise)

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SAFETY PRECAUTIONS

- For parents: please read the instructions with your children before using the product for the first time.
- Removed all packaging material before giving the product to a child.
- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accident operation.
- Never operate your car in a confined or crowed area and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
 Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not
- in use.
 Do not leave car or transmitter near sources of heat or under direct sunlight for
- a long periods of time.
 Do not leave car or transmitter outside overnight.
- Dampness is harmful to interior components.
- The toy must be operated in water only when fully assembled in accordance with the instructions. Do not immerse the vehicle in water unless the battery
- compartment is properly closed and locked.
 Wipe the toy gently with a clean cloth.
- wipe the toy gently with a clean cloth.
 Do not immerse the toy in water, as this could damage electronic components.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- the supply terminal.
 Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal. State or local laws.
- Do not dispose of batteries in a fire they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and /
- or adapter, if applicable, specifies by the manufacturer.

 Always use, replace and recharge (if applicable) batteries under
- adult supervision.
 Different types of batteries or new and used batteries are not to
- be mixed.
 Exhausted batteries are to be removed from the toy.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.