
Passage des câbles: Pour passer le câble, il peut être nécessaire de le déconnecter. Procéder selon les dessins suivants :

Retrait et mise en place du câble





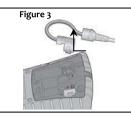



Pour retirer le câble :

- Appuyer sur la languette de verrouillage indiquée par la flèche figure 1,
- Tirer sur le connecteur figure 2,
- Dégager le passe fil en le glissant selon la flèche figure 3.

Pour mettre en place le câble procéder dans l'ordre inverse.

Passage du câble



Remarque: Prévoir une longueur de câble suffisante dans le socle afin de pouvoir retirer le terminal du socle et atteindre les connecteurs

Le câble série peut passer sous le socle pour rejoindre une ouverture. Soit dans le volume de la rainure 3, soit en face des ouvertures 1 ou 2. (cf. figure ci-contre)

Prévoir une ouverture de diamètre 18mm dans le bureau ou le présentoir pour le passage du connecteur plug coudé. (14mm si l'épaisseur du bureau ou du présentoir est inférieure à 4mm)

Particularité du câble Ethernet :



Passage du câble Découpage de la trappe

Le câble Ethernet est standard et n'est pas fourni. Il nécessite l'utilisation du socle. L'ouverture dans le bureau ou le présentoir doit être en regard du repère 2.

Prévoir une ouverture de diamètre 14 mm. Le terminal peut être monté avec ou sans trappe. Prévoir une ouverture de diamètre 14 mm dans le bureau ou le présentoir.



Si la trappe est montée, il faut la découper en (4) pour faire passer le câble Ethernet.

Sécurité de votre terminal

Dès réception de votre terminal, il est fortement recommandé de procéder à la vérification de l'état de votre équipement. Vous devait vérifier par exemple : que le clavier est bien en place, qu'aucun fils ne soit déconnectés des ports du terminal ou des périphériques, vérifier également le lecteur de carte à puce, ou toute autre partie de votre terminal. Ce contrôle permet de signaler toute modification inhabituelle sur votre équipement, et le comportement suspect d'autres personnes qui ont accès à votre terminal. Votre terminal détecte un Etat "trafiqués». Dans ce cas, votre terminal émet en clignotement le message «Alerte Irruption » et son utilisation ultérieure n'est pas possible. Si vous observez le message "Alert Irruption!", vous devez immédiatement contacter votre service d'assistance. Vous devez vous assurer que votre terminal est un accès à du personnel qualifié et digne de confiance. ATTENTION: Ne jamais demander au client de divulguer son Code PIN. Le client doit s'assurer qu'il ne soit pas espionné lors de la saisie de son PIN Code.



Fin de vie du produit



Le produit fait parti de la catégorie des équipements électriques et électroniques. A ce titre, il est soumis à la Directive DEEE qui impose la collecte et le recyclage des équipements en fin de vie. Les équipements Ingenico portent les indications exigées par la directive DEEE. Ainsi, ce symbole apposé sur le produit indique qu'il fait l'objet d'une collecte sélective et ne doit pas être éliminé avec les autres déchets ménagers ou commerciaux. Afin d'assurer que le produit soit collecté et recyclé dans le respect de l'environnement, vous devez contacter votre fournisseur qui vous donnera la marche à suivre (à défaut, adressez-vous au siège commercial Ingenico qui couvre votre zone locale en vous rendant sur le site internet www.ingenico.com, rubrique « contacteznous »). L'élimination incontrôlée des déchets peut porter préjudice à l'environnement et à la santé humaine. Ainsi, en recyclant de façon responsable votre produit, vous contribuez à la préservation des ressources naturelles et à la protection de la santé humaine.

ML30 installation manual



Safety instructions:

Lithium battery: ML30 equipment is equipped with a lithium battery that is non-accessible for the user. Only a qualified operator is authorized to open the unit and to replace this component.

VORSICHT: ML30 ist mit einer Lithium-Batterie, die nicht zugänglich ist für den Benutzer ausgestattet. Der Wiedereinbau der Batterien muß von qualifiziertem Personal bewirkt werden.


Beachten Sie die Polarität für die Batterie Lithium. Eine fehlerhafte Installation der Batterie kann eine Explosion führen. Entsorgen Sie die Batterien entsprechend den Anweisungen des Herstellers

CAUTION: For Switzerland, Annex 4.10 of SR 814.013 applies for batteries

Power supply network: For cutting the power supply to the ML30, disconnect the power adapter from the power supply network. You should provide a socket for the incoming power supply satisfying the following points:

- Socket installed near the equipment and easy to access;
- Socket meeting the standards and regulations in force in the country of use; For Pluggable Equipment Type A, the protection in the installation is assumed to be 20A.

Ethernet connection: the Ethernet link is for use indoor only. The link is a SELV circuit (Save Extra Low Voltage) according to standard EN60950.

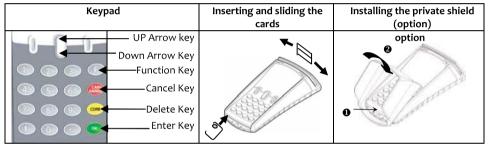

Physical characteristics:

Weight (without cable) Dimensions

Removable cable

Temperature

Maximum relative humidity Storage conditions: Temperature

Maximum relative humidity


Environ 240g 165 x 95 max. x 45mm (lxWxH)

+5°C to +40°C

85% RH at +55°C -20°C to +55°C 85% RH at +55°C

180mA at +12V, 280mA at +8V, 350mA at +5V

Fixing of the base Three screws can fix the base. Two choices are possible, the 3 holes (a)

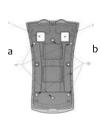


Operating conditions:

Maximum consumption:

or the 3 holes (b) indicated on the drawing opposite. The base can be used as gauges of pointing on the holes of the screws and for the openings of connectors.



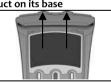

A notch situated on its front side and two clips on the backside maintains the terminal.

To install it on the base, first introduce the front side of the terminal and then, make a press on its backside until hearing the locking noise.

To remove it from the base, remove the two clips one after the other while pulling up the equipment

295008514AD

INGENICO – 192 avenue Charles de Gaulle – 92200 Neuilly sur Seine – France Tél. 33(0)1 46 25 82 00 - Fax 33 (0)1 47 72 56 95

9000001931 R11 000 04/1003

Copyright © 2010 Ingenico All rights reserved



Cabling: For cabling, it must be necessary to disconnect the cable from the terminal. Proceed as follow:

Dismounting and mounting the cable from the terminal








Press the locking device

Hang on the connector

Push on the feed through and dismount it

Installing the cable

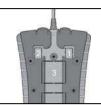

Note: Take care to have sufficient available length of cable in order to remove the terminal from its base and to unplug the connector.

The serial cable can go under the base to reach the opening.

Maybe by the way mentioned as (3), or right in front of the connectors mentioned as (1).

Make an 18 mm diameter hole in the base in order to have a path for the squared angle connector, (14mm diameter is sufficient in case of base thickness lower than 4 mm)

Ethernet cable particularity:

Preparing the back cable cover


The Ethernet cable is standard and not included.

Ethernet Cable

The use of Ethernet connection impose the use of the base.

The path is through a hole in the desk or the tray in front of (2).

The back casing can be mounted or not. The hole in the desk or the tray must be 14mm diameter

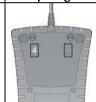

If the back cover is mounted, it must be opened with a knife or a screwdriver (area mentioned as 4) in order to have a path for the Ethernet cable.


FCC ID: XKB-ML30 - XKB-ML30CL


This equipment as been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interface in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on the user is encouraged to try to correct interface by one more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

CAUTION: The user is cautioned that any changes or modification not approved by INGENICO could void user's authority to operate the equipment

Security of your terminal

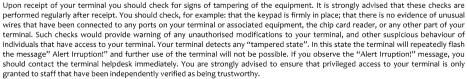

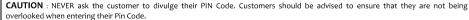



End-of-life The product belongs to the family of electrical and electronic equipment. Therefore, it is subjected to the WEEE directive which requires the collection and the recycling at the end of life product. The Ingenico products present the symbol for the marking of electrical and electronic equipment as required by the WEEE Directive. The crossed-out wheeled bin printed on the product gives the information about the requirement not to dispose of WEEE as unsorted municipal waste and to collect such WEEE separately. To assure that the product is collected and recycled with respect to the environment, you must contact your supplier (in defect, contact the ngenico local office or the commercial head office in charge of your country on www.ingenico.com, « contact us » page). The abandonment or uncontrolled disposal of waste can cause harm to environment and to human health. So, by recycling your product in a responsible manner, you contribute to the preservation of natural resources and to the protection of human health.





NOTICE D'INSTALLATION DU ML30



Consignes de sécurité :

Pile au lithium: ML30 est muni d'une pile au lithium qui n'est pas accessible à l'opérateur. Seule une personne informée et habilitée peut ouvrir l'appareil et intervenir sur ce composant.

Alimentation par le secteur (option): Pour mettre le ML30 hors tension, déconnecter le bloc alimentation du réseau électrique. Prévoir une prise d'arrivée du réseau d'alimentation électrique satisfaisant aux points suivants:

- Prise installée à proximité du matériel et aisément accessible :
- Prise répondant aux normes et réglementations en vigueur dans le pays d'utilisation ; Pour un équipement avec prise Type A, la protection de l'installation doit être fixée à 20A. Raccordement au réseau Ethernet : Le réseau Ethernet doit rester interne au bâtiment. Cette liaison est

un circuit TBTS (Très Basse Tension de Sécurité) au sens de la norme EN60950.

Description des touches		Sens d'introduction des cartes	Montage cache code
	 Flèche haut 	_	option
0 0	Flèche bas		
	Fonction		
4 6 6	— Abandon	1/200/	(1/10) No 33
(3) (3) (4)	Correction		(C) / 100 C
	— Validation	9	0

Caractéristiques physiques: Masse (sans câble)

Conditions d'exploitation:

Dimensions Température 165 x 95 max x 45mm (lxWxH)

Câble débrochable

+5°C à +40°C


Humidité relative maximum

85% RH à +55°C

Environ 240g

Conditions de stockage: Température Humidité relative maximum -20°C à +55°C 85% RH à +55°C

Consommation maximum: 180mA à +12V, 280 mA à +8V, 350 mA à +5V

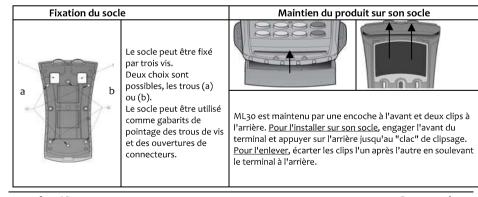

295008514AD

9000001931 R11 000 04/1003

INGENICO – 192 avenue Charles de Gaulle – 92200 Neuilly sur Seine – France Tél. 33(0)1 46 25 82 00 - Fax 33 (0)1 47 72 56 95

Copyright © 2010 Ingenico All rights reserved