Villa

Wireless Video Door Phone

User Manual





Contents

Introduction	3
Features	4
Information of all parts	5
Outdoor Camera	5
Indoor Monitor	6
Display show	8
Operation instructions	9
Installation instructions	11
Part of power adapter	13
Part of the battery	13

Specifications and parameters	14
Working Environment	15
Maintenance of devices	15
Matters need to be noticed	15
Failure diagnosis	16
Accessories	17
Technology support and service	18

【Remark】All the pictures and screen display shown in this manual are somewhat different from actual product for advanced version of our product and different production ,as a result , this manual is only for presentating the operation of our product in detail. Please take actual devices as standard product .

Introduction:

This product adopts 2.4GHz digital audio and video wireless transmission principle,outdoor unite takes pictures and indoor screen display , bilatarel intercom. The monitor has the remote unlock function and can monitor the outdoor situation at any time , the advanced infrared-assisted lighting features , so you can identify the night-visitors. With fashionable and fresh appearance , clear viewing, easy to install , adding one more scientific protection for your family , this is absolutely an ideal security product for modern families.

For better taking advantage of the prior functions please carefully read our instruction for correct installation and operation.

[Remark]: This manual is suit for the kit with one camera matching one monitor instead of one camera matching multiple monitors.

Features














- ① 2.4GHz lauch frequency , barrier-free remote control distance is between 120-180m;
- With micro-processing technology,autoremote control , excellent performance and high reliability;
- ③ The TFT 2.4" digital color LCD for_monitor;
- 4 CMOS 300,000 pixel for camera;
- © Clear night-viewing; 24 hours monitoring, calling, speaking and unlocking remote controlling etc;
- ⑥ One monitor can support 6 pcs of cameras at most,for further information,please contact the salesman;
- The mini USB data output for monitor built-in high capacity rechargeable Lithium battery;
- ®The monitor can take/save/view more than 200 pcs of photos automatically;

1. Outdoor camera

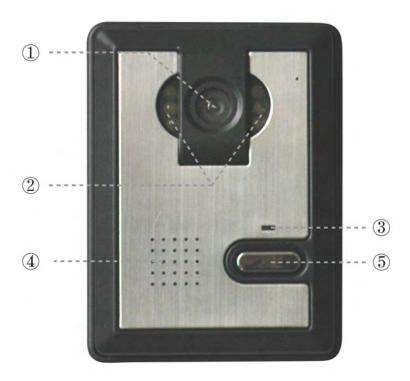


All parts and button instruction

- ① camera(getting images of visitor and outdoor)
- ② night-viewing light (identify the night-visitor)
- ③ The indicator light(outdoor camera with battery only,if the light is on

,it stands for charging but on the contrary it indicates charging is over)

- 4 Speaker(to hear the voice of the host indoor)
- ⑤ Call(call the indoor phone and auto start the camera)


2. Indoor monitor

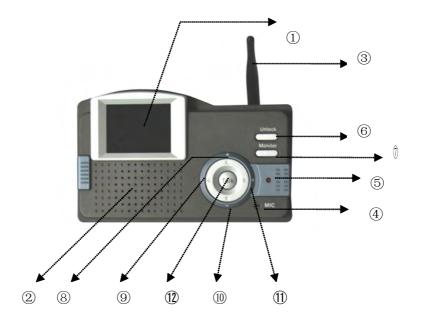

All parts and button instruction:

- ① TFT LCD display (to show the image of visitor)
- ② Speaker (to hear the Dingdong calling and the voice of the visitor)
- ③ Antanne(to transfer the signal of voice, unlock to the camera, at the same time receive the signal of voice, image and call from the camera)
- 4 Micro-phone(to convey the visitor's voice to the camera)

- ⑤ LED: the indicator light(if the light is on ,it stands for charging but on the contrary it indicates charging is over)
- 6 Unlock(to control the camera and release the E-lock)
- ⑦ Monitor: Monitor / view photos (to start monitor and monitor the outdoor circumstance / view the photos taken by the camera)
- ® Brightness+: (to enforce the brightness of images / photo up/ time+)
- Brightness-: (turn down the brightness of images/ photo down/ time-)
- ① Volume+: (turn on the volume /time-adjustment)
- 12 Talk: (talk to the outdoor unit)

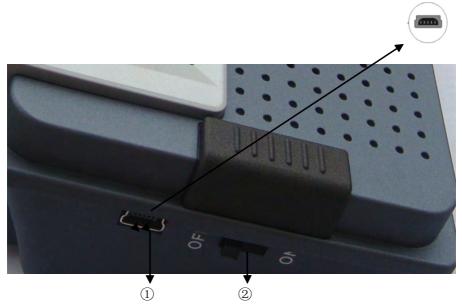

- ① Mini USB connector for charge;
- 2 power switch

3. Display show:

Wireless video intercom doorbell





1. Image of starting

Turn the power switch to ON and the screen diplay this image for 2 seconds , while speakers sounds "ding dong," indicates the machine started and enter the standby mode . When goes into standby state, the system automatically turn off the screen

2. The picture of time adjustment When it's standby, press left / right to enter time adjustment screen, press the left/right/ up/down key on the menu to adjust the time freely, it also shows the temperature ourdoor.

3. Image of volume adjustment
To adjust the brightness of screen
freely by the up/down key on the
menu while it's working!
adjusting range: 0-9



4. Image of volume adjusting
To adjust the volume by the left/right key on the menu while it's working.
adjusting range: 0-9

5. Image of intertalking

After the call from outdoor speaker press the Call button before they can talk with the outdoor unit, re-press the button to shut off the monitor screen. If there is call from the outdoor unit, the host only can hear the voice of outdoor speaker without Talk button, but the visitor cannot be conscious of the indoor momovement.

6. Image of unlocking

- ① When outdoor speaker calls , press Unlock button to release the door while intertalking,
- ②If there is no calling from outdoor speaker or when it is monitoring, it's useless to press the unlock.
- ③ If there is calling from the outdoor unit when monitoring, press the Unlock to release the E-lock while it's working.
- Specification: Voltage:12V Current: less than 1A Unlock Mode: plug-in unlock.

4. Operation instructions:

Please connect the E-lock with power as the manual instructed ,connect the power of the camera and turn on the monitor. Then press the Monitor for 1 second to turn on the outdoor monitoring image, adjust it to the best state by adjusting the brightness, the specific operation is as follows:

1) Operation of the doorphone

The visitor presses the call button of the camera ,the monitor will sounds and show the image of visitor .If the host answers , press the Talk to speak to the visitor, press the Unlock to release the door while intertalking, if the host doesn't press Talk ,he can hear the voice of the visitor ,however,the visitor cannot be conscious of the circumstances inside .Press the Unclock key to release the door ;if the host isn't in or doesn't go on with more operation after 30 seconds the monitor screen will shut off and save the image of outdoor automatically.

2) The operation of the monitor

If there is no calling from the camera,the user has to monitor the outdoor circumstance through the indoor monitor, pressing the Monitor button for 1 second to get into 24H monitoring .Press Talk to speak,press it again can start the E-lock , press Unlock to release the door and press Monitor to shut off the image screen.


3) Instruction for taking photos:

When it's standby, pressing Monitor for 3 seconds to turn up the photo mode; pressing Talk to take photos of outdoor, press 1 time for 1 photo, to look through all of the photos kept by up,down,left and right buttons. Press the monitor again to delete all of the photos and there

can keep 200 pcs pictures at most. One more press on Talk to exit the browse mode and going into active image mode ,then press the Monitor for 3 seconds can exit the photo mode.

5. Installation instructions

The monitor controls the camera to unlock as follow:

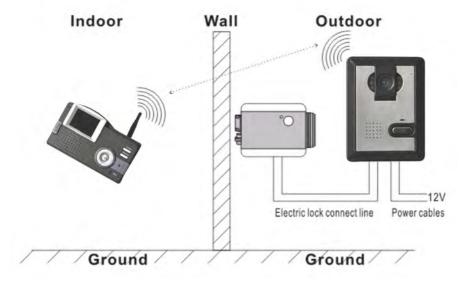

After pressing the Unlock key of the monitor, it transfers the singal of unlock to the camera in the way of wireless, and the E-lock will be opened(electronic lock connected with the camera by electronic cable)

The back of outdoor phone



Among them:

- (1) the Power Cathode terminal
- (2) the Negative power supply terminal
- (5) the Cathode terminal for E-lock
- (6) Negative power terminal for E-lock
- (7) The power switch of outdoor device

6. Part of power adapter

- ①The outdoor uint power supply: 12V/1A(DC transfomer)
- ②The indoor uint power supply: 5V/1A(DC transfomer)
- ③Please use the appointed or same specification (same rate voltage and current) power adaptor ,the nonspecified power adaptor may damage the circuits and components inside;

7. Part of the battery

- ①The monitor built-in high capacity rechargeable Lithium battery,the indoor unit should be placed in a well-ventilated, cool and place without direct sunlight;
- ②The battery is easily-consumed product with limited life, if repeatedly charging or discharging in working state will shorten its life;
- ③New product should be charged for 2-3 hours each time.

8. Specifications and parameters

Outdoor extension		Indoor extension	
Power Supply	Input:AC 100-240V 50/60Hz Output: DC 12V 1A	Power Supply	Input:AC 100-240V 50/60Hz Output: DC 5V 1A
Camera	CMOS 300,000 pixels	Screen specifications	2.4"TFT 320×240
Light Source	6 LED lights	Battery	3.7V 1200mAh Li-lon Battery
Power	Standby:0.2W	Power	Standby:0.1W
consumption	Unlock:12W	consumption	Work:2W
Modulation	GFSK	Modulation	GFSK
Frequency	2.4GHz	Frequency	2.4GHz
Transmitting power	17dBm	Transmitting power	17dBm
Channel numbe	64	Channel number	64
Size(mm)	125×93×33	Size(mm)	162×100×50
		Charging time	3 hours
		Standby time	6 days

9. working environment

- 1) Working temperature -25°C—+50°C
- 2 Working humidity range: less than 85%

10. Maintenance of devices

- ①Keep the clearance of the surface and use the soft dry cloth to clean the dust of the product,
- 2) Please turn off the power of indoor unit when clean the indoor device,
- ③If there is hard dirty which cannot be cleaned with dry cloth, please use the soft towel dipped in the neutral diluted detergent to clean the machine and then clean it with dry cloth,
- ④Do not use benzene, thinner or organic solvents such as gasoline to clean, these solvents may cause damage to the machine casing or the surface of the machine and change colors.

11. Matters need to be noticed

- ①The product should be placed where is stable, windy, air-dry, non-sunshine, non strong magnetic and non-dusty;
- ②Don't clean the surface with chemicals but with soft and clean dry cloth:
- ③Don't press several buttons at the same time;
- (4) The outdoor and indoor unit must be matched with appointed specified

- models and cannot match with others that are not our products.
- ⑤Do not disassemble the machine without authorization, if the need for fault repair, please contact the distributor or the company's technology department.

12. Failure diagnosis

Defec	Judgement	Operation
	If turn the switch to the "ON"?	Turn the switch to the ON
Unable to	If the power of Li-ion batteries is not	To charge the li-ion
start the	enough?	batteries
product	If connect the power adaptor?	To connect the power adaptor
	If the plug of power adaptor correctly	Re-connect the devices
Unable to	plug into the charging slot?	and power adaptor
charge	If the power adapter has been	Re-insert the plug so that
Charge	connected to the 110-240V AC?	power supply connected
		to AC power adapter
Speaking state no voice	If the volume is adjusted to be the least?	To adjust the volume to be suitable
The image	If the indoor device is close to TV set ,	Keep the devices off these
is flashing	fluorescent lamps , mobile phone ,	things which has
or noise	which has electronical and magnetic wave?	electronical and magnetic wave
The indoor	If the outdoor phone doesn't connect	To connect the outdoor
video	the power?	device power
phone	If the outdoor phone is far away from	Keep the distance within

shows no signal image	the indoor phone?	60 meters (with multi-wall barrier case)
	If there is other strong magnetic space bother?	Put the indoor device out of the strong magnetic space
	If there is unrecognized code for the time display?	Press the Unlock key for 5 seconds

13. Accessories

□ Indoor Monitor	1PCS	□ Outdoor Camera	1PCS	
□12V/1A Power	1PCS	□5V/1A Power	1PCS	
□Screw	4PCS	☐ Electric wire for E-lock	1PCS	
Domark The Eleck ign't the googgens				

FCC Part 15

This device complies with Part15 of the FCC Rules. Operation of this product is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver
- .•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Technical support and services

- ①We insist tracking service through foresale ,sale and postsale , please carefully read the user manual before installation;
- ②Please follow the user manual for correct installation and testing, if there is any doubt please call our tech-supporting and customer service center.
- 【 Remark 】 (1)Our company applies ourselves to reformation and innovation of our products . No extra informing for any change. The illustration shown here only used for reference , if there is any difference please take the actual product as standard product.
- (2) Our company reserves the final right of interpretation of the production, any problem of the quality, please feel free to return it to us! No company and individual has the right to tear up the label of this product without permission. Or you should be responsible for your action.