

Operational Description of the equipment


TX BOX

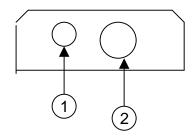




Number	Function
1	Audio input
2	Video input
3	Antenna connector
4	S1 RF status:,S2:system
5	Console interface
6	DC12V input

RX BOX

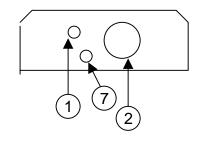



Number	Function
1	RF channel select(1-11)
2	Video output
3	Antenna connector
4	S1 RF status:,S2:system
5	Console interface
6	DC12V input
7	Audio output

Accessories:1ch/4ch

a.Power adapter:DC12V/1A *1pcs

b.2.4GHz antenna *1pcs

c.Audio line *1pcs

- 1. Connect antenna to TX box and RX box.
- 2..Connect RX box video output and Audio output to the Video monitor or DVR and power on..
- 3. Connect standard CCD camera or other input to TX box and power on.
- 4. TX box and RX box will be automatic connection.