# **Micro Rig Fueler Remote Control Vehicle**


User Guide




SAVE THESE INSTRUCTIONS.
READ COMPLETE INSTRUCTIONS BEFORE USE.

#XC6373 © 2011 EB Excalibur, Inc.

XC6373IS01EXC 5 x 7 6/27/11 XC6373IS01EXC indd 1 7/22/11 10:31 AM ongratulations on your new EXRC™ purchase! EXRC™ trucks dominate the road with maximum power. Now that you're an honorary EXRC™ trucker, we recommend reading through this manual thoroughly before attempting your haul. Inside this manual you will find driving control tips, safety precautions and care instructions to keep your EXRC™ vehicle in tip-top shape. Follow the instructions, and use your EXRC™ truck to cruise the open road. Put it in drive, and enjoy the ride!

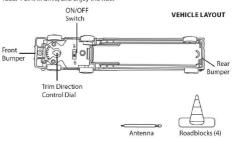

## CONTROLLER LAYOUT



XC6373IS01EXC.indd 2

7/22/11 10:31 AM

This product requires the following batteries (not included):

2 AA batteries - Remote 1 AA battery - Ve 1 AA battery - Vehicle

Using a Phillips head screwdriver, remove the screw from the battery compartment cover on the controller. Insert the batteries, making sure to follow the polarity (+ and -) marked on the product. Replace the battery compartment cover and secure in place with the screw.







## Vehicle:

Vehicle:
Using a Phillips head screwdriver, remove the screw securing the battery compartment cover on the vehicle. Push down on the compartment cover and lift up. Insert the battery, making sure to follow the polarity (+ and -) marked on the product. Flip the battery cover down and secure in with the screw.

TRIMMING VEHICLE

If you notice your vehicle drifting to the left or right when you try to drive in a straight line, adjust the Trim Direction Control dial located on the bottom of the car by moving it left or right.



- POWER Slide the ON/OFF switch on the bottom of the vehicle to ON.
  FORWARD/BACK Push the left controller joystick forward to move the car forward. Push the left joystick back to move the car backwards.

  LEFT/RIGHT Push the right controller joystick control the right/left direction of the vehicle.

  RANGE The maximum operational distance is a radius of approximately 25 feet.

- ranuc I ne maximum operational distance a radius of approximately 25 feet.

  ROADBLOCKS Use a screwdriver to remove the screws from the bottom of the box and release the vehicle. Press in the direction of the arrow to release the roadblocks.





WARNING

HOKING HAZARD - Small Parts.

Not for children under 3 years.

www.EBExcalibur.com



service@ebexcalibur.com
Distributed in the United Kingdom by:
EB Brands UK, Worcester WR4 9FA
Actual product may differ slightly from photography.

XC6373|S01EXC