# A13G

3.75G HSUPA USB Adapter

# **User Manual**

#### Index

3.75G HSUPA USB Adapter Introduction	3
Connection	8
SMS service	9
Contacts	12
USSD	14
Statistics	16
OPTIONs	17
Help &About	20
FAQs	21

#### R 75G HSUPA USB ADAPTER INTRODUCTION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. The SAR limit set by FCC is 1.6W/kg. The highest SAR value for the device is 1.042W/kg.

While there may be differences between the SAR levels of various devices, they all meet the government requirement. SAR information on the device is file with the FCC and can be found under Display Grant section of <a href="http://www.fcc.gov/oet/fccid">http://www.fcc.gov/oet/fccid</a> after searching FCC ID: XYOA13G

This device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 5.0 cm from the body.

1. There are 4 shortcuts on the desktop after installation as below.

VIVO INTERNET Shortcut	Vivo Play Shortcut	Nuvem de Livros Shortcut	Seguranca Online Shortcut
VIVO	Vivo Play	Nuvem de	Seguranca
INTERNET		Livros	Online

Note: All the shortcuts will be removed after uninstallation.

- 2. To launch the Network Connect, double-click the shortcut icon on the desktop. It should be noted that:
- If the PIN code enabled, enter the correct one, then click OK.
   The (U)SIM will be locked after three retries of incorrect PIN code inputting;
- Enter the correct PUK to retrieve the default PIN code. After ten retries of incorrect PUK code inputting, please contact with your service provider;
- With the wrong PIN and PUK, all the network services are unavailable.

#### 3. Main interface introduction



: Access to Text Message

: Access to Contacts/Phonebook interface

: Access to USSD

: Access to check usage Statistics

: Set parameters options

#### 4. Status information

Status	Description
New message	New message(s) arrived.
Message full	Messag alert will be displayed when message full

No device	Indicates that system cannot find the device.
Initializing	Indicates that the device is in the process of initializing.
Searching	The device is searching for the network.
No service	No suitable network.
No(U)SIM	(U)SIM card not inserted or the device cannot
Invalid(U)SIM	The (U) SIM is out of service.
Network signal	Indicate the signal strength of thenetwork.
Network type	GSM/GPRS, 3G UMTS.
Connection	disconnected Connect to internet
Data service	EDGE available

#### 5. LED Indicator description

Color	Status	Description
Green	Solid	Initializing
	Blinking	Idle mode
		1.5s on, 1.5s off
	Blinking	Transmitting
		0.5s on, 0.5s off
Red	Blinking	1s on, 1s off, NO USIM Card
	Solid	No signal/No Service

# CONNECTION



to enter Connection interface.

- Connecting with the default connection profile
  - Click Connect to set up the connection;
- Disconnect from the internet

Disconnect to disconnect the internet connection. Click

### SMS SERVICE

Click

to enter SMS (Short Message Service) service interface.

1. Creating and sending a message.

Click New :

- Input the recipient number by one of the following options:
  - Enter the number directly;
  - Press to choose the recipient number from the phonebook and add to the sending list, then click Add .
- Enter the message content;
- Click send the sent message will be saved in the
   Outbox
- Click Save . The message will be saved in the Prafts .

#### Note:

- You can group send a message at most 50 recipients;
- Each number should be separated by ";";

The message can expand 1,530 characters at most.

#### 2. Inbox

 The following prompt box will be displayed at the right corner of your PC when received a new message;



- Reply: Access the edit interface, write the content, click

  send or Save to Drafts;
- Forward the selected message;
- Delete the selected message.

#### Note:

- The new message will be saved in PC in default
- You can use "Shift" or "Ctrl" to selected several messages;

#### 3. Outbox

The message in the 👊 Outbox can be deleted or forwarded.

- 4. Drafts
  - Click the selected message;
  - Confirm the recipient and the content, and click
     or Save to Drafts .
- 5. The selected SMS can be operated as follows:
  - Delete text message: To delete the selected message.
  - Move to:

To move the selected messages to Outbox or Draft.

• Copy to:

To copy the selected messages to Outbox or Draft.

- SMS Export
  - Right-click the selected the message;
  - Click Export;
  - Specify the path and the file name, and click *Save*.

Note: The exported message will be saved as a \*.csv file.

#### 6. Setting

Message setting menu is used to setup service center, store location and delivery reports

#### • Store Space:

There are two device modes: My computer and Data card

#### • Service Center:

Contact with your service provider to get the correct parameters

#### Delivery reports

When the receiver receive the message, the successful message can be sent to sender

#### CONTACTS

to enter Contacts interface.

- 1. New
  - Click New ;
  - Enter the Name and Mobile, and save it in the (U)SIM
- Finding a contact
  - Click Find ;
  - Enter the key characters of you want to find in the editor
  - The result will be displayed in turn.
- Viewing a contact
  - Click My computer or Data card to display the contacts interface;
  - Select a contact, then you can operate as follows:
    - Edit: Modify the selected contact;

- Delete: Delete the selected contact;
- Send SMS: Send a message to the selected contact;
- Copy to: Copy the contact between Data card and

Note: The deleted contact information cannot be retrieved.

#### 4. Import

- Right-click the mouse;
- Click Import;
- Select the \*.VCard or \*.CSV file and click *Open*;
- The import file will be saved in the current interface.

#### 5. Export

- Right-click the selected contact;
- Click Export;
- You can saved the contact file as \*.VCard or \*.CSV file;
- Confirm the name and the path the file saved, then click



You can add,edit,delete, and send USSD operation. The result of sending will display on the edit box.

#### 1. New

- Click < Add > button to access the USSD Command editor;
- Enter the relevant information, and press < 5000 >; the new USSD Command will appear in the current command list.

#### 2. Edit

- Select a command which can be modified and access the command editor by clicking < but button;</p>
- Modify the relevant command information, and select < 500 > to save the changes.

#### 3. Delete

Select a command which can be modified by clicking < Delete > button;

#### 4. Send

Input the USSD command and click <</p>


>button to send USSD command.

Click



to enter Statistic interface.

You can get the statistics of daily/monthly/yearly report on downloading/uploading, and current transfer statistics

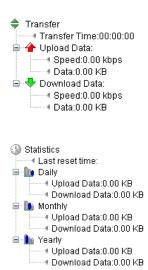

### OPTIONS

Click

to enter options interface.

#### 1. Profile

- Create a Profile
  - Click New ;
  - Enter the correct profile parameters and click
- Edit a Profile
  - Choose a profile name and click Edit ;
  - Modify the profile parameters and click Save ...
- Delete a Profile
  - Choose a profile name and click Delete;
  - Press ok to confirm or press cancel to quit.

#### 2. Modem

Data Mode

- You can choose Automatic or Only UMTS/HSPA or Only GPRS/EDGE. The device will register network after pressing
- The default mode is **Automatic**.
- 3. Registration Mode
  - Automatic: set as default value;
  - Manual: Press to list all available networks; select an available network and click Registration, and then the device will try to register.
- 4. Diagnostic

You can view the diagnostic information on the  $\mbox{\sc VIVO}$  INTERNET

- 5. PIN Management
  - Enable PIN
    - Click Enabled ;
    - Enter the correct PIN code and click Apply.

Note: The PIN code should be a numeric string of 4-8 digits.

- Disable PIN
  - Click ODisabled ;
  - Enter the correct PIN code and click Apply.
- Modify PIN
  - Click *Modify PIN*;
  - Enter the old PIN code and new PIN code, confirm the new PIN code and click Apply.
- 6. Music
  - You can active the Incoming Call ringtone, and also can set your favorite tone in the PC.
  - You can active the Connection/Disconnection Ringtone;
- 7. Connection
  - You can active the Automatic connection. The device will connect to network automatically.
- 8. SIM Tool Kit
  - Select the required STK function and click **Select**.

# HELP &ABOUT

- Online Help: To open the User Manual
- FAQ: Frequently Asked Question
- $\bullet \qquad \hbox{About: To get the information of VIVO INTERNET}.$

1. Q: What shall I do if I cannot connect to the internet?

A: Checking Setting and check the Profile is correct to match the (U)SIM card operator. If not, can manual to enter the APN information to connect to the internet.

- Q: Why can't I receive the message?
   A: Please confirm whether the (U) SIM's SMS memory is full or not.
- 3. Q: Why the software doesn't run automatically when the device is plugged in?

A: Run the shortcut from desktop or Click Start->All Programs->VIVO INTERNET->VIVO INTERNET.exe