


User Manual



Your package include following accessories

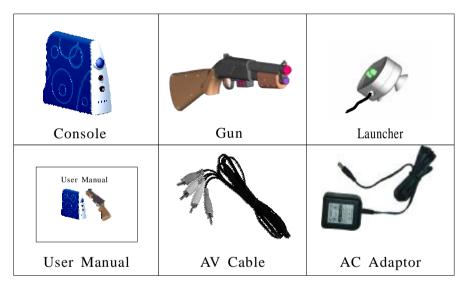

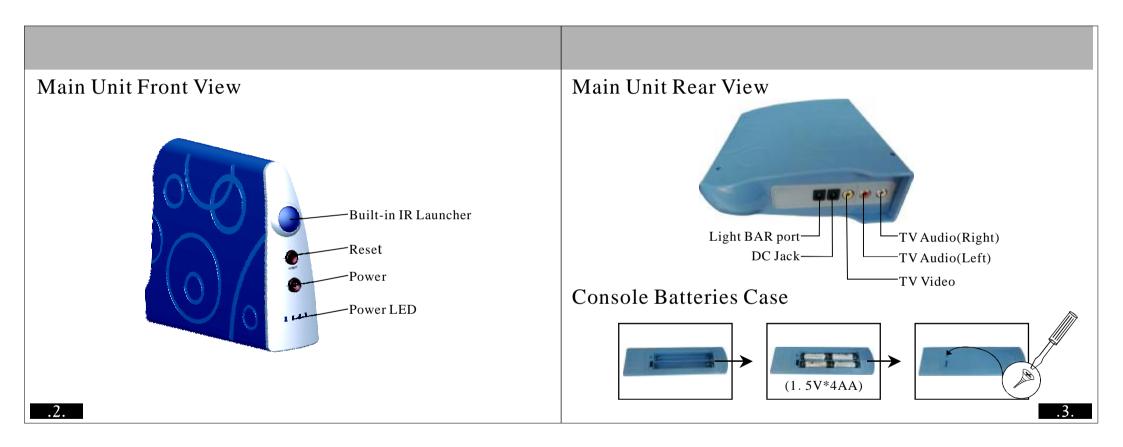


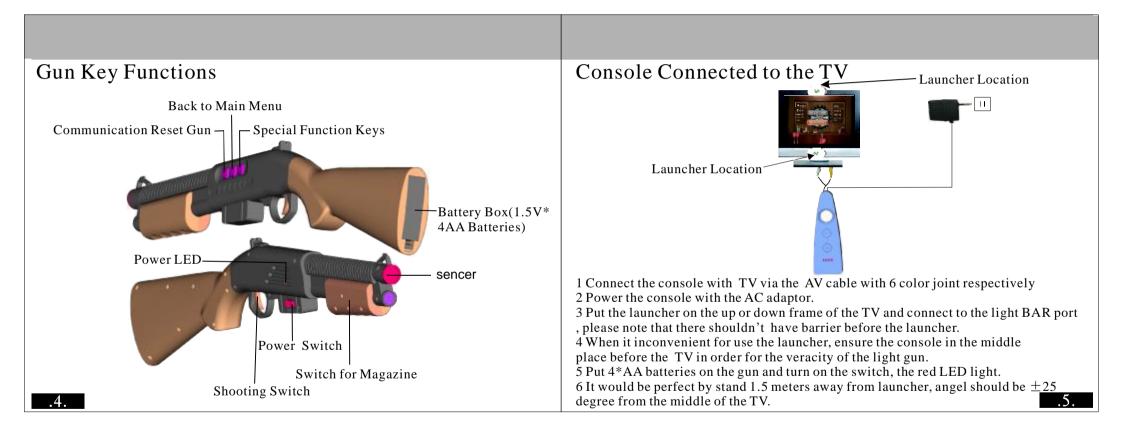

Light gun calibration mode





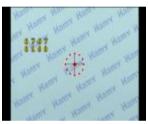

First Second Third

- 1. Aim at the Red area on the upper left, shoot and go to the next frame
- 2. Enter into next frame and aim at the red area, shoot and go to the mext frame
- 3. In the third picture, aim at the point in the middle and shoot, until now, calibration completed, it will enter into the menu section.

Menu selection mode







- 1. It will enter into the menu selection mode after you completed calibration. You can find the game picture on the left screen while on the right will show the game name.
- 2. After you select the game, enter it by aim at the picture and shoot.



1. It will show the "LOADING" on the screen after you selected the game, just wait for a while you can start the exciting game.



During playing process, Press exit on the gun to quit the game and return back to menu. it will go to select mode for you to choose continue or exit the menu.

.გ

Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.