


1.6 User Manual




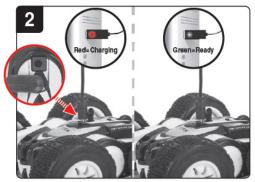








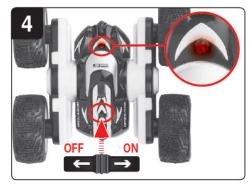




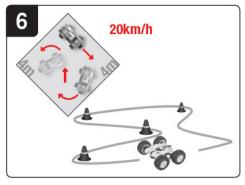






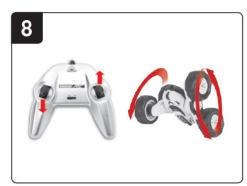



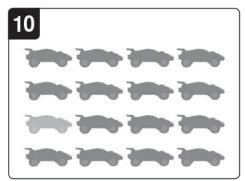




Sicherheitsbestimmungen · Safety instructions · Consignes de sécurité Disposiciones de seguridad · Norme di sicurezza · Veiligheidsbepalingen Prescrições de segurança · Säkerhetsbestämmelser · Turvallisuusohjeet Zasady bezpieczeństwa · Biztonsági rendelkezések · Varnostna določila Bezpečnostní předpisy · Sikkerhetsbestemmelser · Sikkerhedsbestemmelser Διατάξεις ασφαλείας · 安全准则 · 安全規定 · 안전수칙 · قطعة السلامة المعاددة المع










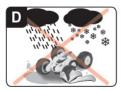






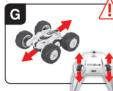



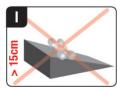







3



Sehr geehrter Kunde

Wir beglückwünschen Sie zum Kauf Ihres Carrera RC-Modellautos, das nach dem heutigen Stand der Technik gefertigt wurde. Da wir stets um Weiterentwicklung und Verbesserung unserer Produkte bemüht sind, behalten wir uns eine Änderung in technischer Hinsicht und in Bezug auf Ausstattung, Materialien und Design jederzeit und ohne An-kündigung vor. Aus geringfügigen Abweichungen des Ihnen vorliegenden Produkts gegenüber Daten und Abbildungen dieser Anleitung können daher keinerlei Ansprüche abgeleitet werden. Diese Bedienungs- und Montageanleitun ist Bestandteil des Produkts. Bei Nichtbeachtung der Be dienungsanleitung und der enthaltenen Sicherheitsanweisungen erlischt der Garantieanspruch. Bewahren Sie diese Anleitung zum Nachlesen und für die eventuelle Weitergabe des Modells an Dritte auf.

Garantiebedingungen

Bei den Carrera-Produkten handelt es sich um technisch ber dem Carriera-Produkten handen es sicht um rechmisch hochwertige Spielzeuge, die sorgfaltig behandelt werden sollten. Beachten Sie bitte unbedingt die Hinweise in der Bedienungsanleitung. Alle Teile werden einer sorgfaltigen Prüfung unterzogen (technische Anderungen und Modellan-derungen, die der Verbesserung des Produktes dienen, sind vorbehalten).

Sollten dennoch Fehler auftreten, wird eine Garantie im Rahmen der nachstehenden Garantie-Bedingung gewährt: Die Garantie umfasst nachweisliche Material- oder Fabrikationsfehler, die zum Zeitpunkt des Kaufes des Carrera Produkts vorhanden waren. Die Garantiefrist beträgt vom Verkaufsdatum an gerechnet 24 Monate. Ausgeschlossen ist der Garantieanspruch auf Verschleißteile (wie z.B. Carrera RC Akkus, Anlennen, Reifen, Getriebeteile etc.), Schäden durch unsachgemäße Behandlung/Nutzung oder bei Fremdeingriffen. Die Reparatur darf nur durch die Firma Stadlbauer Marketing + Vertrieb GmbH oder ein von dieser autorisiertes Unternehmen ausgeführt werden. Im Rahmen dieser Garantie wird nach Wahl der Stadlbauer Marketing + Vertrieb GmbH das Carrera-Produkt als Ganzes oder nur die defekten Teile ausgetauscht oder gleichwertiger Ersatz gewährt. Von der Garantie ausgeschlossen sind Transport-, Verpackungs- und Fahrtkosten sowie vom Käufer zu vertretende Schäden. Diese sind vom Käufer zu tragen. Die Ga rantieansprüche können ausschließlich vom Ersterwerber des Carrera-Produkts in Anspruch genommen werden.

Anspruch auf die Garantieleistung besteht nur dann, wenn

- die ordnungsgemäß ausgefüllte Karle zusammen mit dem defekten Carrera-Produkt, der Kaufquittung/der Rechnung/dem Kassenzettel eingesandt wird.
- keine eigenmächtigen Änderungen an der Garantiekarte
- vorgenommen wurden.

 das Spielzeug gemäß der Bedienungsanleitung behandelt und bestimmungsgemäß genutzt wurde.

 • die Schäden/ Fehlfunktionen nicht auf höhere Gewalt oder
- betriebsbedingten Verschleiß zurückzuführen sind. Garantiekarten können nicht ersetzt werden

Hinweis für EU-Staaten: Es wird auf die gesetzliche Gewährleistungspflicht des Verkäufers hingewiesen, dass nämlich diese Gewährleistungspflicht durch gegenständliche Garantie nicht eingeschränkt wird.

Bitte senden Sie die vollständig ausgefüllte Garantiekarte die Ware und die Kaufquittung frei Haus an folgende Adressen (die Versendung erfolgt auf Risiko des Käufers):

Stadlbauer Marketing + Vertrieb GmbH Chiemseestraße 200 • D-83278 Traunste

Innerhalli Österreichs an: Stadibauer Marketing + Vertrieb GmbH Handelszentrum 6 • A-5101 Bergheim

Konformitätserklärung

Hiermit erklärt Stadlbauer Marketing + Vertrieb GmbH, dass sich dieses Modell einschließlich Controller in Übereinstim-mung mit den grundlegenden Anforderungen folgender EG-Richtlinien: EG Richtlinien 2009/48 und 2004/108/EG über die elektromangetische Verträglichkeit und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG (R&TTF) befindet. Die Original-Konformitätserklärung kann unter carrera-rc.com angefordert werden.





Warnhinweise!



ACHTUNG! Dieses Spielzeug ist nicht ge eignet für Kinder unter 3 Jahren, wegen verschluckbarer Kleinteile.

ACHTUNG! Funktionsbedingte Klemma fahr! Entfernen Sie alle Verpackungsmaterialien und Befestigungsdrähte, bevor Sie dieses Spielzeug dem Kind übergeben. Für Informationen und etwaige Fragen, bewahren Sie bitte Verpackung und Adresse auf.



Das hier abgebildete Symbol der durchgestrichenen Mülltonnen soll Sie darauf hinweisen, dass leere Batterien, Akkumulatoren, Knopf-

zellen, Akkupacks, Gerätebatterien, elektrische Altgeräte etc. nicht in den Hausmüll gehören, da sie der Umwelt und Gesundheit schaden. Helfen Sie bitte mit, Umwelt und Gesundheit zu erhalten und sprechen Sie auch mit Ihren Kindern über die ordentliche Entsorgung gebrauchter Bat-terien und elektrischer Altgeräte. Batterien und elektrische Altgeräte sollen bei den bekannten Sammelstellen abgegeben werden. So werden sie ordnungsgemäßem Recycling zuœführt.

Ungleiche Batterietypen oder neue und gebrauchte Batte-rien dürfen nicht zusammen verwendet werden. Leere Batterien aus dem Spielzeug herausnehmen. Nicht aufladbare Batterien dürfen nicht geladen werden. Akkus dürfen nur von Erwachsenen aufgeladen werden. Anschlussklemmen dürfen nicht kurzgeschlossen werden. Es dürfen nur die empfohlenen Batterien oder die eines gleichwertigen Typs verwendet werden.

Bei regelmäßigem Gebrauch des Ladegeräts, muss dieses am Kabel, Anschluss, Abdeckungen und anderen Teilen kontrolliert werden. Im Schadensfall darf das Ladegerät erst nach einer Reparatur wieder in Betrieb genommen werden.

Wichtige Informationen über Lithium Polymer Akkus

Lithium-Polymer (LiPo) Akkus sind wesentlich empfindlicher als herkömmliche Alkali-, oder NiMH-Akkus, die sonst bei Funkfernsteuerungen verwendet werden. Die Vorschriften und Warnhinweise müssen deshalb genauestens befolgt werden. Bei falscher Handhabung von LiPo Akkus besteht Brandgefahr. Beachten Sie immer die Herstellerangaben, wenn Sie LiPo Akkus entsorgen

Richtlinien und Warnhinweise für die Benutzung des LiPo Akkus

- Sie m
 üssen den beigef
 ügten 3,7 V === 750 mAh / 2,78 Wh LiPo-Akku an einem sicheren Ort abseits entzündlicher Materialien aufladen
- Lassen Sie den Akku beim Laden nie unbewacht.
- Zum Laden nach der Fahrt muss sich der Akku zunächst
- Zum Laueri nach der Fahrt muss son der Akku Zunachst auf die Umgebungstemperatur abgekühlt haben.
 Sie dürfen nur das dazugehörige Lipo-Ladegerät (USB Kabel) verwenden. Bei Nichleinhaltung dieser Hinweise beseht Brandgefahr und damit Gesundheitsgefahrdung und/ oder Sachbeschädigung. Benutzen Sie NIEMALS ein ande-
- res Ladegeråt.

 Lagern Sie den Akku bei Raumtemperatur an einem trockenen Ort.
- Laden Sie den Akku unbedingt nach Gebrauch wieder auf um eine sog. Tiefenentladung des Akkus zu vermei-den. Beachten Sie dabei, dass Sie eine Pause von ca. 20 Min. zwischen der Fahrt und dem Ladevorgang einhalten. Laden Sie den Akku von Zeit zu Zeit (ca. alle 2-3 Monate) auf. Eine Nichtbeachtung der o.g. Handhabung des Akkus kann zu einem Defekt führen.
- Für den Transport oder für eine übergangsweise Lagerung des Akkus sollte die Temperatur zwischen 5-50°C lieger Lagern Sie den Akku oder das Modell, wenn möglich nich im Auto oder unter direktem Sonneneinfluss. Wenn der Akku der Hitze im Auto ausgesetzt wird, kann er beschädigt werden oder Feuer fangen.

Sicherheitsbestimmungen

- Das Carrera RC-Fahrzeug ist ausschließlich für Hobbyzwecke ausgelegt und darf nur auf dafür vorgesehenen Bahnen und Plätzen gefahren werden. ACHTUNG! Verwenden Sie das Carrera RC-Fahrzeug nicht im Straßenverkehr.
- Fahren Sie auch nicht unter Hochspannungsleitungen oder Funkmasten oder bei Gewitter!

 Atmosphärische Störungen können zu einer Funktionsstörung führen. Bitte warten Sie bei gro-Ben Temperaturunterschieden zwischen Lagerraum und Fahrplatz bis sich das Fahrzeug akklimatisiert hat, um die Bildung von Kondens und daraus resultierende Funktionsstörungen zu vermeiden.
- Fahren Sie mit diesem Produkt niemals auf Gras-C flächen. Sich fest wickelndes Gras kann die Ach-sendrehung behindern und den Motor erhitzen. Mit einem Carrera RC-Fahrzeug dürfen keine Güter, Personen oder Tiere transportiert werden.
- Fahren Sie mit dem Carrera RC-Fahrzeug niemals bei Regen oder Schnee im Freien. Das Fahrzeug darf nicht durch Wasser, Pfützen oder Schnee fahren und muss im trockenen gelagert werden. Nasser Untergrund ohne Pfützen führt zu keiner Beeinträchtigung des Fahrzeuges, da die Elektronik gegen Spritzwasser geschützt ist.
- Benutzen Sie das Fahrzeug niemals in der Nähe von Flüssen, Teichen oder Seen, damit das Carrera RC-Fahrzeug nicht ins Wasser fällt. Vermeiden Sie das Fahren auf Strecken, die ausschließlich aus Sand bestehen.
- Setzen Sie das Carrera RC-Fahrzeug keiner direkten Sonneneinstrahlung aus. Um Überhit-zungen der Elektronik im Fahrzeug zu vermeiden, müssen bei einer Temperatur von über 35°C re-gelmäßig kurze Ruhepausen eingelegt werden.
- Setzen Sie das Carrera RC-Fahrzeug niemals G permanenten Lastwechsel, d.h. ständigem Vorund Zurückfahren, aus.
- Stellen Sie das Fahrzeug immer von Hand auf dem Boden ab. Werfen Sie das Fahrzeug niemals aus dem Stand auf den Boden
- Vermeiden Sie Sprünge von Schanzen oder Rampen mit Höhen über 15 cm.
- Verwenden Sie niemals scharfe Lösungsmittel zur Reinigung Ihres Modells.
 - Um zu vermeiden, dass das Carrera RC-Fahrzeug mit Störungen im Steuerungssystem und dadurch unkontrolliert fährt, sind die Batterien des Controllers und des Fahrzeugakkus auf einwandfreien Ladezustand hin zu überprüfen. Ladegeräte und Netzteile nicht kurzschließen.
- Die korrekte Montage des Carrera RC-Fahrzeugs muss stets vor und nach jeder Fahrt überprüft werden, gegebenenfalls Schrauben und Muttern

4



Lieferumfang



1x Turnator

1x USB-Ladekabel 2x 1,5 V Micro AAA Batterien (nicht wiederaufladbar)

Aufladen des LiPo-Akkus

Achten Sie darauf, dass Sie den mitgelieferten LiPo-Akku nur mit dem mitoelieferten LiPo-Ladeoerät (USB-Kabel) laden. Wenn Sie versuchen den Akku mit einem anderen LiPo-Akku Ladegerät oder einem anderen Ladegerät zu laden, kann dies zu schweren Schäden führen. Bitte lesen Sie den vorange-henden Abschnitt mit den Warnhinweisen und Richtlinien zur Akku-Verwendung sorgfältig durch, bevor Sie fortfahren.

Sie können den im Fahrzeug verbauten Akku mit dem dazuge-hörigen USB-Ladekabel an einem USB Port eines Computers



Laden am Computer:

 Verbinden Sie das USB-Ladekabel mit dem USB-Port eines Computers. Die LED am USB-Ladekabel leuchtet grün auf und zeigt an, dass die Ladeeinheit ordnungsgemäß mit dem Computer verbunden ist. Wenn Sie ein Fahrzeug mit leerem Akku anstecken leuchtet die LED am USB-Ladekabel rot auf und zeigt an, dass der Fahrzeug Akku geladen wird. Das USB-Ladekabel bzw. die Ladebuchse am Fahrzeug sind so hergestellt, dass verkehrte Polarität ausge schlossen ist.

 Es dauert ungefähr 20 Minuten, um einen entlade-nen Akku (nicht tiefentladenen) wieder aufzuladen. Wenn der Akku voll ist, leuchtet die LED-Anzeige am USB-Ladekabel wieder grün auf.

Hinweis: Bei der Auslieferung ist der enthaltene LiPo-Ak-ku teilgeladen. Daher könnte der erste Ladevorgang etwas kürzer dauern.

lten Sie die o.g. Anschlussreihenfolge unbedingt ein! Soilten Sie das Ladekabel nicht an eine Stromqueile ange-schlossen und nur mit dem Fahrzeug verbunden haben, so zeigt eine grün leuchtende LED-Anzeige an, dass noch Spannung im Akku ist. Die grün leuchtende LED-Anzeig zeigt nicht an ob der Akku ausreichend geladen ist.

nrend des Ladevorgangs muss der Powerschalter auf

Einsetzen der Batterien in den Controller



Öffnen sie das Batteriefach mit einem Schraubendreher und setzen Sie die Batterien in den Controller ein. Achten Sie auf die richtige Polarität Verwenden Sie nie neue und alte Batterien oder von unter schiedlichen Herstellern gemeinsam. Nach dem verschließen des Faches können sie die Funktionalität des Controllers mit Hilfe des Powerschalters auf der Vorderseite prüfen. Bei ON-Stellung des Powerschalters und ordnungs gemäßer Funktion sollte die LED oben in der Mitte des Controllers rot aufleuchten

Jetzt kann die Fahrt losgehen



Das Carrera RC Fahrzeug und der Controller sind werkseitig gebunden.

1.Schalten Sie das Fahrzeug am ON-/OFF-Schalter ein. Die LED auf der Unterseite des Fahrzeugs blinkt rhythmisch.

2.Schalten Sie den Controller ein. Die LED am Controller blinkt rhythmisch. Nach ein paar Sekunden leuchten die LED am Fahrzeug und am Controller permanent. Die Bin-

dung ist abgeschlossen.

Lass uns üben!



Achtung dieses Fahrzeug erreicht Geschwindigkeiten von bis zu 20km/h. Bitte üben Sie auf einer leeren Fläche mit mind, 4 x 4 Metern Größe. Bedienen Sie beim ersten Mal sehr vorsichtig

Bauen Sie mit Eckbegrenzungen oder leeren Büchsen usw. eine Carrera RC-Fahrzeug Rennstrecke auf einer großen, freien Fläche. Die grundlegende Steuerlechnik beim Fahren mit einem Carrera RC-Fahrzeugs ist: auf Geraden schnell fahren und in den Kurven abbremsen.

- Permanenten Motoreinsatz vermeiden. Schaltet sich das Fahrzeug mehrmals kurz
- hinter einander von selbst ab. ist der Akku leer. Bitte laden Sie den Akku.
- Nach 30 Minuten Stillstand schalten sich Controller und Fahrzeug von selbst aus. Zum erneuten Gebrauch bitte den ONOFF Schalter an Controller & Fahrzeug einmal auf OFF und anschließend wieder auf ON
- Zum Ausschalten nach der Fahrt umgekehrte Reihenfolge einhalten.
- Laden Sie den Akku unbedingt nach Ge-brauch wieder auf, um eine sog. Tiefenentla-dung des Akkus zu vermeiden. dung des Akkus zu · Lagern Sie den Akku immer außerhalb des
- Fahrzeuges.
 Das Carrera RC-Fahrzeug nach der Fahrt
- säubern.

Controller-Funktionen



Differentialsteuerung Mit den Joysticks können Sie präzise Lenk- und Fahrmanöver durchführen.

Joystick links und rechts: Vorwärtsfahrt und Rück-wärtsfahrt bei gleichmäßiger und gleichzeitiger Betätigung des linken und rechten Joystickes.

Eine Lenkbewegung nach links erzeugen Sie wenn Sie den rechten Joystick nach vorne be-wegen und anschließend wieder loslassen. Für eine Lenkbewegung nach rechts bewegen Sie den linken Joystick nach vorne und lassen Sie ihn anschließend wieder los.



Flip Action Stunts

Durch schnelles direktes entgegengesetztes Bewegen der beiden Joysticks, jeweils bis zum Anschlag nach oben oder unten, kann der Flip ausgelöst werden, bei dem sich das Fahrzeug



360° Drehung

Durch entgegengesetztes und gleichmäßiges Auf- und Abbewegen der beiden Joysticks dreht sich das Fahrzeug 360° auf der Stelle.



Dank 2,4 GHz Technologie können bis zu 16 Fahrzeuge gemeinsam auf einer Rennstrecke gefahren werden.

Dies ist ganz ohne Frequenz-Abstimmung unter den Rennfahrern möglich.

Problemlösungen

Ursache: Schalter am Controller oder/und Modell steht/ stehen auf "OFF". Lösung: Einschalten

Ursache: Schwacher oder gar kein Akku im Modell. Lösung: Geladenen Akku einlegen.

Ursache: Das Auto ist an einem Hindemis stehen geblieben. Lösung: Der Überspannungsschutz hat das Auto abge-schaltet. ON/OFF Schalter am Fahrzeug einmal auf OFF, dann wieder auf ON schalten und auf einer freien Fläche

Ursache: Schwacher Akku/Batterie im Controller oder Modell. Lösung: Geladenen Akku oder Batterie einlegen

Ursache: Der Controller ist ggf. nicht richtig mit dem Empfän-

ger im Modell gebunden. Lösung: Stellen Sie wie unter "Jetzt kann die Fahrt losge-hen" beschrieben eine Bindung zwischen Modell und Controller her.

Ursache: Der Sender hat sich nach 30 Minuten selbst ausgeschaltet

Lösung: Zum erneuten Gebrauch bitte den ON/OFF Schalter an Controller & Fahrzeug einmal auf OFF und anschlie-Bend wieder auf ON schalten.

Ursache: Das Fahrzeug ist sehr warm.

Lösung: Fahrzeug und Controller ausschalten und das Fahrzeug etwa 30 Minuten abkühlen lassen.

Ursache: Der Überhitzungsschutz hat das Auto wegen zu

starker Erwärmung angehalten
Lösung: Den Empfanger ausschalten. Das RC-Fahrzeug
etwa 30 Minuten abkühlen lassen

Keine Kontrolle

Ursache: Fahrzeug setzt sich ungewollt in Bewegung. Lösung: Zuerst Controller einschalten, dann erst das Fahrzeug.

Die aktuellste Version dieser Bedienungsanleitung und Informationen zu erhältlichen Ersatzteilen finden Sie auf carrera-rc.com im Servicebereich.

Farben/endgültiges Design - Änderungen vorbehalten Technische und designbedingte Änderungen vorbehalten Piktogramme = Symbolfotos ENGLI



Dear customer

Congratulations on purchasing a Carrera RC model car, manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. Non-observance of these operating instructions and the safety instructions they contain will render the guarantee null and void. These instructions are to be kept for future reference and in the event that the product is passed on to a third party.

Guarantee conditions

A Carrera product is built to high technical standards and is to be treated with care. Please ensure that you observe all the instructions contained in this guide. All components have been subjected to careful inspection (technical modifications and alterations to the model for the purpose of product improvement are reserved).

Should any faults nevertheless occur, guarantee is assumed within the scope of the following conditions:

The guarantee covers demonstrable material or manufactur-ing defects that existed at the time that the Carrera product was purchased. The guarantee period is 24 months begin-ning with the date of purchase. The guarantee does no extend to wearing parts (such as Carrera RC rechargeable batteries, antennas, tyres, gearbox components etc.), dam-age caused by improper treatment or use, or unauthorised intervention. Repair may only be performed by Stadlbauer Marketing + Vertrieb GmbH itself or by a company it has authorised to do so. Within the scope of this guarantee, either the product as a whole or only the defective compo-nents will be replaced or equivalent substitution performed, as deemed appropriate by Stadlbauer Marketing + Vertrieb GmbH The guarantee does not cover transport, packaging or travel costs or any damage for which the buyer is responsible. These costs are to be covered by the buyer. Guarantee claims will only be accepted from the original purchaser of the Carrera product.

Guarantee claims can only be accepted when

- The card has been filled in properly and sent in together with the defective Carrera product and the purchase receipt/invoice/cash-register receipt.
- No unauthorised alterations have been made by the buyer
- to the guarantee card.

 The toy has been treated in accordance with the operating
- instructions and subjected to its intended use.

 The damage/faulty operation is not due to acts of God or normal wear and tear.
- Guarantee cards cannot be replaced.

Note for EU countries: Reference is hereby made to the seller's statutory guarantee obligation, to the extent that this guarantee obligation is not restricted by the product guarantee.

Declaration of conformity

Stadlbauer Marketing + Vertrieb GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2009/48 and 2004/108/EC regarding electromagnetic compatibility and the other relevant regulations of Directive 1999/5/EC (R&TTE).

The original declaration of conformity can be requested from



Warning!

WARNING! This toy contains small parts which can be swallowed and is therefore not suitable for children under 3 years of age.

WARNING! danger of pinching during operation! Remove all packaging materials and wire fastenings before handing the toy over to the child. Please retain the packaging and address for information and in the event of any questions.



This symbol, showing refuse bins I'lls sylinuol, snorming rouse ones with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, recharge-

able battery packs, equipment batteries, disused electri-cal equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Please help to preserve environment and health and talk to your children about the correct disposal of used batteries and disused electrical equipment. Batteries and disused electrical equipment should be handed in to the usual collection points where they can be properly recycled. Do not mix dissimilar battery types or employ new and used bat-teries together. Empty batteries should be removed from the product. Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries are only to be charged by adults. Rechargeable batteries should be removed from the product before charging. Supply lerminal are not to be short-circuited. Only use the batteries recommended or equivalent types. If in regular use the charger must be examined for damage to the cord, plug, covers and all other parts. If any signs of damage are found the charger may only be used again after repair work has been completed.

Requirement for FCC Part 15

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit dif-
- ferent from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important information concerning Lithium Polymer rechargeable batteries

Lithium-Polymer (LiPo) rechargeable batteries are significantly more sensitive than traditional alkali- or NiMH-rechargeable batteries which are normally used with radio control units. Therefore the instructions and warnings have to be observed in detail. In case of improper use of LiPo rechargeable batteries there is a danger of fire. Always followed low the manufacturers' instructions if you dispose of LiPo rechargeable batteries.

Guidelines and warnings for the use of LiPo recharge able batteries

- You have to charge the attached 3.7 V --- 750 mAh/2.78 Wh LiPo rechargeable battery in a safe place and at a safe distance to flammable material.
- Never leave the battery unattended while it is chargi
 After use, the rechargeable battery has to cool down
- ambient air temperature before charging it.

 You must always use the corresponding LiPo charging unit (USB cable / remote control). In case of non-compliance with these directions there is a danger of fire resulting in a health

risk and/or damage to property. NEVER use any other bat-

- lery charger.
 Store the rechargeable battery at ambient temperature in a dry place.
- Always recharge the battery immediately after use to prevent its becoming deep discharged. Please make sure to allow a pause of about 20 minutes between finishing the flight and recharging the battery. Recharge the battery occasionally (suggested every 2-3 months) ilure to treat the battery as described above can lead to its becoming defective
- When transporting or temporarily storing the rechargeable battery the temperature should be between 5-50°C. If possible, do not store the battery or the model in a car and do not expose it to direct sunlight. In case the battery is broiled it can be damaged or catch fire.

Safety instructions

- The Carrera RC vehicle is designed for hobby use only and may only be operated on tracks and in spaces especially intended for this purpose.

 CAUTION! Do not use the Carrera RC vehicle in road traffic
- Do not operate the car beneath overhead high voltage cables or broadcasting masts or during a storm! Atmospheric disturbances can affect the operation of the vehicle. When there a large temperature differences between your car's ga-rage and the running track, please wait until the vehicle has had time to acclimatise. This will help prevent condensation forming and the possibility of malfunctions resulting.
- Never operate the product on grass surfaces There is the risk of grass hindering the movement of the axles, which can lead to the motor overheating. Do not use the Carrera RC vehicle for transporting goods, persons or animals.
- Never use the Carrera RC vehicle outdoors during rain or snowfall. The car must not be run through water, puddles and snow, and must always be kept stored in a dry place. Wet surfaces without puddles will not affect the car's performance as the electronic
- equipment is protected against spray. Never operate the vehicle near rivers, ponds or E lakes, to avoid the risk of the Carrera RC car fall-ing into the water.
 - Avoid running on courses which are laid exclu-
- Do not expose the Carrera RC vehicle to direct
 - sunlight.
 To avoid the electronics in the car overheating, when temperatures are above 35 °C, regular short pauses in operation are essential.
- Never subject the Carrera car to repeated chang es of load that means continuously reversing it. G
- Always place the car on the floor by hand. Never throw the car on the floor from a standing position.
- Avoid jumping from jumps or ramps higher than 15 cm (0.49 ft.).
- Never use strong solvents for cleaning the car. K
- To avoid malfunctions to the control system resulting in uncontrolled operation of the Carrera RC vehicle, check that the controller batteries and the rechargeable batteries in the vehicle have suffi-cient charge. Supply terminals are not to be short-circuited.
- The Carrera RC vehicle must be inspected be-M fore and after operation, each time it is used, to ensure that it has not become disassembled.

 Any screws or nuts that may have become loosened during operation must be tightened.



Contents of package



- 1x Turnator
- 1x Controller 1x USB charging cable 2x 1.5 V Micro AAA batteries
- (non-rechargeable)

Recharging the LiPo rechargeable battery

Make sure you only charge the LiPo rechargeable battery supplied with the LiPo charging unit also supplied (USB ca-ble). In case you try to charge the rechargeable battery with a different LiPo battery charger or any other battery charger, a dilient in the date of vialing to all you one battery challed in this might cause serious damages. Please carefully read the previous chapter about warnings and guidelines on the usage of rechargeable batteries before proceeding. The rechargeable battery fitted in the car with its USB chargeable battery.

ing cable can be charged from a USB port on a computer:



Charging via computer:

 Connect the USB charging cable with the USB port of a computer. The LED on the USB charger cable lights green indicating that the charger unit is correctly connected to the computer.

If you plug in a car with a discharged battery, the LED on the USB charging cable lights up red and shows that the car battery is being charged. The USB charging cable and the charging socket on the car are designed to make incorrect connection impossible.

It takes about 20 minutes to recharge a discharged battery (but NOT a deep-discharged one). When the battery is fully charged, the LED display in the USB charging cable lights up green

Note: When supplied, the lipo-battery is already partially charged so the first charging cycle may well take less time.

It is essential to follow the connection sequence given above! If you have the charger cable only connected to the helicopter, and not to a source of electricity, a green LED display indicates that there is still power in the battery. The green LED display does not necessarily indi-cate the battery is still adequately charged.

While charging, the power switch must be in the "OFF"

Inserting the batteries



Open the battery compartment with a screwdrive and insert the batteries in the remote control. Please keep in mind the correct polarity. Different ty-pes of batteries or new and used batteries are not to be mixed. After having closed the compartment you can check all functions of the remote control with the help of the power-switch on the front With the power-switch turned ON and proper functioning, the top center LED on the remote control will light up red.

Now you can drive the car



The Carrera RC car and the remote control are bound as a factory setting.

1. Switch the car ON at the ON/OFF switch. The LED on bottom of the car will flash rhythmically.

2. Switch on the controller. The LED on top of the controller will flash rhythmically. After a few seconds, the LEDs on the car and on the controller will light continuously, meaning the

bind has been made.

Let's practise!



CAUTION! This vehicle reaches speeds up to 20 km/h (13 mph). Practice on an empty surface at least 4 metres (13.1') square. When first starting, be very careful when operating the gas

Now it's time to practise! Set up a Carrera RC vehicle racing track in a large empty area, using cornerposts, empty cans, or similar objects. The basic technique to adopt when operating a Carrera RC is to drive fast on the straight sections and to slow down in the curves

- Avoid constant motor operation.
 If the car switches itself off several times one after another, the battery is dead. Please recharge the battery.

 • After 30 minutes inactivity, the controller
- and vehicle switch off automatically. To restart, switch the OWOFF switch on the con troller & the car to OFF and then back to ON.
- To switch off after use, follow the steps in the reverse order.
- Always recharge the battery immediately after use to prevent its becoming deep dis-
- Always keep the rechargeable battery stored outside the vehicle.
- Clean the Carrera RC car after use.

Controller functions



Differential SteeringYou can use the joysticks to carry out precise steering and driving manoeuvres. Joystick left and right: Forwards and backwards with steady movement of left and right joysticks at the same time.

Steer the car to the right by pushing the left-hand joystick forwards and releasing it again.



Flip action stunts

The flip can be triggered by moving both joysticks quickly and simultaneously in opposite directions either upwards or downwards to the stop, and the car turns a somersault.



360 ° turn

By moving both joysticks and steadily up and down in opposite directions the vehicle can be made to rotate 360 ° on the spot...



Thanks to 2.4 GHz technology, up to 16 cars can be run together on one race-track. This is possib-le even without harmonising frequencies between the racing drivers.

Troubleshooting

Problem

Car does not move

Cause: Either the switch on the controller or the car is set

Solution: Switch on

Cause: There is no rechargeable battery in the car or the battery is too weak

Solution: Insert charged battery

Cause: The car has come to a stop at an obstacle.

Solution: The voltage surge protector has switched the car
off, Turn the ON/OFF switch on the car to OFF, then back to ON, and place the car on a clear surface

Cause: The battery or rechargeable battery in the transmitter or model is too weak. Solution: Insert new battery or recharged battery

Cause: The remote control is possibly not correctly frequen-

cy bound with the receiver on the model

Solution: Carry out a frequency bind between the model and the remote control as described in "Now you can drive

Cause: The transmitter has switched itself off after 30 minutes. Solution: To restart, switch the ON/OFF switch on both controller & vehicle to OFF and then back to ON.

Cause: The vehicle is very warm.

Solution: Switch both car and controller off and allow the

car to cool down for about 30 minutes.

Car cannot be controlled.

Cause: Vehicle starts moving unintentionally.

Solution: First turn on the transmitter, only then the vehicle.

For the latest version of these operating instructions and information on replacement and spare parts available, please visit carrera-rc.com in the service area.

Errors and changes excepted Colours / final design - changes excepted
Technical changes and design-related changes excepted Pictograms = symbolic photos