

#### Leff to right installation for models without wheels. Installation de gauche à droite pour les modèles sans roues. Instalación de izquierda a derecha para modelos sin ruedas. **BLAGE/ENSAMBLAJE ASSEMBLY/ASSEN** Right to left installation for models with wheels. Installation de droite à gauche pour les modèles à roulettes. Instalación de derecha a izquierda para modelos con ruedas. (REAR BRACKETS ARRIÈRE SUPPORTS ESPALDA SOPORTES

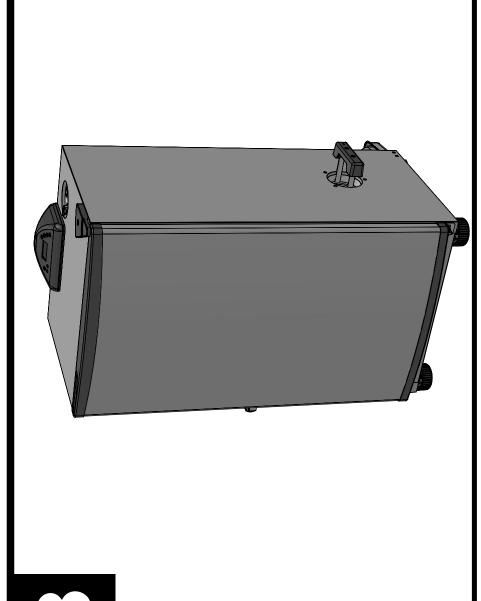

# **COMMENT UTILISER LE PANNEAU DE COMMANDE ET LA TÉLÉCOMMANDE**

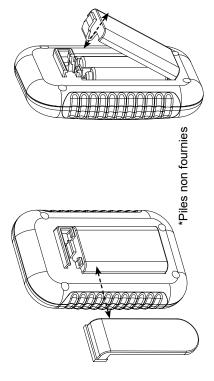

### Remplacer les piles

- Glisser le clip de ceinture vers la gauche pour l'enlever.
- Appuyer sur la languette du couvercle des piles et le retirer. Insérer 2 piles alcalines « AAA ». Vérifier la bonne adéquation des symboles du côté positif (+) et du côté négatif (-) entre le compartiment et les piles pour assurer une installation adéquate.
  - Remettre en place le couvercle de la pile.
- Enlever les piles avant de ranger la télécommande.

# **Test de la gamme de fréquences**

- Allumer l'appareil
- Utiliser la télécommande pour activer et désactiver le rétro-éclairage tout en vous éloignant de l'appareil La télécommande est à l'extérieur de la gamme de fréquences lorsque l'activation et la désactivation du
  - rétro-éclairage ne se fait plus.

#### IMPORTANT

- Ne pas exposer la télécommande au soleil pendant de longues périodes de temps. La télécommande a une gamme de fréquences allant jusqu'à 30 m (100 pi). Effectuer un test de la gamme de fréquences avant et pendant son utilisation.

## DIAGNOSTIC DES PANNES

Si la télécommande ne fonctionne pas correctement ou si la liaison se fait mal avec le panneau de commande, il se peut que les piles soient faibles, qu'elles soient mal installées ou que la télécommande ne soit pas liée au panneau de commande.

## Solutions possibles


- Remplacer les piles et les installer en respectant le schéma du compartiment
- Lier la télécommande et le panneau de commande en
- a. Mettant sur « ON » le panneau de commande et la télécommande, b. Appuyant et en MAINTENANT le bouton « Réglage de la température » du panneau de commande pendant 3 secondes.
- c. Sur la télécommande, appuyer sur « Sonde thermique », « Éclairage », « Sonde thermique », « Éclairage » (l'utilisateur doit appuyer sur tous les boutons à 5 minutes d'intervalle) Un court signal sonore retentira chaque fois que l'utilisateur appuie sur un bouton.






- Conserver les piles hors de la portée des jeunes enfants. En cas d'ingestion d'une pile, consulter immédiatement un médecin
  - S'assurer de la bonne installation des piles. Une installation inadéquate peut causer des fuites et éventuellement une explosion.

- Ne pas jeter les piles au feu. Ne pas mélanger les piles usagées avec les piles neuves. Ne pas utiliser différents types de piles en même temps : alcalines, ordinaires (carbone-zinc) ou rechargeables (Ni-cd, Ni-MH, etc.).

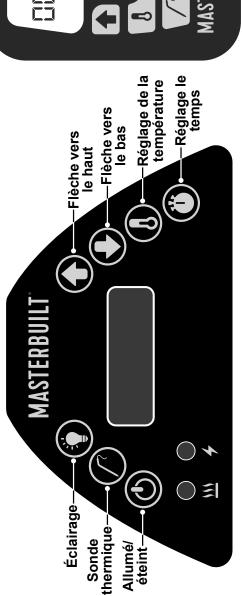

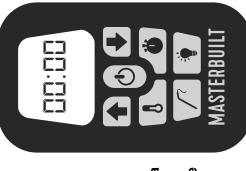

Le produit réel peut différer de l'illustration.

(Si fournie)

Note: Les rayons directs du soleil peuvent gêner la lecture de l'affichage DEL, le protéger de la lumière le cas échéant.

## Régler la température :

- Appuyer sur le bouton « Allumé/éteint ».
- Appuyer une fois sur le bouton « Réglage de la température », l'affichage se mettra à clignoter
- Utiliser flèches haut ou bas pour régler la température.
- Appuyer de nouveau sur le bouton « Réglage de la température » pour programmer la température. Note : Le fumoir ne commence pas à chauffer tant que la minuterie n'a pas été programmée

### Régler la minuterie :

- · Appuyer une fois sur le « Réglage le temps », l'affichage des heures se mettra à clignoter.
  - Utiliser flèches haut ou bas pour régler les heures.
- · Appuyer de nouveau sur le bouton « Réglage le temps » pour programmer les heures. L'affichage des minutes se mettra à clignoter.
- Utiliser flèches haut ou bas pour régler les minutes.
- Appuyer sur « Réglage le temps » pour programmer les minutes et démarrer un cycle de cuisson.

# est écoulé Le fumoir s'arrête de chauffer dès que le temps

# Utiliser la sonde thermique (Si fournie):

- · Insérer la sonde thermique au plus près du centre de la pièce de viande pour obtenir la température la plus juste.
- Appuyer et maintenir le bouton « Sonde thermique », l'affichage DEL indiquera la température interne de la viande.
- Dès que le bouton Sonde thermique est relâché, l'affichage revient à la fonction de réglage de la température ou de la minuterie.


# Utiliser le éclairage (Si fournie) :

- le rétro-éclairage. Appuyer sur le bouton « Éclairage » pour activer
- le rétro-éclairage. Appuyer sur le bouton Éclairage pour désactiver

# Réinitialiser le panneau de commande :

'erreur, éteindre le fumoir électrique, le débrancher t de le rebrancher, puis le remettre en marche. Le Si le panneau de commande affiche un message d de la prise de courant, attendre dix secondes avan panneau de commande sera ainsi réinitialisé.

# HOW TO USE CONTROL PANEL & REMOTE CONTROL

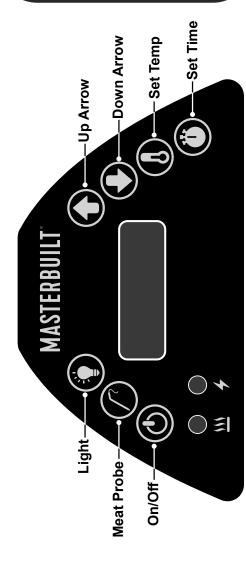

(If featured)

Actual product may differ from picture shown

# Note: Direct sunlight may interfere with ability to read LED display, block light if needed.

Press ON/OFF button.

To set temperature:

- Press SET TEMP button once-LED display will blink.
- Use up or down arrows to set temperature.
- Press SET TEMP button again to lock in temperature.

Note: Heating will not begin until timer is set.

#### To set timer:

- Press SET TIME button once-LED display for hours will blink.
  - Use up or down arrows to set hours.
- Press SET TIME button again to lock in hours. The minutes LED will start blinking.
- Use up or down arrows to set minutes.
- Press SET TIME to lock in minutes and start cook cycle.

# Heat will turn off when time has expired.

# To use meat probe (If featured):

- Insert meat probe into center of meat to get most accurate reading.
- Press and hold MEAT PROBE button-LED display will show internal temperature of meat.
  Once MEAT PROBE button is released-LED display will return to set temperature or set time.

## To use light (If featured):


- Press LIGHT button to turn light on.
  - Press LIGHT button to turn light off.

## To RESET control panel:

ten seconds, plug unit back into outlet, then turn electric smoker on. This will reset control panel. If control panel shows an error message, turn electric smoker off, unplug unit from outlet, wait

7

# ANEL & REMOTE CONTROL HOW TO USE CONTROL P

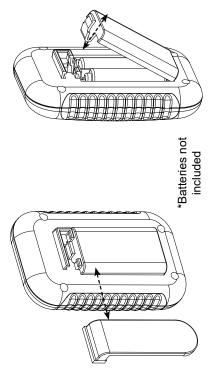

## To replace batteries:

- Slide belt clip to the left to remove.
- Press tab down on battery cover and pull out.
- Install 2 "AAA" Alkaline batteries. Check positive (+) and negative (-) symbols, on the case and battery, to insure proper installation.
- Replace the battery cover
- Remove batteries before storing remote control.

## To test frequency range:

- Turn unit on.
- away from unit. Use remote to turn light on and off as you move
- light will no longer turn on and off. Remote control is out of frequency range when

#### IMPORTANT

- Do not leave remote control exposed to sunlight for prolonged periods of time.
  Remote control has frequency range of up to 100ft (30m).
- Test frequency range before and during use.

## **TROUBLESHOOTING**

weak batteries, batteries being incorrectly installed or the remote is not correctly linked to controller. If the remote is not working properly or not interfacing correctly with the controller, it may be due to

### Possible solutions

- Replace batteries and install according to image in battery housing.
- Link remote and controller by:
- a. Turn Controller & Remote "ON",
- b. Press and HOLD "SET TEMP" on controller for 3 seconds.c. On the Remote press "MEAT PROBE", "LIGHT", "MEAT PROBE", "LIGHT" (all buttons must be pressed within 5 seconds of each other). A short beep will occur after each button press.

#### ZOF

- Keep batteries away from small children. If battery is swallowed consult a physician immediately.
- Be sure to insert batteries correctly. Improper installation may result in leaks and/or possible explosion.
  - Do not dispose of batteries in fire.
    - Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh,etc) batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Warning**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC Statement

protection against harmful interference in a residential installation. This equipment generates uses NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this determined by turning the equipment off and on, the user is encouraged to try to correct the equipment does cause harmful interference to radio or television reception, which can be interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.