


USER MANUAL

Multimedia Wireless Mobile Presenter H2640A/H2640B

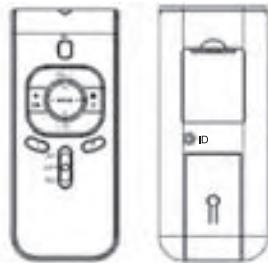

Thank you for purchasing our H2640A/H2640B Multimedia Wireless Mobile Presenter. This manual will provide you with what you will need to know about your new presenter.

THIS PACKAGE INCLUDES

- One H2640 Multimedia Wireless Mobile Presenter
- One USB Receiver (H2640A-with storage; H2640B-without storage)
- User's Manual
- One button cell battery (CR2450 – 3V)

FEATURES

- USB plug and play
- Portable - Mini USB receiver snaps into the bottom of presenter



Synchronization:

NOTE: Windows should have already installed the drivers and recognized the presenter, if not or the presenter is in sleep mode, click the presenter button once to wake it up. If this does not work, you may need to manually reconnect or change the wireless connection channel.

To change the wireless connection channel:

Unplug and re-plug the USB receiver from the USB port. Windows will detect the presenter and install the required driver automatically. Press the ID 1, and then press the ID2 until the blue light flash stably. Your presenter has now changed channels and is ready to be used. If for some reasons, the synchronization is not successful, please:


- a. Remove the batteries and unplug the receivers
- b. Wait for about 20 seconds and then try the above procedures again.

NOTE: During normal situation, please make sure that the presenter is within 10 meters from the receiver in order to have reliable connection.

Storing of the Receiver when traveling:

To prevent the loss of the receiver (also a USB flash disk for H2640A), we strongly suggest you to put the USB receiver on the bottom of the presenter receiver storage area after use. (4) IMPORTANT: Before boarding any aircraft, turn off or remove the batteries. The wireless presenter can transmit radio frequency energy, like a cell phone, when ever batteries are installed and the presenter is activated either by touch or button press. The presenter can transmit RF energy whenever batteries are installed and product is on.

- to prevent loss
- Compatible with USB V1.1 / V2.0
- Multimedia function (e.g. 'M1'-after open the Windows Media Player, you can 'PLAY', 'STOP', VOICE UP/DOWN; 'M2'-page up-and-down)
- USB Mouse function
 - 2.4 GHz -workable distance is about 10 meters
 - High dpi resolution - Remote control mouse
- Laser pointer
- Page up-and-down function (especially useful for PowerPoint / PDF presentation)
- (Optional) USB flash disk storage
- "Off" button to save battery power
- Operating Systems: MS Windows 2000, XP, Vista compatible

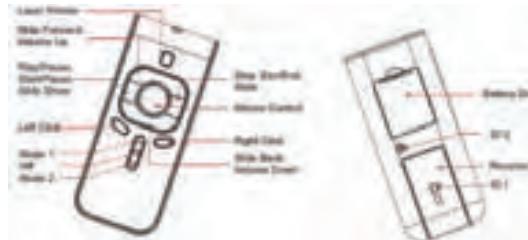

HARDWARE INSTALLATION

Battery Installation – PC (1)

1. Take out the battery cover.
2. Install batteries with the positive (+) side up & negative (-) side down.



Presenter does not function

- Check the USB receiver and make sure it is firmly plugged into the USB port of the computer.
- If it does not work, restart the computer again and follow the instructions for connecting the presenter receiver and synchronization sections of this manual.

Presenter is slow or sluggish in movement.

- Batteries could be low in power and need to be replaced.
- There could be interference in the area of the product. Unplug and re-plug the USB receiver to change channels.
- Please note that there is no low battery indicator on this presenter.

TECHNICAL SPECIFICATIONS

- Operating Systems: MS Windows 2000, XP, Vista compatible
- Receiver Power: USB Per-Port Current: Self-Power 300mA
- Presenter Power: 1pc CR2450 button cell battery (3V)
- Dimension: (L*W*H): 107*46*18.5mm
- Weight: 58g

NOTE: Please note that the presenter buttons on this product are not programmable. Under Mac OS this product will only work for presentation mode (M1) ONLY. Multimedia mode (M2) does not work under the Mac OS.

SAFETY MEASURES

- To avoid possible eye damage, never point the presenters' laser at people, especially their faces, or look directly into the presenter's laser beam.
- Avoid pointing the presenter's laser beam at a mirror or other reflective

3. Put back the battery cover.



Connecting the Presenter Receiver:

Remove the USB receiver from the presenter. (2) Plug the USB Receiver into any available USB port or hub connected to your computer. (3) Windows will detect the presenter and install the required drivers automatically. Your presenter is now ready to be used. (CAUTION: Do not point red LASER BEAM into your eyes or anyone else's eyes, do not look directly into the RED LASERBEAM at anytime. Keep away from children.)



surface.

- Keep the presenter away from young children.
- Never view the presenter's laser beam using telescopic devices
- Any attempt to disassemble, adjust or repair the presenter may result in exposure to laser light or other safety hazards.

CAUTION!

AVOID EXPOSURE-HAZARDOUS ELECTROMAGNETIC RADIATION EMISSION FROM THIS APERTURE. LASER RADIATION. DO NOT STARE INTO THE BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. CLASS 2 LASER PRODUCTS. NEVER POINT A LASER BEAM INTO A PERSON'S EYES OR VIEW A LASER BEAM DIRECTLY. AS PROLONGED EXPOSURE CAN BE HAZARDOUS TO THE EYES. MOMENTARY EXPOSURE FROM A LASER POINTER, SUCH AS AN INADVERTENT SWEEP OF THE LIGHT ACROSS A PERSON'S EYES, MAY CAUSE TEMPORARY FLASH BLINDNESS SIMILAR TO THE EFFECT OF A CAMERA FLASH BULB. ALTHOUGH THIS CONDITION IS TEMPORARY, IT CAN BECOME MORE DANGEROUS IF THE EXPOSED PERSON IS ENGAGED IN A VISION-CRITICAL ACTIVITY SUCH AS DRIVING. CAUTION: ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. THIS DEVICE AND ITS ANTENNA(S) MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER. YOUR DEVICE CONTAINS A LOW POWER TRANSMITTER. WHEN DEVICE IS TRANSMITTING IT SENDS OUT RADIO FREQUENCY (RF) SIGNAL. NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS PRODUCT IS NOT A TOY, DUE TO SMALL PARTS. THIS PRODUCT IS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OLD, AND MANUFACTURER IS NOT RESPONSIBLE FOR THAN KS ANY CASE IF THESE PRODUCTS IS IN IMPROPER USE OR NOT FOLLOWED OUR MANUAL TO USE.

FCC ID: YPP-H2640

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.