Internal Photographs

EUT - Open View

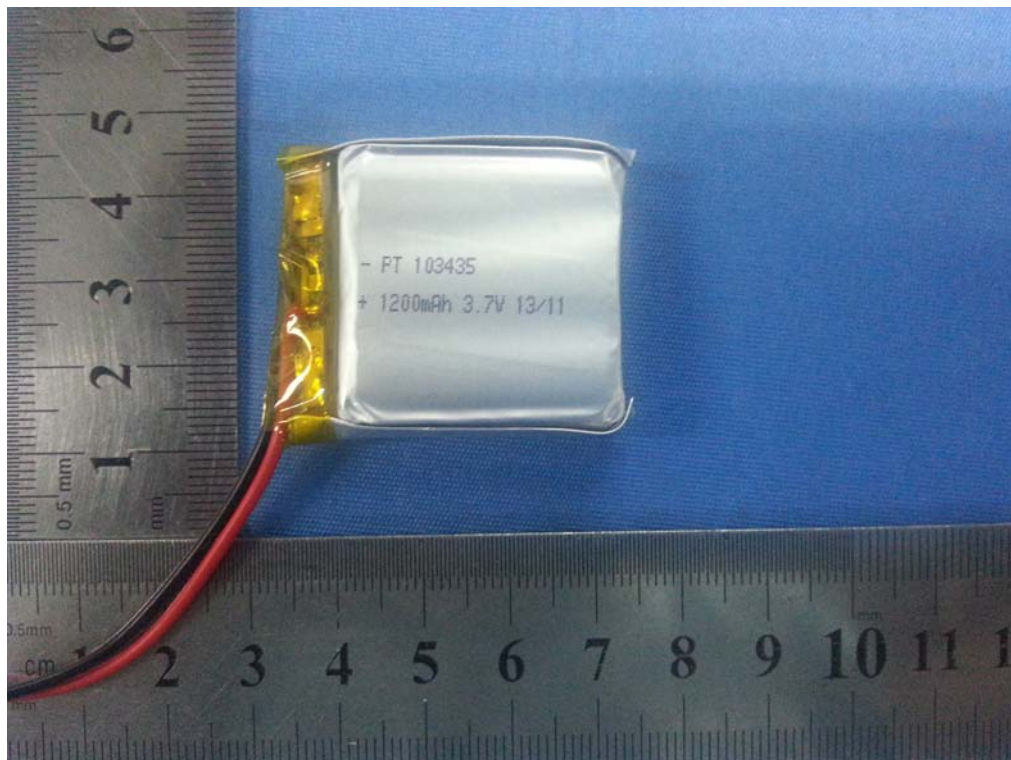**EUT - PCB View**

Antenna Location
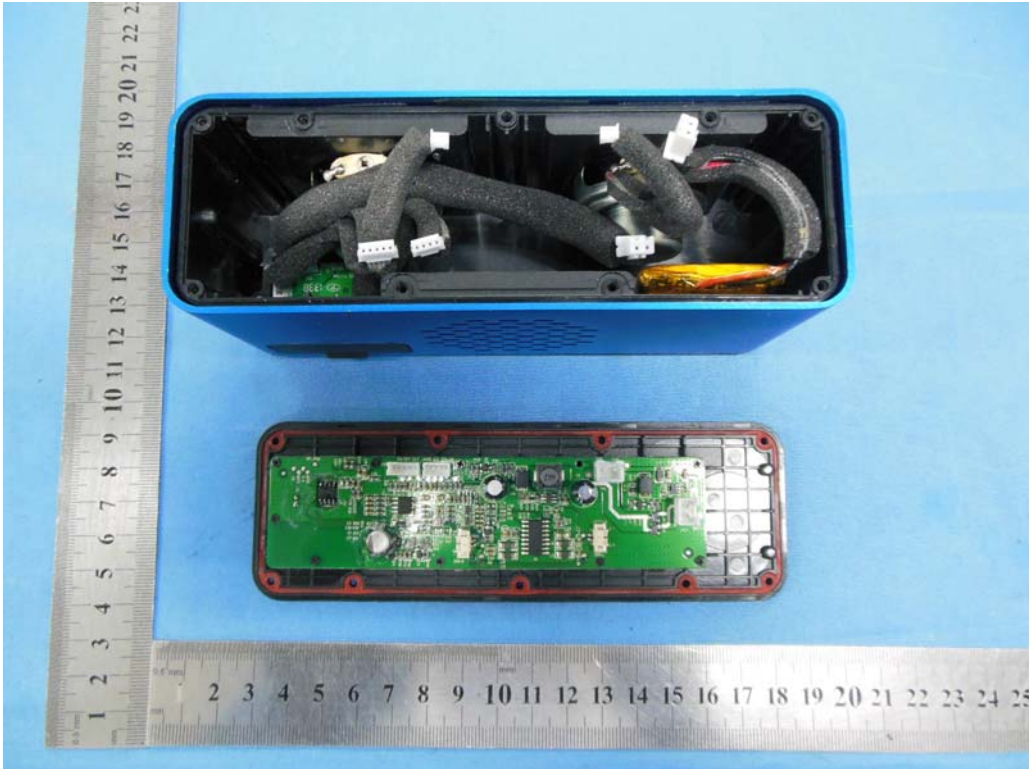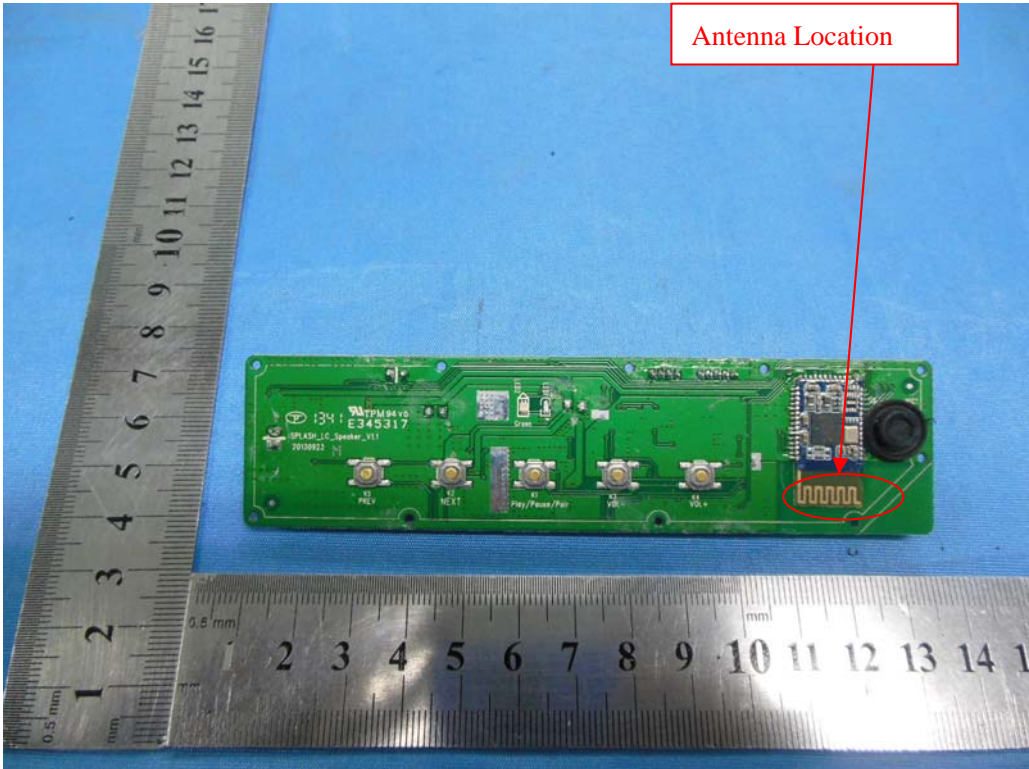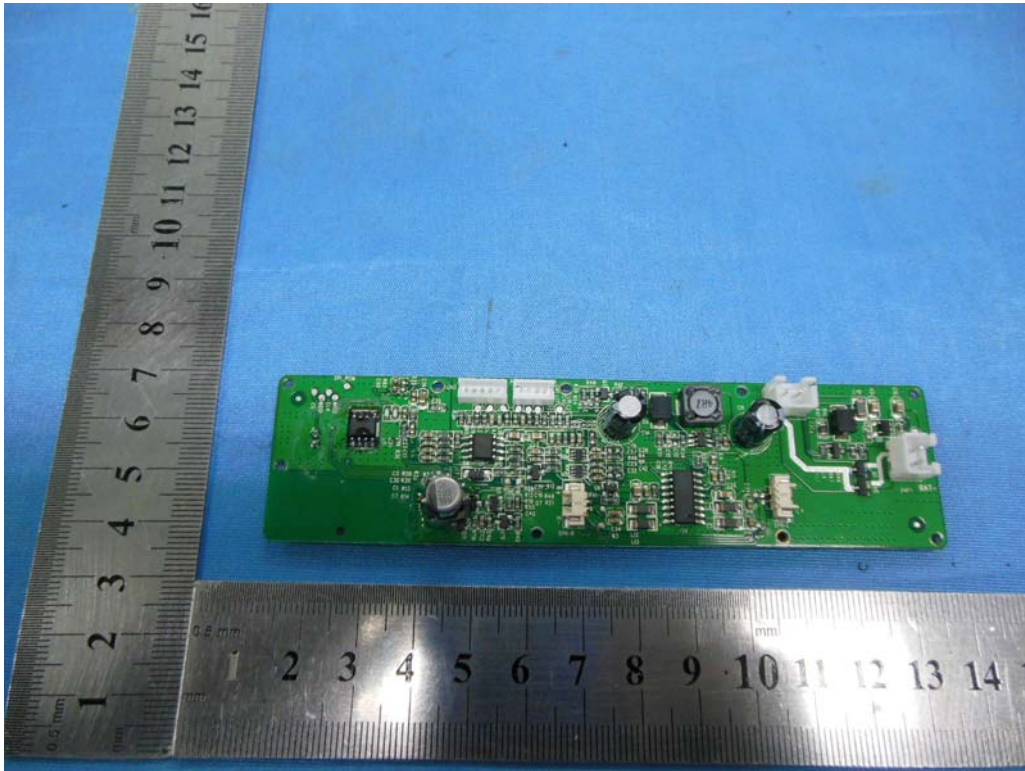
EUT –Battery 1 View

EUT –Battery 2 View

EUT –Battery 3 View